


NOMA®

OUTDOOR FLOODLIGHT KIT

Instruction Manual
For outdoor use
Retain carton for storage purposes

model no. 052-4015-8 / 052-4019-0 / 052-4016-6 / 052-4020-4 / 052-4017-4 | contact us: 1-866-827-4985

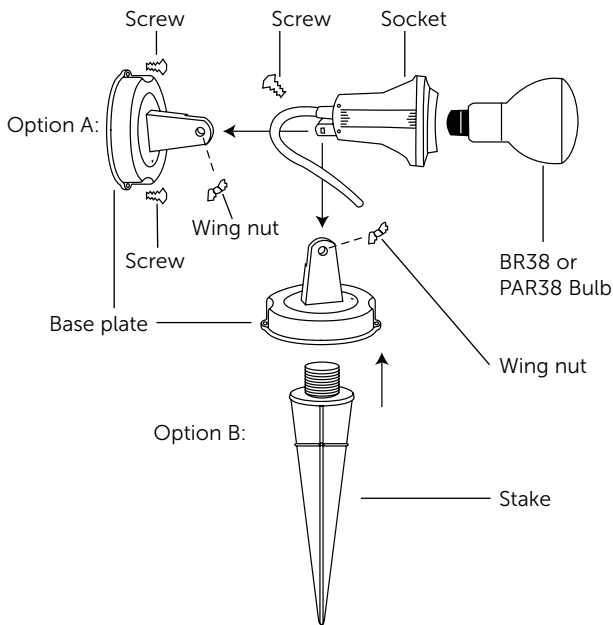

IMPORTANT: Please read this manual carefully before assembly and save it for reference.

ASSEMBLY:

High impact fixture resists weather and wear. Optional stake for lawn use.

- 1) Option A - Mounting: Attach the base plate to the socket using the wing nut and screw. Mount to a wall, floor, or ceiling with screws or nails through the holes in the base plate. Set light to desired angle and direction. Secure its position by tightening the wing nut.

Option B - Lawn use: Attach the base plate to the socket using the wing nut and screw. Screw the stake into the base plate. Fully insert the stake into the ground until you've reached the indicator line. Set light to desired angle and direction. Secure its position by tightening the wing nut.

- 2) Plug into outlet or electrical extension cord.

⚠ CAUTION RISK OF FIRE:

USE 150 WATT OR SMALLER 120 VOLT, TYPE BR38 OR PAR38 BULB.

IMPORTANT: PLEASE ENSURE THE BULB USED WITH THIS FIXTURE IS **WET RATED**. BULBS WITH DAMP OR DRY ONLY RATINGS MAY CAUSE THE LAMP TO FAIL AND/OR GET PERMANENTLY DAMAGED.

Use care when plugging in or handling lamp or cord as you would with any outdoor electrical equipment. When installing or replacing the floodlight, be sure the gasket is properly in place for a safe weatherproof installation.

⚠ CAUTION: IMPORTANT SAFETY INSTRUCTIONS

This portable lamp has a **POLARIZED** plug (one blade is wider than the other) as a feature to reduce the risk of electric shock. This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Never use with an extension cord unless the plug can be fully inserted. Do not alter the plug. Do not attempt to defeat this safety feature.

When using outdoor use products, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and personal injury, including the following:

- Ground Fault Circuit Interrupter (GFCI) protection should be provided on the circuit(s) or outlet(s) to be used for the wet product. Receptacles are available with built-in GFCI protection and are used for this measure of safety.
- Use only with an extension cord for outdoor use, such as an extension cord of cord type SEW, SEOW, SEOOW, SOW, SOOW, STW, STOW, STOOW, SJEW, SJEOW, SJEOOW, SJW, SJOW, SJOOW, SJTW, SJTOW, or SJTOOW.


This Noma® product carries a one (1) year warranty against defects in workmanship and materials. Noma Canada agrees to replace a defective product, within the stated warranty period, when returned to the place of purchase with proof of purchase. This product is not guaranteed against wear or breakage due to misuse and/or abuse.

MADE IN CHINA
Imported by Noma Canada
Toronto, Canada M4S 2B8

Caution

Warning

Warranty

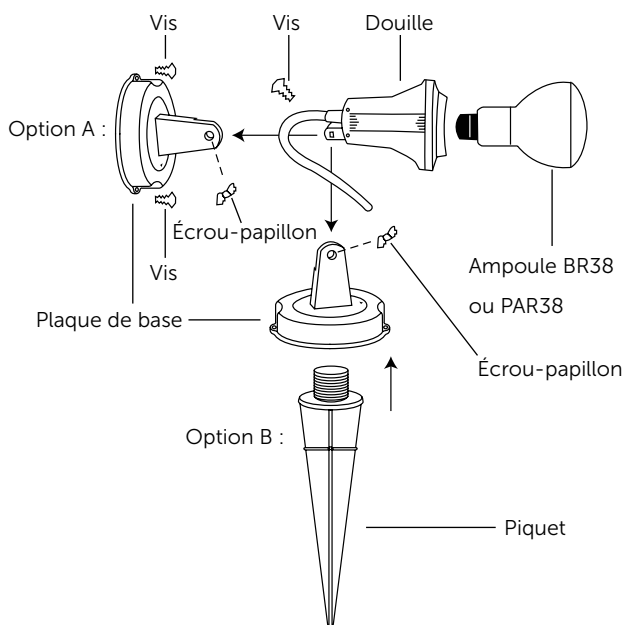

IMPORTANT : Veuillez lire attentivement ce manuel avant l'assemblage et conservez-le pour consultation ultérieure.

CONSIGNES D'ASSEMBLAGE

Le luminaire à fort impact résiste aux intempéries et à l'usure. Utilisation facultative du piquet.

1) Option A - Montage: Fixer la plaque de base à la douille à l'aide de l'écrou papillon et de la vis. Monter sur un mur ou fixer au plancher ou le plafond avec des vis ou des clous à travers les trous de la plaque de base. Régler la lumière à l'angle et à la direction souhaités. Sécuriser sa position en serrant l'écrou papillon fermement.

Option B – Pour pelouse: Fixer la plaque de base à la douille à l'aide de l'écrou papillon et de la vis. Visser le piquet dans la plaque de base. Insérer complètement le piquet dans le sol jusqu'à ce que vous ayez atteint la ligne indicatrice. Régler la lumière à l'angle et à la direction souhaités. Sécuriser sa position en serrant l'écrou papillon fermement.

2) Brancher à une prise ou une extension électrique.

⚠ MISE EN GARDE : RISQUE D'INCENDIE

UTILISEZ UNE AMPOULE 150 WATTS OU MOINS, BR38 OU PAR38 120 VOLT.

IMPORTANT : VEUILLEZ VOUS ASSURER QUE L'AMPOULE UTILISÉE AVEC CE LUMINAIRE EST **CLASSÉE POUR LES EMPLACEMENTS MOUILLÉS**. LES AMPOULES AVEC UNE CLASSIFICATION HUMIDE OU SÈCHE SEULEMENT PEUVENT CAUSER UNE DÉFAILLANCE DE LA LAMPE ET/OU ÊTRE ENDOMMAGÉES DE FAÇON PERMANENTE.

Prenez des précautions lorsque vous branchez ou manipulez une lampe ou un cordon, comme vous le feriez pour tout autre appareil électrique d'usage extérieur. Lorsque vous installez ou remplacez un projecteur, assurez-vous que la garniture d'étanchéité est bien en place afin que l'installation soit étanche et sécuritaire.

⚠ MISE EN GARDE : CONSIGNES DE SÉCURITÉ IMPORTANTES

Ce luminaire est muni d'une fiche **POLARISÉE** (une lame est plus large que l'autre). Ce dispositif de sécurité diminue le risque d'électrocution puisque la fiche ne s'insère dans la prise que dans un sens. Si la fiche ne peut être insérée à fond dans la prise, inversez-la. Si la fiche ne s'insère toujours pas au complet, consultez un électricien qualifié. N'utilisez jamais cet appareil avec une rallonge si la fiche ne peut être insérée à fond. Ne modifiez la fiche en aucune façon.

Afin de réduire le risque d'incendie, d'électrocution ou de blessure, des précautions de sécurité élémentaires doivent être observées lors de l'utilisation d'appareils destinés à un usage extérieur, incluant les consignes suivantes :

- Les prises ou circuits où vous envisagez de brancher un luminaire utilisé dans des endroits humides doivent être protégés par un disjoncteur de fuite à la terre (DFT). Vous pouvez vous procurer des prises avec DFT intégré comme dispositif de sécurité.
- N'utilisez que des rallonges destinées à un usage extérieur, notamment les modèles avec cordon de type SEW, SEOW, SEOOW, SOW, SOOW, STW, STOW, STOOW, SJEW, SJEOW, SJEOWW, SJW, SJOW, SJOOW, SJTW, SJTOW, ou SJTOOW.

Cet article Noma^{MD} est doté d'une garantie d'un (1) an contre les défauts de fabrication et de matériau(x). Noma Canada consent à remplacer l'article défectueux sans frais, pendant la période de la garantie, lorsqu'il est retourné, accompagné de la preuve d'achat, à l'endroit de l'achat. Exclusion : usure ou bris causés par un usage abusif ou inapproprié.