



HIGH ELEVATION FOIL TAPE KIT KIT PN 2200356

Before you begin, read these instructions and check to be sure all parts and tools are accounted for.

Please retain these installation instructions for future reference and parts ordering information.


The contents of this kit include:

<u>Qty.</u>	<u>Part Description</u>	<u>Part No.</u>
3	Foil tape	5810405
1	Instruction	9911909

IMPORTANT: Perform all items correctly and completely.

INSTALLATION INSTRUCTIONS

1. Using the foil provided, cut and fit the foil to cover the shaded portion of the drawing. Make certain the front RH side of the belly pan is completely covered as any openings are going to be susceptible to melting/deforming.
2. Open the two RH holes on the front brace as shown.

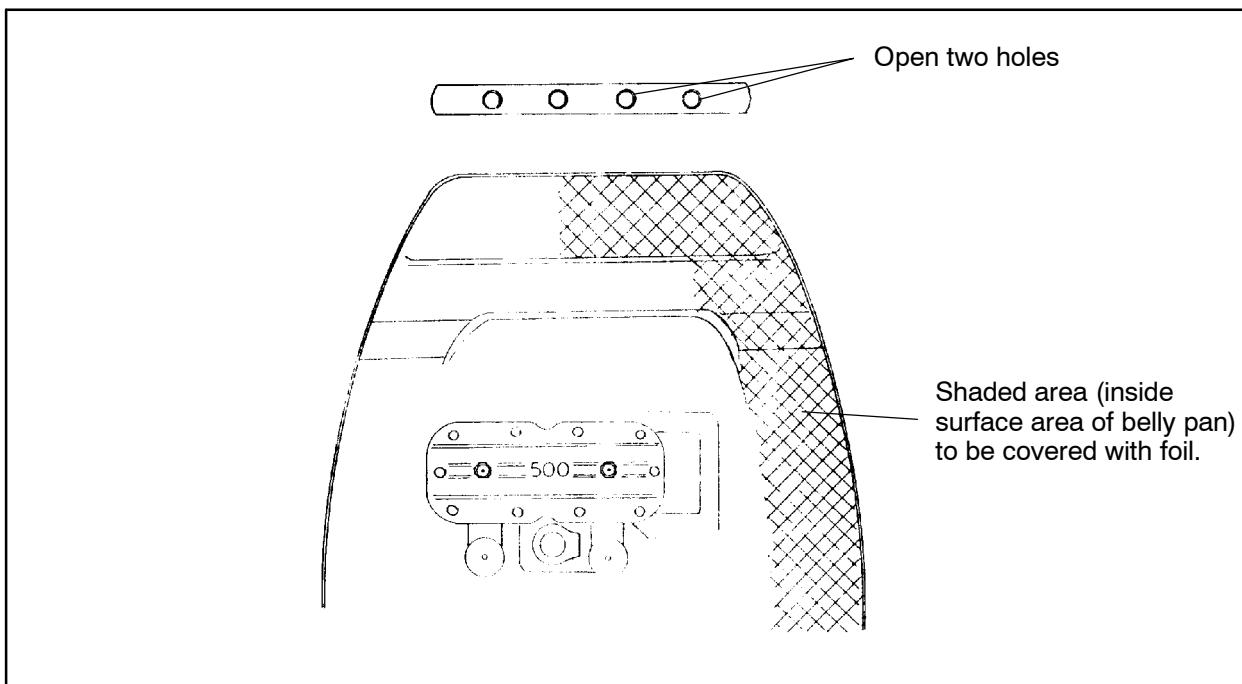

PN 9911909 Rev 01 6/00

Printed in U.S.A.