


27310G – TRAILER SPARE TIRE CARRIER

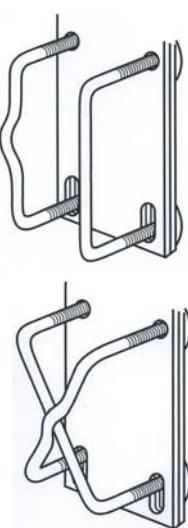

Short U-Bolts

For 2" wide x 3" deep, cross bolts
For 2" wide x 4" deep, parallel bolts

Long U-Bolts

For 3" wide x 3" deep, cross bolts
For 3" wide x 4" deep, parallel bolts

MOUNTING INSTRUCTIONS:

1. U-BOLT SELECTION
 - a. FOR 2" WIDE FRAME OR LESS, USE SHORT U-BOLTS.
 - b. FOR 3" WIDE FRAME USE LONG U-BOLTS.
 - c. FOR 3" TALL FRAME OR LESS, CROSS THE U-BOLTS.
 - d. FOR 4" TALL FRAME INSTALL THE U-BOLTS PARALLEL.
2. CHOOSE A STONG LOCATION ON THE TRAILER WITH GOOD SPARE TIRE CLEARANCE, INSTALL THE U-BOLTS WASHERS AND NUTS AND FASTEN THE CARRIER IN PLACE.
3. INSERT THE LUG BOLTS THEN PUSH THE "PUSH-NUTS" OVER THE THREADS TO LOCK THE BOLTS IN PLACE ONTO THE CARRIER. (USE A 3/4" WRENCH OR 3/4" DEEP SOCKET TO PUSH DIRECTLY ON THE PUSH-NUTS)
4. MOUNT THE SPARE AND TIGHTEN THE LUG NUTS.

NOTE, THIS SPARE TIRE CARRIER FITS MOST 4 OR 5 LUG, 12", 13", 14" OR 15" SPARE TIRE WHEELS DESIGNED FOR TRAILER USE. RARELY, TRAILERS USE WHEELS DESIGNED FOR CARS AND TRUCKS THAT HAVE MANY DIFFERENT BOLT PATTERNS AND THESE MAY NOT FIT ON THIS CARRIER.

PARTS INCLUDED

1---U-bolt, 7/16" x 4-1/8" x 3-1/4"	15264	2---1-1/2"-20 x 1-3/4" Carriage bolt	11100
1---U-bolt, 7/16" x 4-1/8" x 3-1/4", formed	15265	2---1-1/2" Push nut	10802
1---U-bolt, 7/16" x 4-1/8" x 4-1/4"	15256	2---1-1/2"-20 lug nut	11051
1---U-bolt, 7/16" x 4-1/8" x 4-1/4", formed	15263	1---Carrier body	27311G
4---7/16" Flat washer	10961		
4---7/16" Nylon locknut	10811		