


NOBELA 3-HEAD POST LIGHT

model no. 052-4506-0

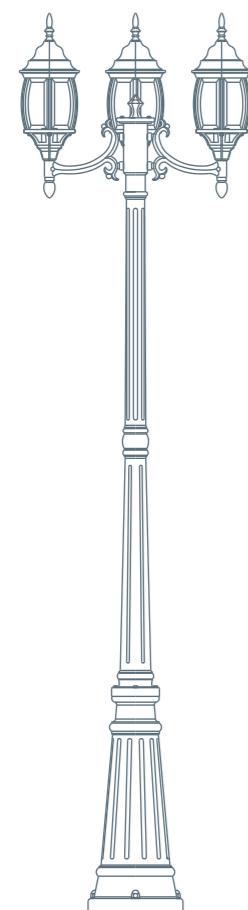

IMPORTANT: Please read this manual carefully before assembling this product and save it for reference.

Instruction Manual

model no. 052-4506-0

Table of Contents

Table of Contents	2
Parts List	3
Assembly	4
Warranty	6

1


2

IMPORTANT: RETAIN FOR FUTURE REFERENCE, AND READ CAREFULLY.

model no. 052-4506-0


Step 1 - requires N, P

Install iron hooks (N) into the A tripod (P), then embed the component in the ground level with concrete. Note: The threaded nipple must protrude outward 1 5/8" (41 mm).

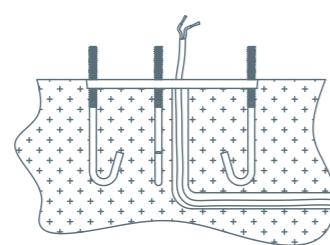


Step 2 - requires B, D, G, H

Remove centre pillar (G) on top of the screws and decorative cover. Successively install the decorative components (H) into centre pillar (G) and secure them with washers (D) and nuts (B).

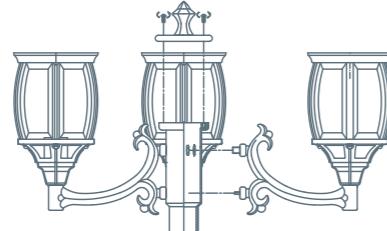


Step 3 - requires E, G, O

Pull out the wires from the centre pillar (G). Place the electric wire (E) through the centre pillar (G), and strip 3/4" (19 mm) of insulation from wire ends. Twist stripped ends together with pliers (not included), black to black (power) and white to white (neutral). Tape wire connectors (O) and wires together with electrical tape (not included) and carefully tuck wires back into the centre pillar (G). Install the decorative cover into centre pillar (G) and secure with screws.

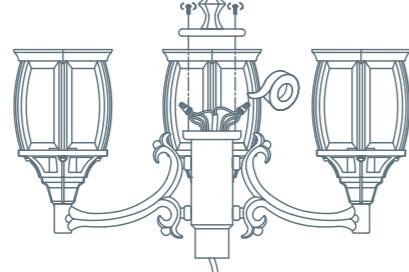


Step 4 - requires A, B, C, D, F, H, L

Install light bulbs (not included). Use three 60 W bulbs. Install finials (A) on top of the covers (C), and secure with washers (D) and nuts (B). Place covers (C) onto the decorative components (H) and secure with screws (L). Then, secure the knobs (F) into decorative components (H).

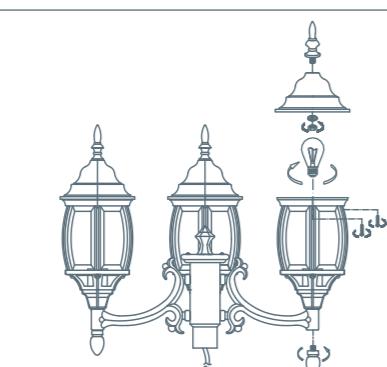

4

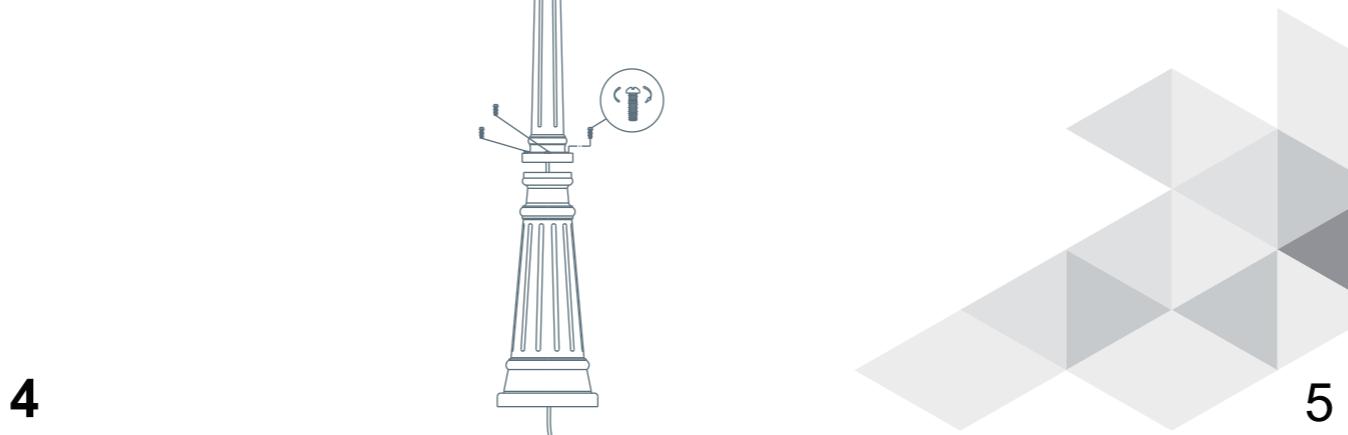

5

NOMA



Assembly

Step 6 - requires E, G, I, J

Pass through the electric wire (E) into top of decorative pillar (I) and middle of decorative pillar (J). Secure the top of decorative pillar (I) into centre pillar (G), then secure the middle of decorative pillar (J) into bottom of decorative pillar (I).

Step 6 - requires E, K, M

Pass through the electric wire (E) into bottom of decorative pillar (K) and secure with screws (M).

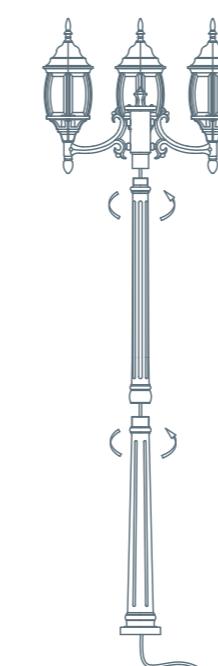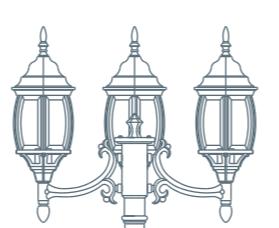


6

NOMA

Assembly

Step 7 - requires O, P, Q

Strip 3/4" (19 mm) of insulation from wire ends. Twist stripped ends together with pliers (not included), black to black (power) and white to white (neutral). Tape wire connectors (O) and wires together with electrical tape (not included). Place the lighting components into the A tripod (P) and secure with big cap nuts (Q).

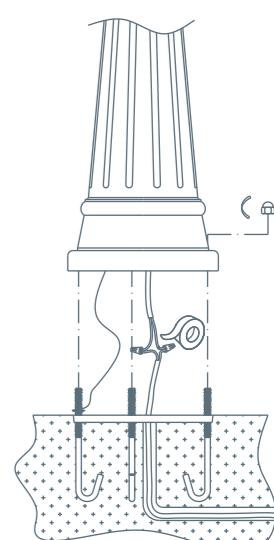


This product carries a one (1) year warranty against defects in workmanship and materials. Noma Canada agrees to replace a defective product, within the stated warranty period, when returned to the place of purchase with proof of purchase. This product is not guaranteed against wear or breakage due to misuse and/or abuse.

Made in China
Imported by
Noma Canada
Toronto, Canada M4S 2B8

Warranty

Parts List

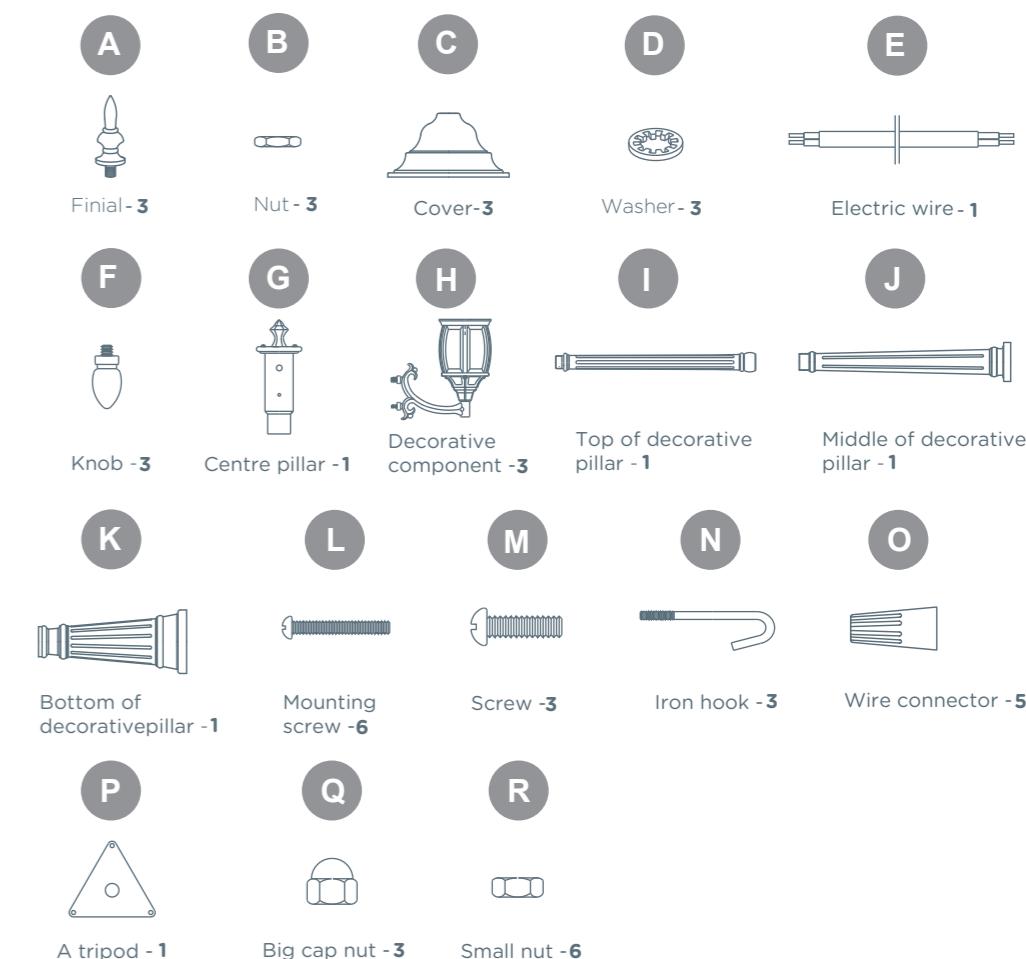

Assembly

6

LAMPADAIRE À 3 LUMIÈRES NOBELA

N° de modèle : 052-4506-0



IMPORTANT : Veuillez lire attentivement ce guide d'utilisation avant d'assembler ce produit et conservez-le aux fins de consultation ultérieure.

Guide d'utilisation

TABLE DES MATIÈRES

TABLE DES MATIÈRES	2
Liste des pièces	3
Assemblage	4
Garantie	6

IMPORTANT : CONSERVEZ CE GUIDE AUX FINS DE CONSULTATION ULTÉRIEURE, ET LISEZ-LE ATTENTIVEMENT.

1


2

Assemblage

N° de modèle : 052-4506-0


Étape 1 - nécessite N, P

Installez les crochets de fer (N) dans le trépied A (P), puis implantez celui-ci dans le sol avec du béton.
Remarque : Le raccord fileté doit faire saillie de 1 5/8 po (41 mm).

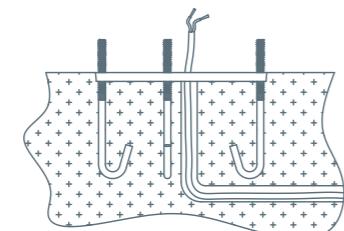


Étape 2 - nécessite B, D, G, H

Enlevez les vis et le couvercle décoratif du poteau central (G). Installez successivement les éléments décoratifs (H) dans le poteau central (G) et fixez-les à l'aide des rondelles (D) et des écrous (B).

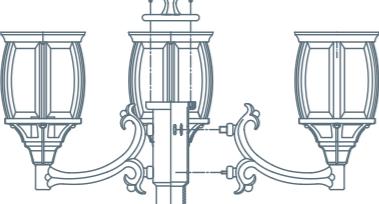


Étape 3 - nécessite E, G, O

Retirez les fils du poteau central (G). Faites passer le fil électrique (E) dans le poteau central (G), et dénudez 3/4 (19 mm) d'isolation des bouts des fils. Tordez ensemble les bouts dénudés à l'aide d'une pince (non comprise), noir avec noir (alimentation), blanc avec blanc (neutre). Fixez ensemble les capuchons de connexion (O) et les fils à l'aide du ruban isolant (non compris) et remettez soigneusement ceux-ci dans le poteau central (G). Installez le couvercle décoratif dans le poteau central (G) et fixez-le à l'aide des écrous.

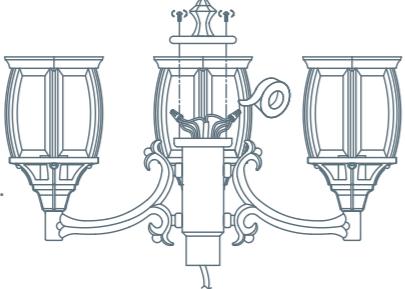

Étape 4 - nécessite A, B, C, D, F, H, L

Installez les ampoules (non comprises). Utilisez trois ampoules de 60 W. Installez les faîteaux (A) sur les couvercles (C), puis fixez-les à l'aide des rondelles (D) et des écrous (B). Placez les couvercles (C) sur les éléments décoratifs (H) et fixez-les à l'aide des écrous (L). Fixez ensuite les faîteaux (F) dans les éléments décoratifs (H).

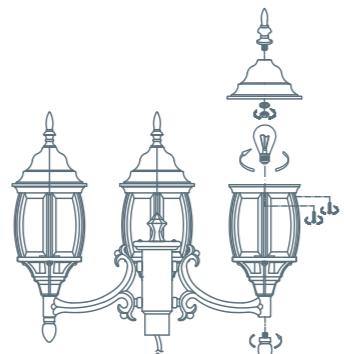

4



Garantie

Ce produit comprend une garantie d'un (1) an contre les défauts de fabrication et de matériaux. Noma Canada consent à remplacer l'article défectueux lorsqu'il est retourné à l'endroit de l'achat, accompagné de la preuve d'achat, au cours de la période de garantie convenue. Ce produit n'est pas garanti contre l'usure ou le bris causés par un usage abusif ou inapproprié.


Fabriqué en Chine
Importé par
Noma Canada
Toronto, Canada M4S 2B8

Assemblage

NOMA[®]


Étape 5 - nécessite E, G, I, J

Faites passer le fil électrique (E) dans les parties supérieure (I) et intermédiaire (J) du poteau décoratif. Fixez la partie supérieure (I) dans le poteau central (G), puis fixez la partie intermédiaire (J) dans la partie inférieure (K) du poteau décoratif.

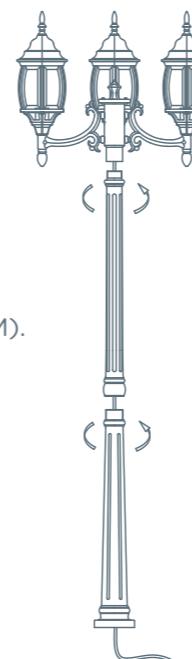

Étape 6 - nécessite E, K, M


Faites passer le fil électrique (E) dans la partie inférieure du poteau décoratif (K) et fixez avec des écrous (M).

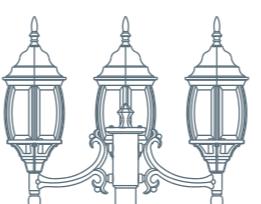

NOMA[®]

Étape 7 - nécessite O, P, Q


Dénudez 3/4 po (19 mm) d'isolation des bouts des fils. Tordez ensemble les bouts dénudés avec une pince (non comprise), noir avec noir (alimentation) et blanc avec blanc (neutre). Fixez ensemble les capuchons de connexion (O) et les fils à l'aide du ruban isolant (non compris). Placez les composants d'éclairage dans le trépied A (P) et fixez à l'aide des grands écrous borgnes (Q).

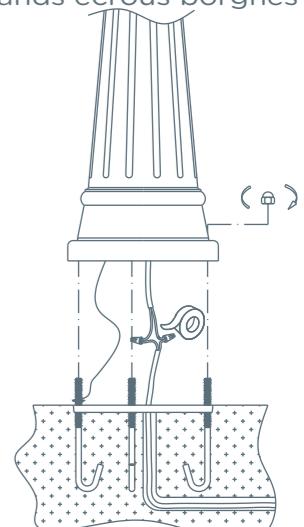

Garantie

Assemblage

Liste des pièces

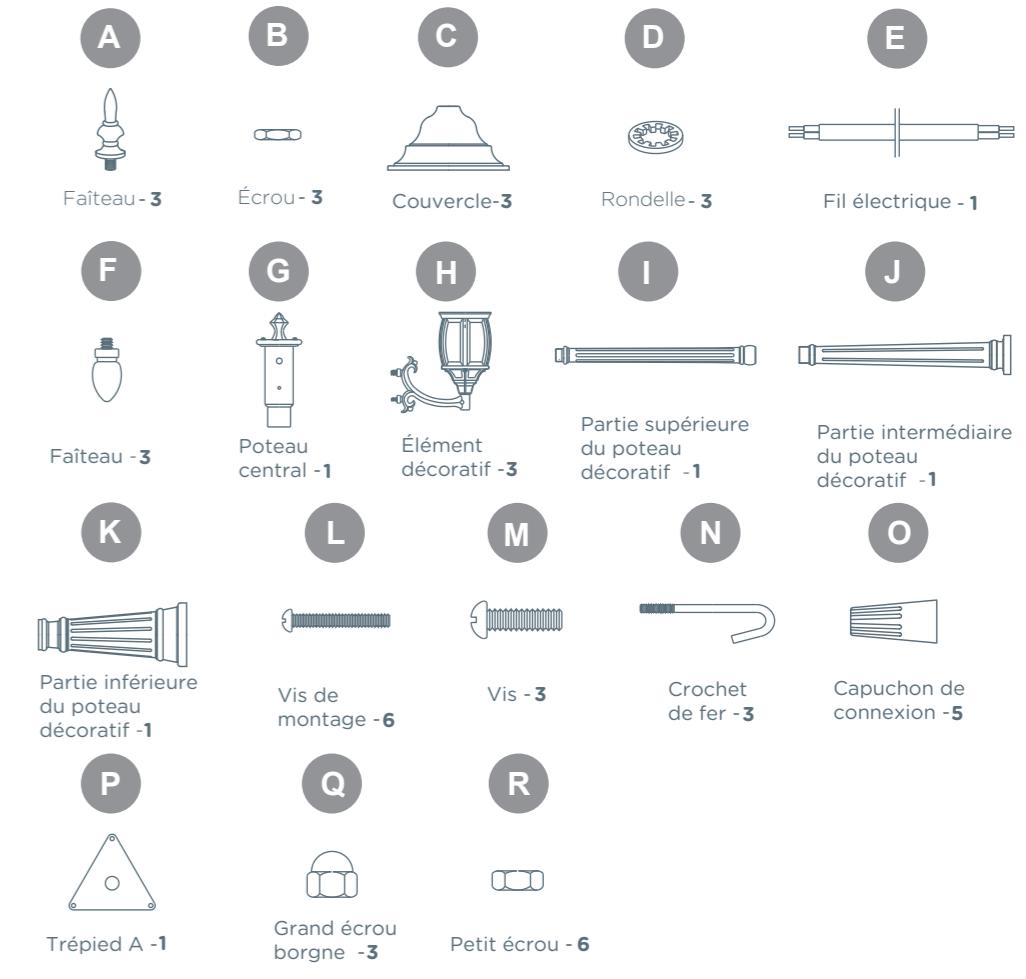

3

6