

COMPRESSION TEE – 5/8" OD TUBE ALL 3 ENDS**RACCORD DE COMPRESSION EN T – TUBE DIA. EXT. DE 5/8 PO AUX TROIS EXTRÉMITÉS****Instructions:**


Read instructions carefully before installation.

1. Slide compression nut and sleeve onto tube.
2. Insert tubing squarely into fitting until it bottoms out. Be sure tube enters straight. If tilted, the nut will cock the sleeve and prevent a good seal.
3. Tighten nut over sleeve onto fitting, wrench tight.

Instructions :

Lisez attentivement les instructions avant l'installation.

1. Glissez l'écrou de compression et le manchon sur le tube.
2. Insérer le tube directement dans le raccord jusqu'à ce qu'il touche le fond. Le tube doit y pénétrer bien droit. S'il est incliné, le scellement ne sera pas étanche.
3. Serrez l'écrou par-dessus le manchon sur le raccord à l'aide d'une clé.

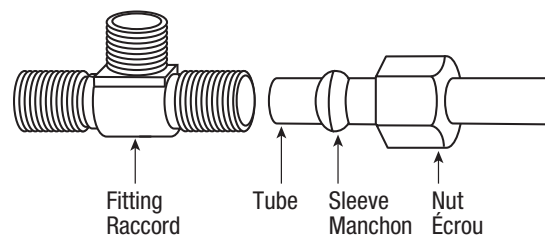

Manufacturer assumes no responsibility for any failure due to improper installation or use of product(s).
Le fabricant n'acceptera aucune responsabilité en cas de problème résultant d'un défaut d'installation ou d'utilisation du ou des produits.

PlumbShop® Customer Support / Service à la clientèle :

350 South Edgeware Road, St. Thomas, Ontario, N5P 4L1 | 1-888-278-6340 | www.plumbshop.ca

© 2020 Masco Canada Limited