


model no. 068-7093-6


**Mastercraft™**

TOOLS REQUIRED

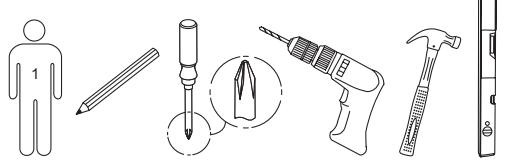


## Multi-purpose Utility Rack


A

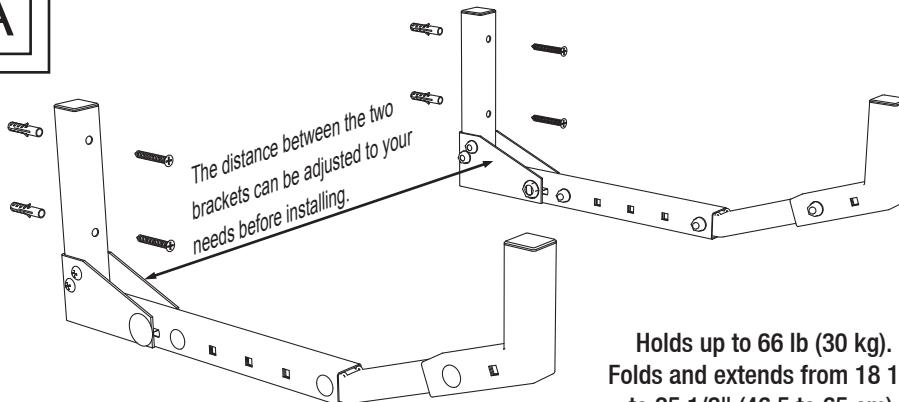

B

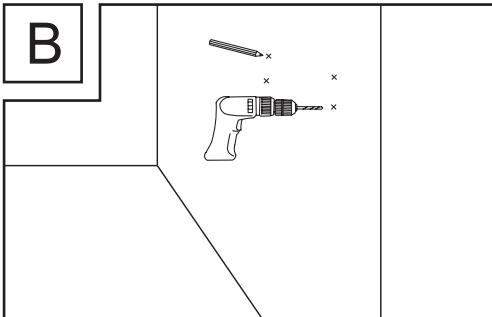

C

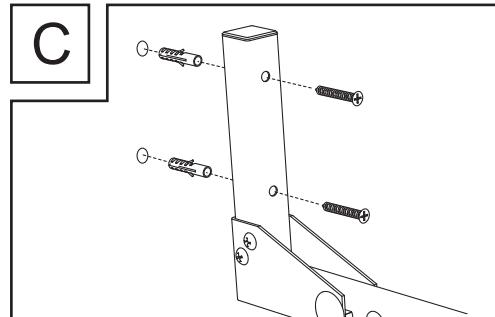

### IMPORTANT:


Please read these instructions carefully before installing and save them for reference.

## Instructions


### ASSEMBLY INSTRUCTIONS

model no. 068-7093-6


D

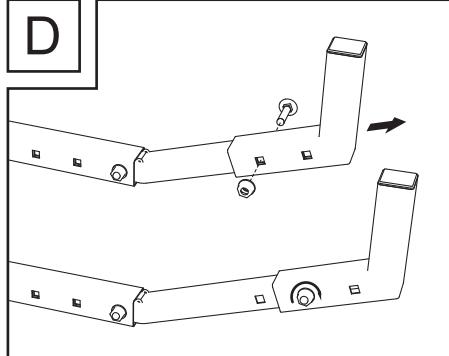

E

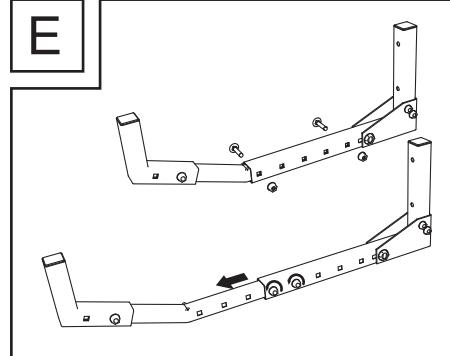

F

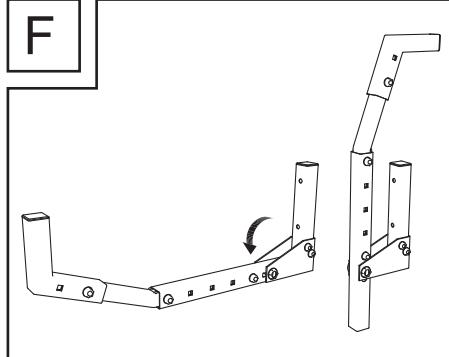

**Note:** Please ensure that the wall can support the weight capacity before installation.

- Ensure wall is free from water pipes, gas pipes and electrical wiring before drilling holes.
- The mounting height and width depends on what item you want to hold on this rack.
- Mark the positions of the holes with the help of a spirit level in the desired place on the wall.
- Drill the holes with an appropriate drill bit and insert the dowels into the drilled holes if a brick wall. Dowels are not required if installing on a timber stud wall.
- Hold the rack in position at the desired place on the wall and screw the screws through the screw holes into the dowels.
- The screws can be placed in different positions on the arms to extend the arms (see Fig. E).
- Fold the rack up against the wall when not in use.

**WARRANTY** This Mastercraft product carries a one-year warranty against defects in workmanship and materials. This product is not guaranteed against wear, breakage or misuse.



### SAVE THESE INSTRUCTIONS

Read all instructions and follow them with use of this product.


Made in China

Imported by  
Mastercraft Canada Toronto,  
Canada M4S 2B8

N° de modèle : 068-7093-6


**Mastercraft™**

**OUTILS REQUIS**

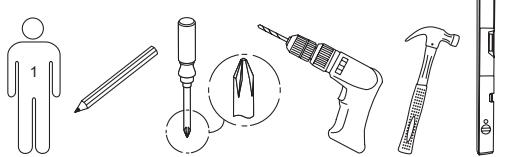


## Support utilitaire à usages multiples


**A**

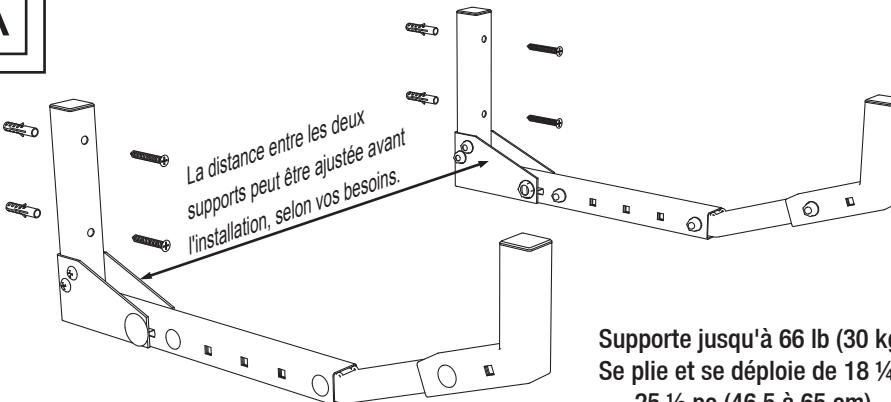

**B**

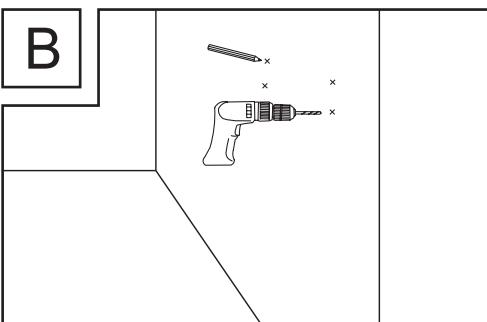

**C**

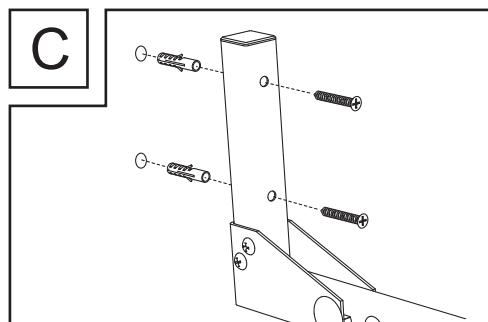


### IMPORTANT :

Veuillez lire attentivement ce guide d'utilisation avant l'installation et conservez-le pour pouvoir le consulter ultérieurement.


## Instructions

### INSTRUCTIONS D'ASSEMBLAGE


**D**

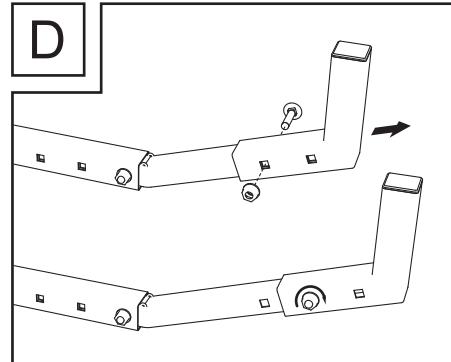

**E**

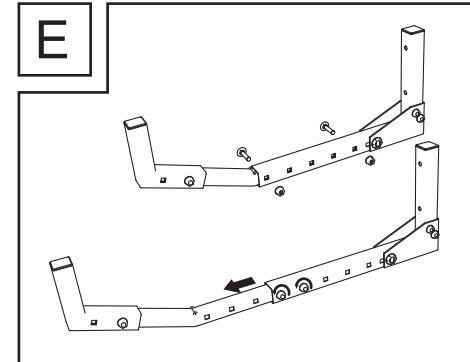

**F**

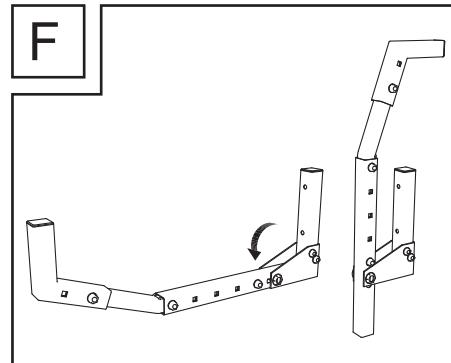

- À l'aide d'un niveau à bulle, marquez les emplacements des trous à l'endroit désiré sur le mur.
- Percez les trous avec une mèche de perceuse appropriée et insérez les goujons dans les trous percés s'il s'agit d'un mur de briques. Les goujons ne sont pas nécessaires si vous installez l'article sur un mur à colombages en bois.
- Maintenez le porte-vélo en place à l'endroit désiré du mur, insérez les vis dans les trous prévus à cet effet et vissez-les dans les goujons.
- Les vis peuvent être placées dans différentes positions sur les bras pour allonger ces derniers (voir figure E).
- Repliez le support contre le mur lorsque vous ne l'utilisez pas.

**GARANTIE** Cet article Mastercraft comprend une garantie de un (1) an contre les défauts de fabrication et de matériau(x). Exclusion : usure ou bris causés par un usage abusif ou inapproprié.



### CONSERVEZ CES INSTRUCTIONS

Lisez et respectez toutes les instructions lorsque vous utilisez cet article.

Fabriqué en Chine

Importé par  
Mastercraft Canada Toronto,  
Canada M4S 2B8