


CANVAS^{TM/MC}

HAMPTON COLLECTION

Day Bed and Swing

MODEL NO. 088-1934-4

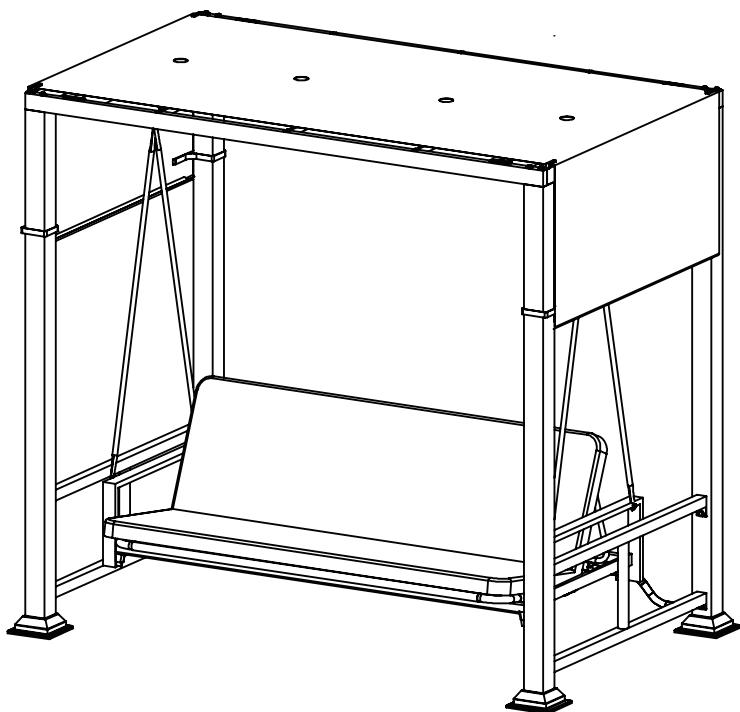

Attention:

Canopy is for temporary use as sunshade only.
Please remove when not in use.

ASSEMBLY INSTRUCTIONS

Toll-free: 1-888-670-6684

IMPORTANT: Please read this manual carefully before beginning assembly of this product.
Keep this manual for future reference.

TABLE OF CONTENTS	2
Important Safety Instructions	2
Parts List	3
Assembly	5
Cleaning and Maintenance	12
Warranty	12

• SET UP YOUR FURNITURE PROPERLY

Ensure that all parts are assembled properly and fully tightened as per the instructions.

When placing in the desired location, ensure that all legs are resting on the same surface.









You may adjust the legs levellers as required to ensure that the item stands in a rigid position.

• EXAMINE YOUR FURNITURE

Examine occasionally to ensure that there are no loose parts. If loose parts are found, they must be retightened fully before additional use.

• Do not completely tighten bolts and nuts until indicated in assembly step.

IMPORTANT: Retain for future reference, and read carefully.

1	Leg post - 4	
2	Side panel - 2	
3	Top crossbar - 2	
4	Top crossbar - 2	
5	Top crossbar - 2	
6	Canopy crossbar - 3	
7	Rear crossbar - 1	
8	Left arm - 1	
9	Right arm - 1	
10	Front support bar - 1	
11	Rear support bar - 1	
12	Seat and back - 1	
13	Hanging bar - 4	
14	Canopy - 1	
15	Canopy side bar - 2	
16	Cushion - 1	
17	Post base - 4	
18	Base plate - 4	
A	M6*12 bolt - 8 + 1 spare	
B	M6*15 bolt - 4	
C	M8*20 bolt - 20 + 2 spares	
D	M8*75 bolt - 8 + 1 spare	
E	M8*80 bolt - 2	
F	M6 metal washer - 4	
G	M8 metal washer - 30	
H	M8 nut - 2	
I	Plastic washer - 2	
J	"S" hook - 2	
K	Open hex wrench - 1	
L	Allen wrench - 1	
M	M8 Hex wrench - 1	
N	Lawn stake - 16	



Let us help you!

DO NOT RETURN YOUR PRODUCT TO THE STORE. CALL US FIRST!

1-888-670-6684

If you have questions regarding your product, require warranty assistance, or have damaged or missing parts, please call our customer service toll-free helpline. Contact us for assistance; we're here to help.

IMPORTANT: Please read and understand this manual before any assembly. Before beginning assembly of product, make sure all parts are present. Compare parts with packaging contents list. If any part is missing, or if you have any questions, contact the service centre at 1-888-670-6684 (toll free).

Place all parts from the box in a cleared area and position them on the floor in front of you. Remove all packing materials and place them back into the box. Do not dispose of the packing materials until assembly is complete. Read each step carefully before beginning any assembly and make sure you understand each step. If you are missing a part, please call our toll-free number for assistance: 1-888-670-6684 between 9:00 am to 5:00 pm Eastern standard time Monday through Friday.

Needed for assembly:



3 people

Step 1


Requires 1, 17, 18, A.

Insert two bolts A through the base plate 18 and post base 17, and secure into the leg post 1. Tighten completely. Repeat procedure for the remaining three legs.

Note: The side of base plate with sunk hole should be towards outside and the bolt should be level with the base plate.



Not actual size.

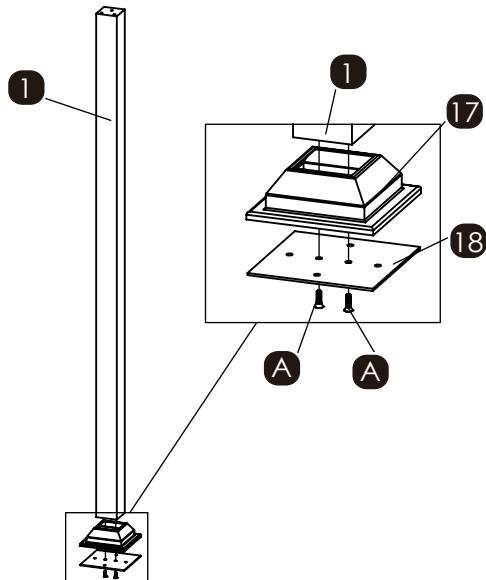


Step 2


Requires 1, 2, C, G.

Attach the side panel 2 to two legs 1 by inserting a bolt C through a metal washer G, through the hole of the side panel 2, and secure into the leg 1. Repeat procedure for the other side. Do not tighten completely.

Repeat procedure for the other side panel.




Not actual size.

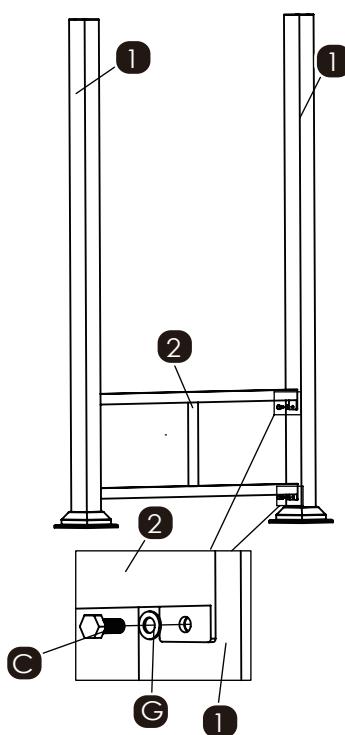

Step 3

Requires 1, 3, D, G.


Attach the top crossbar 3 to the leg 1. Insert a bolt D through a metal washer G, through the top crossbar 3 and secure into the leg post 1. Do not tighten completely. Repeat procedure for the remaining three legs. Note: The side with "inside" label should be towards inside for top crossbar 3.

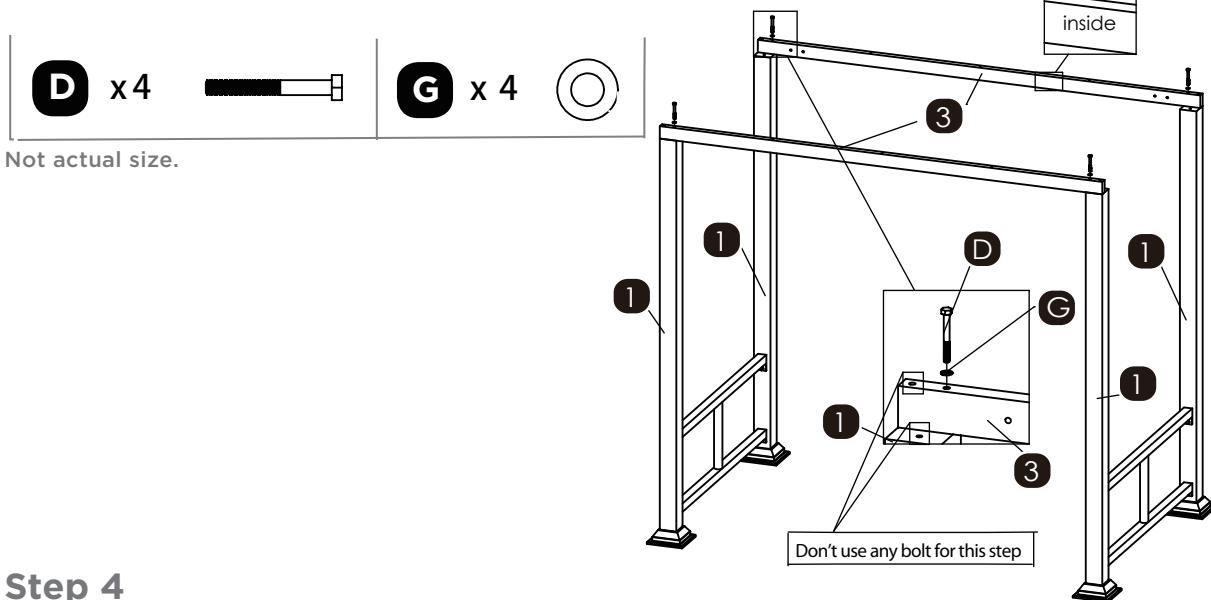

Step 4

Requires 1, 3, 4, C, D, G.

Attach the top crossbar 4 to assembled frame 1 & 3 & 4. First insert a bolt D through a metal washer G, through the top crossbar 4, through the top crossbar 3 and secure into the leg post 1. Second, insert a bolt C through a metal washer G, through the top crossbar 4 and secure into the leg post 1. Do not tighten completely. Repeat procedure for the remaining three legs.

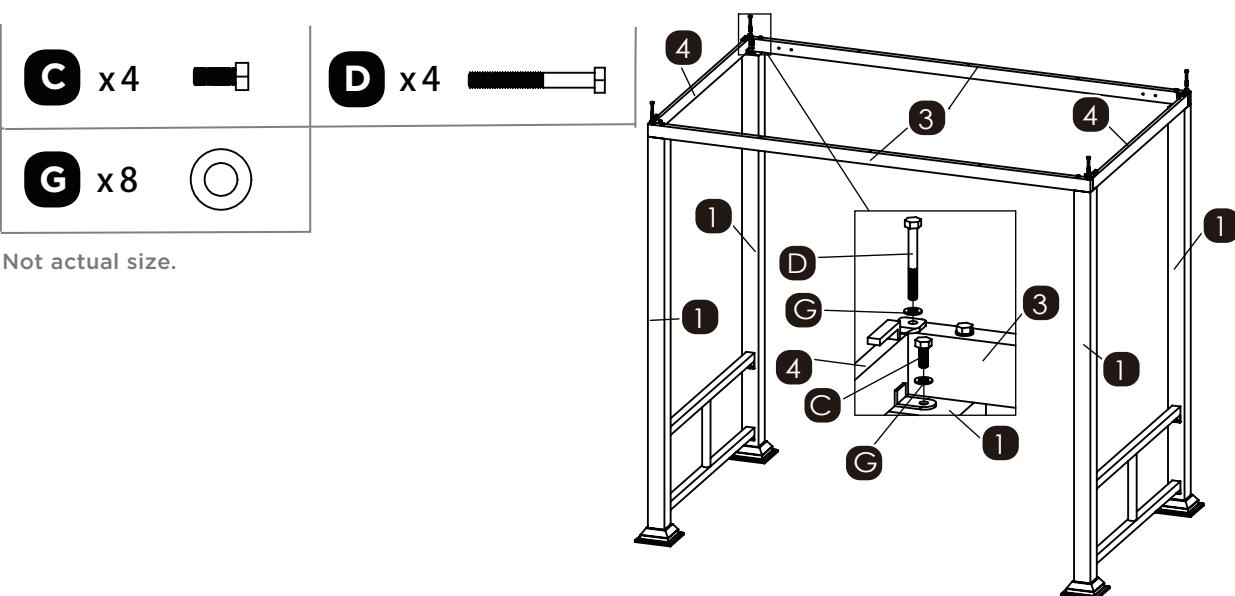


Step 5

Requires 3, 5, C, G.

Attach top crossbar 5 to the top crossbars 3. Insert a bolt C through a metal washer G, then through the bracket on the top crossbar 5, and secure into the top crossbar 3. Do not tighten completely. Repeat procedure for the other side and other top crossbar 5.




Not actual size.

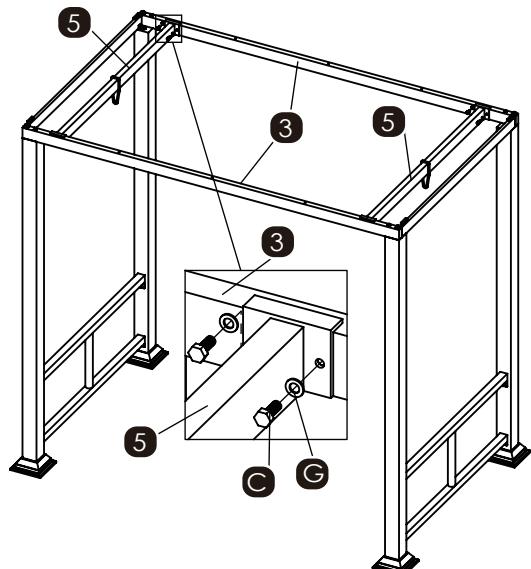

Step 6

Requires 3, 6.

Attach the canopy bar 6 to the top crossbar 3. Insert the canopy bar 6 into the holes on the top crossbar 3. Note: Two sides of the canopy crossbar insert into top crossbar at the same time. Repeat procedure for the other two canopy crossbars 6.

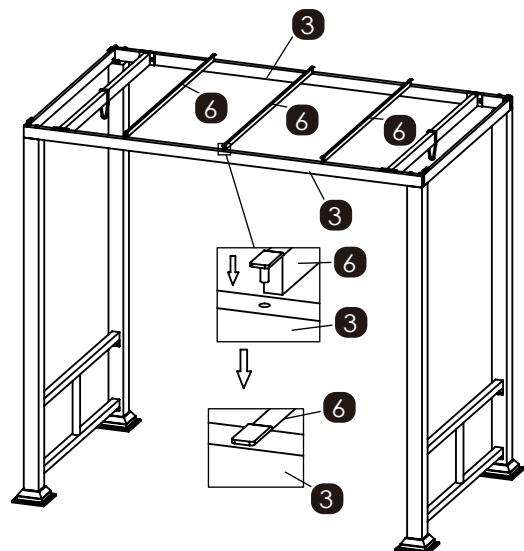


Step 7

Requires **2, 7, B, F, K, L, M**.


Place the rear crossbar **7** between the side panels **2**. Insert a bolt **B** through a metal washer **F**, through the rear crossbar **7**, and secure into the side panel **2**. Do not tighten completely. Repeat procedure for the other side.

Tighten all bolts from step 1 to step 7 by using the wrenches provided.

Note: The side with “inside” label and “U”shaped brackets should be towards inside for the rear crossbar **7**.

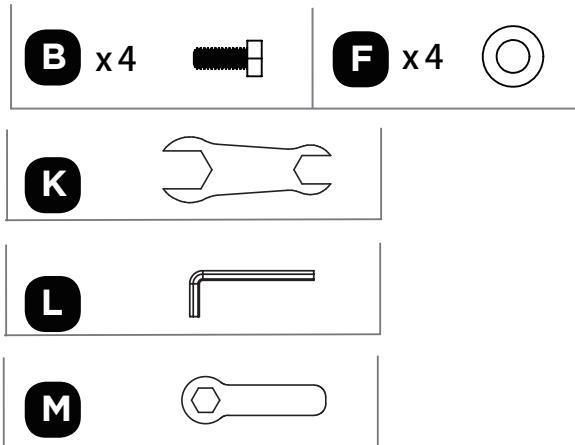


Not actual size.

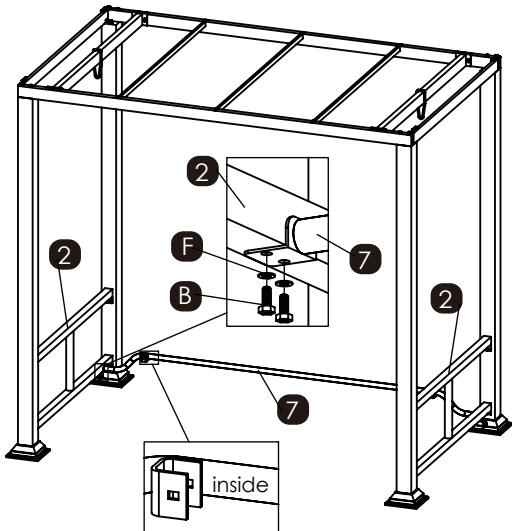

Step 8


Requires **8, 9, 10, 11**.

Lay out the right arm **9**, left arm **8**, front support bar **10** and rear support bar **11**. Make sure that the labels marked “FRONT” on the arms and support bars are all facing the front edge of the seat. Attach the seat support bars to the arms by pressing the tabs on the ends of the front support bar **10** and rear support bar **11**, down into the brackets on the arms. Make sure they are securely seated.

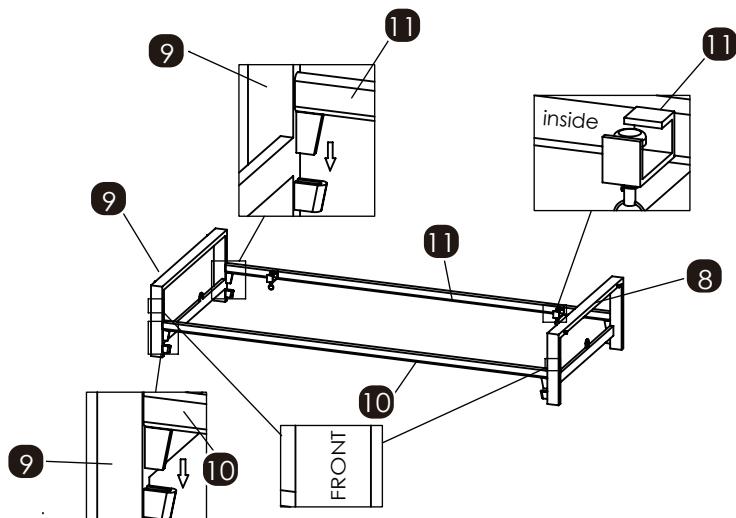


Step 9**Requires 8, 9, 12, E, G, H, I, K, M.**


Unfold the seat and back 12 and lay it on top of the assembled frame. Line up the holes. Insert a bolt E (from outside to inside) through the bracket of the arm, through a plastic washer I, through the side bar on the seat and back 12, through a metal washer G and secure with a nut H. Do not tighten completely. Repeat procedure for the other side. Then securely tighten all bolts and nuts for this step.

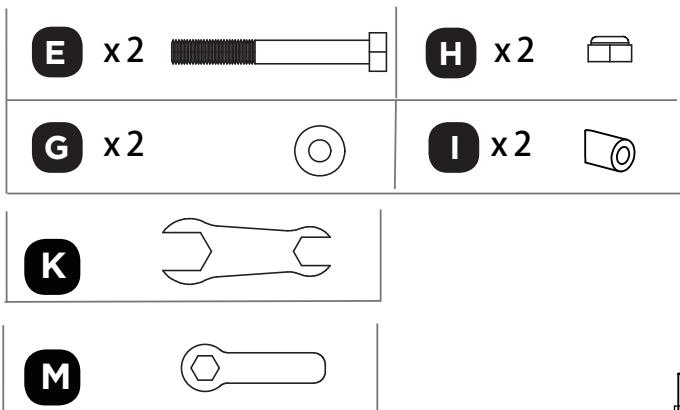

Not actual size.

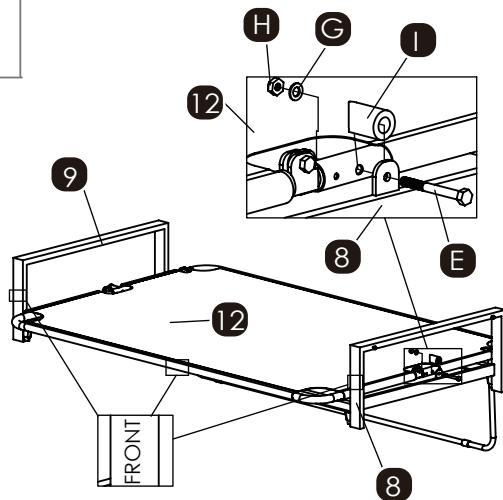**Step 10****Requires 11, 12.**

Put up the back and pull down the pin on the U-shaped bracket on the rear support bar 11 then slip the support tube on the back into the U-shaped bracket in place per drawing.

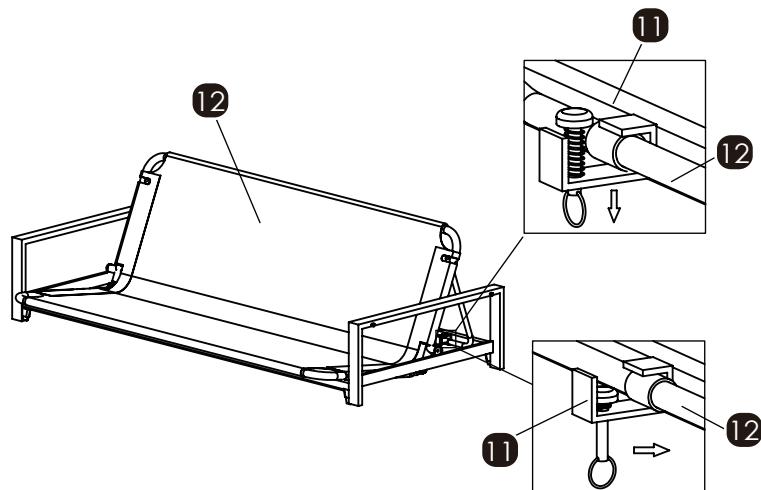

Step 11

Requires 5, 8, 9, 13, J, N.


First, set the hanging bars 13 into "S" hook. Note: the side with "TOP" label towards "S" hook. Then the other ends of hanging bars into the pin of the arms. Repeat procedure for the other remaining two hanging bars.

Second, hang the assembled body on the top crossbars 5.

Third, secure the lawn stack N into the ground. Repeat procedure for the other three post legs.



Not actual size.

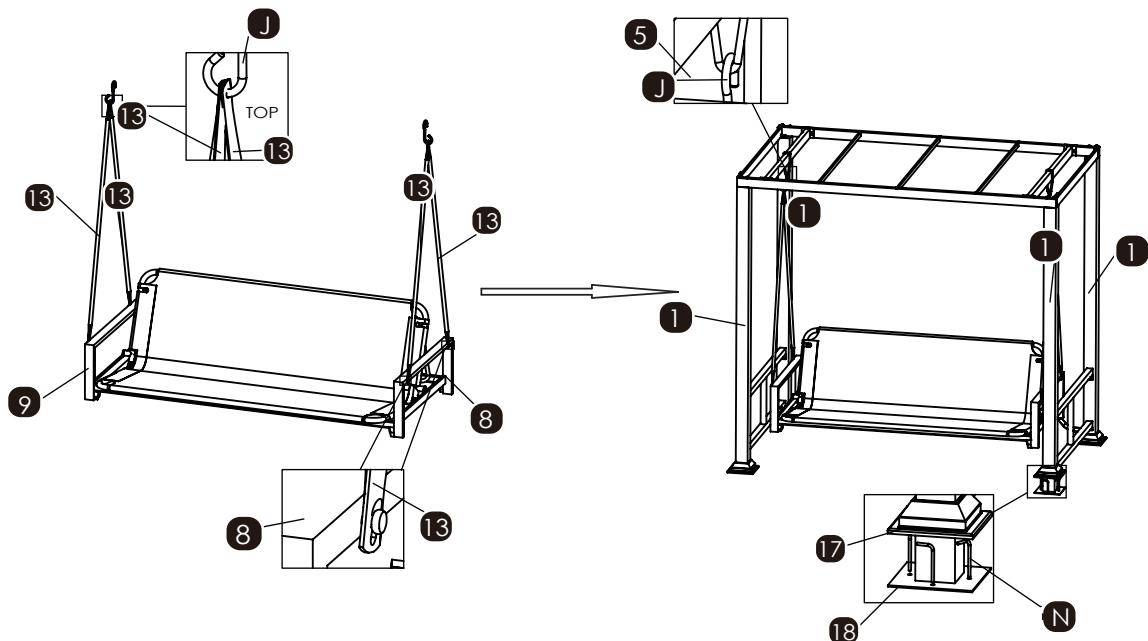


Step 12

Requires 4, 14, 16.

Place the canopy 14 and cushion 16 on the swing as per drawing.


Note: the canopy should place under the bracket.

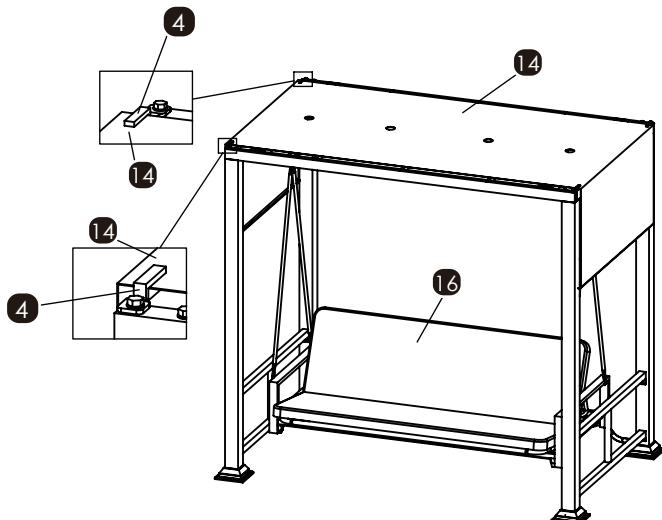

Step 13

Requires 1, 14, 15.

Insert the canopy side bar 15 into the canopy 14 as per drawing. Fasten the ties attached to the canopy 14 to each leg post 1.

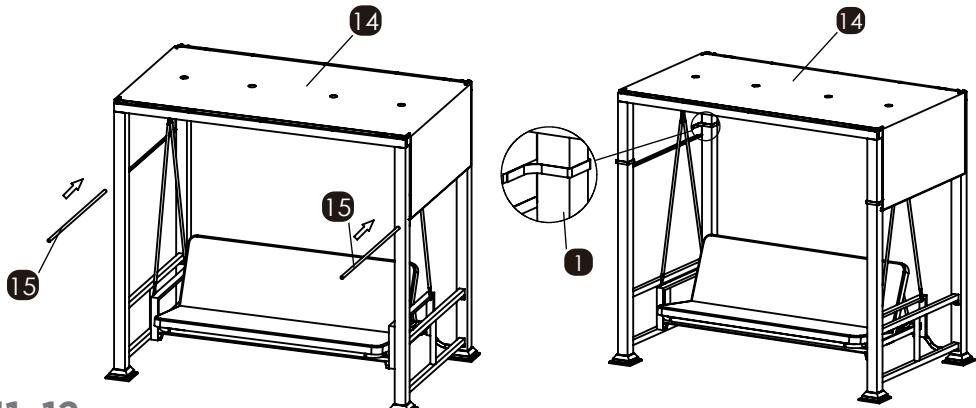


Step 14

Requires 7, 11, 12.

To convert the swing into a hanging bed, first push down the pin on rear support bar 11. Second take out the back support tube from U-shaped bracket on the rear support bar. Repeat procedure for the other side. Third, set the support tube on the back into the U-shaped bracket on the rear crossbar 7 per drawing. Repeat procedure for the other side.

When used as a bed, the seat assembly should be secured by these holders and not allowed to swing.

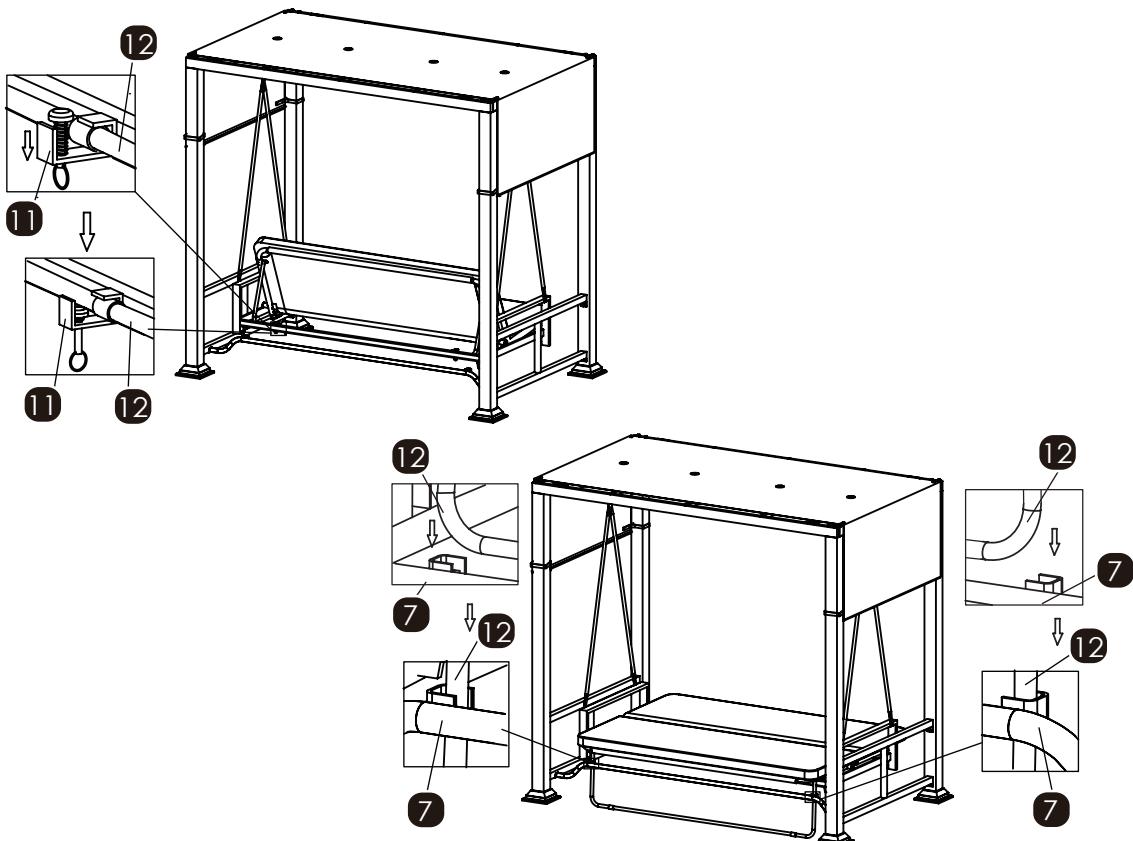

12 MODEL NO. 088-1934-4

- Though its powder-coated finish is rust-resistant, steel is prone to rust over time with exposure to the elements. In case of rust or scratches, lightly sand the affected area and apply touch-up paint. To maintain the finish, periodically apply wax with a soft cloth.
- Wash frames with a mild solution of soap and water; rinse thoroughly. Do not use bleach or solvents.
- **CARING FOR OUTDOOR FURNITURE WITH CUSHIONS:**
Wash frames and cushions with a mild solution of soap and water; rinse thoroughly. Dry frame completely and allow cushions to drip-dry. Do not use bleach or solvents.

WARRANTY

This CANVAS product carries a one (1) year warranty against defects in workmanship and materials. Trileaf Distribution agrees to replace the defective product free of charge within the stated warranty period, when returned by the original purchaser with proof of purchase. This product is not guaranteed against rust, wear or breakage due to misuse and/or abuse.

Made in China

Imported by

Trileaf Distribution Trifeuil Toronto, Canada M4S 2B8

