

Terrace Garden Box - #26009 (White) / #26010 (Grey)

Assembly Instructions

PARTS LIST

TP17 – End Panels (2 Pcs) TP9 – Corner Brackets (4 Pcs) TP15 – Liner (1 Pc)
TP18 – Side Panels (2 Pcs) TP14 – Bottom Panel (1 Pc) TP11 Snap Fasteners (16 Pcs)

IMPORTANT!

IF ANY PARTS ARE MISSING, PLEASE CALL 1-800-287-4821
DO NOT RETURN TO THE STORE PRIOR TO CONTACTING
NUVUE PRODUCTS CUSTOMER SERVICE.



TP17



TP18




TP14



TP9



TP11

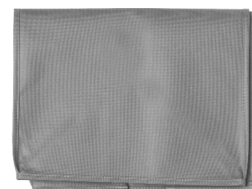

TP15

Step #1: Please carefully read your Terrace Garden Box instructions. Once complete, remove all parts from the box and match these to the Parts List. If you are missing a part, please contact **NuVue Products at 1-800-287-4821**.

Step #2: Please decide where the Terrace Garden Box will be located. Choose a level surface with the proper amount of sunlight for the plants that you plan to grow.

Step #3: Align one TP9 Corner Bracket to one TP18 Side Panel. The inside channel of the TP18 Side Panel should be at the bottom.

Insert the TP9 Corner Bracket into the TP18 Side Panel as shown in Fig. #1. The corner bracket should be kept level, with the plastic tabs inside of the TP18 Side Panel. When inserted, the two snap fastener holes on the tabs of the TP9 Corner Bracket should line up with the two holes in the TP18 Side Panel as shown in Fig. #2.

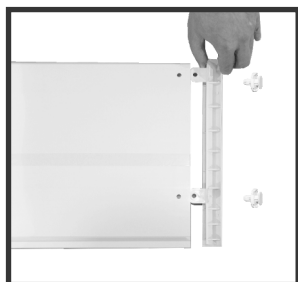


Fig. #1



Fig. #2

Step #4: While holding the TP9 Corner Bracket level and in place, insert one TP11 Snap Fastener into one of the two insertion holes. Once fully inserted into the hole, snap into place by carefully pushing down on the center of the TP11 Snap Fastener as shown in Fig. #3. Please do not push down on the snap fastener to lock into place until it is fully inserted into the hole.

Once complete, please repeat Step #4 for the other insertion hole.

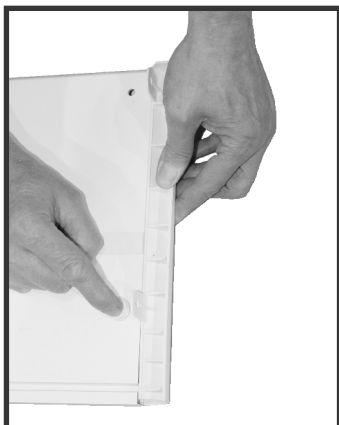


Fig. #3

Step #5: Align one TP17 End Panel at a 90° angle to the TP18 Side Panel that was prepared in Step #4 and insert the plastic tabs of the corner bracket into the TP17 End Panel. Make sure the holes of the TP9 corner bracket line up with the holes of the TP17 End Panel. Insert two more TP11 Snap Fasteners and lock into place to form one completed corner section of the Terrace Garden Box as shown in Fig. #4.

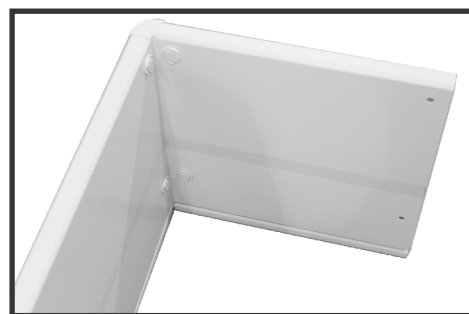


Fig. #4

Step #6: Repeat Step #4 and Step #5 with the second TP18 Side Panel and you will have one completed end and two sides as shown in Fig. #5.

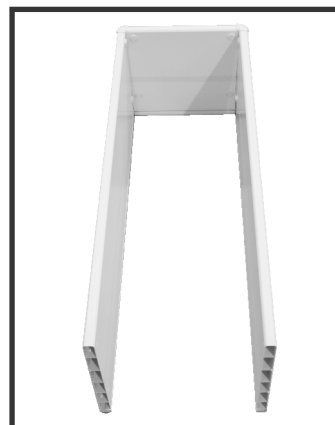


Fig. #5

Step #7: This step can be completed by one person, but the assistance of an additional person will make it easier.

Once both TP18 Side Panels are attached to one of the TP17 End Panels, please take the TP14 Bottom Panel and insert the bottom panel into the two channels on the side panels on the open end (See Fig #6). Please make sure that the bottom panel remains inserted into the channels of both side panels as you push the TP14 Bottom Panel into place. Carefully push the TP14 Bottom Panel until it butts directly against the inside wall of the assembled end panel (See Fig. #7).

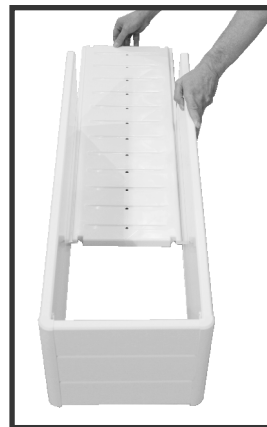


Fig. #6



Fig. #7

Step #8: Connect the final TP17 End Panel to the assembled TP18 Side Panels by repeating Steps #3 to #5 above. After completion, your Terrace Garden Box should appear as shown in Fig. #8.



Fig. #8

Step #9: Remove the TP15 liner from the polybag, unfold, and lay flat in the bottom of the garden box (See Fig. #9).

Remove the white top protective strip on one side panel of the Terrace Garden Box, exposing the adhesive film (See Fig. #10).

Starting in one corner, press the top edge of the TP15 Liner into the corner and against the adhesive film. Gently work your way along the side panel until the entire side of the TP15 Liner is applied to the TP18 side panel. The top of the liner should be at the same level or slightly above the top of the adhesive film (See Fig. #11).

Step #10: Repeat Step #9 for both end panels and the opposite side panel. The TP15 liner should now be applied to both sides and end panels, resting on the TP14 bottom panel (See Fig. #12).



Fig. #12

Step #11: The assembly of your Terrace Garden Box is complete (See Fig. #13).

You can now move your Terrace Garden Box into its location on a level surface with the proper amount of sunlight for the plants you plan to grow. Once in its location, the garden box can be filled with the appropriate amount of fresh garden soil (not included) and your garden can be planted.

Please note that the approximate volume of soil required to fill your terrace garden box is 2.5 cuft / 70 L.



Fig. #9

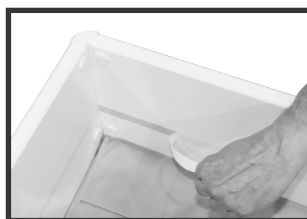


Fig. #10



Fig. #11



Fig. #13

