

Instructions d'assemblage




Avertissement ! Les bras du fauteuil ont été conçus pour améliorer votre expérience de jeu uniquement. Pour éviter de vous blesser, ne vous asseyez pas sur les bras. N'utilisez pas les bras pour vous LEVER du fauteuil, ou pour DÉPLACER ou SOULEVER le fauteuil.




AVERTISSEMENT
Risques d'écrasement
Conserver vos mains et vos doigts éloignés


A		1
B		1
C		1
D		2
E		1
F		1
G		4
H		4
I		6
J		6
K		6
L		1

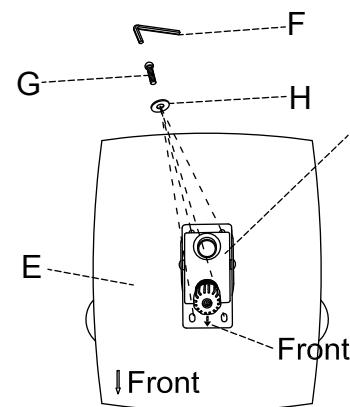


Etape 1: Mettez le fauteuil pour installer le mécanisme (C), Serrer la vis avec la clé Allen (F).

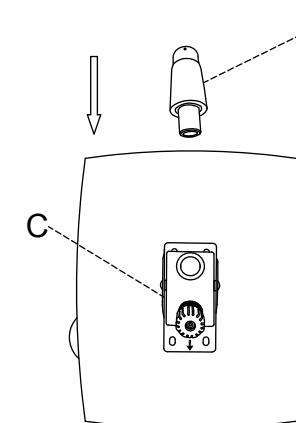

Etape 2: insérer le tube (B) pour le mécanisme (C) .

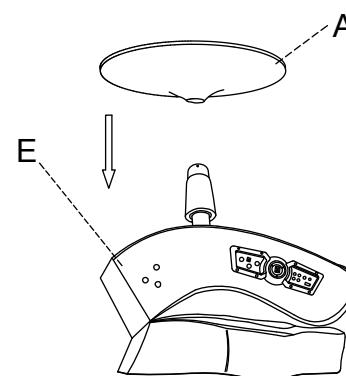


Etape 3: Placez le socle sur le tube, puis appuyez sur le piédestal de resserrer le tube.

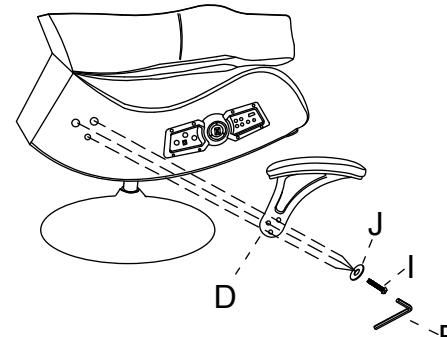


Etape 4:

Placez le bras sur le côté droit, placez ensuite la petite rondelle (J) entre le bras trou et la vis (I). Positionnez les 3 boulons dans les trous taraudés du bras, et fixez-les en les vissant.Serrer la vis avec la clé Allen(F).

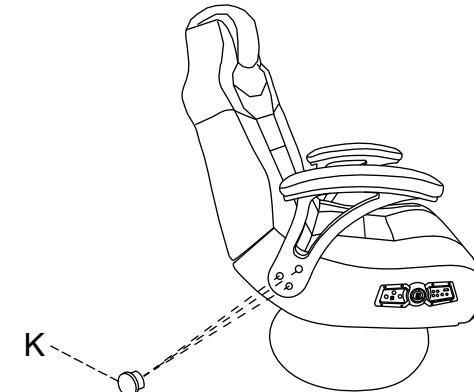

Etape 5: Placez les capuchons en plastique (K) à l'intérieur des trous des boulons. Appuyez dessus pour les enclencher fermement. Répétez les étapes 4 à 5 pour le bras gauche du fauteuil.

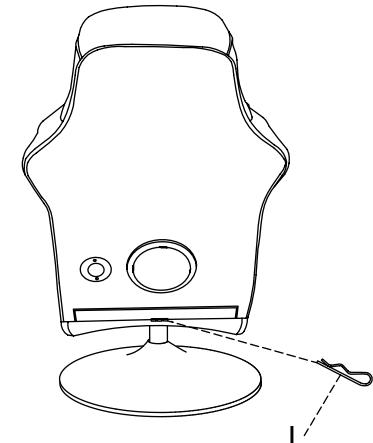

Etape 6: Insérez la goupille (L) dans la fermeture.

Assembly Instructions




Warning! Chair arms are for gaming support only.

To avoid damage or injury, do not sit on the arms. Do not use arms to EXIT from the chair or to MOVE or LIFT the chair.




WARNING
Crush Hazard
Keep hands and fingers away


A		1
B		1
C		1
D		2
E		1
F	M6	1
G	M8*25	4
H		4
I	M8*40	6
J		6
K		6
L		1

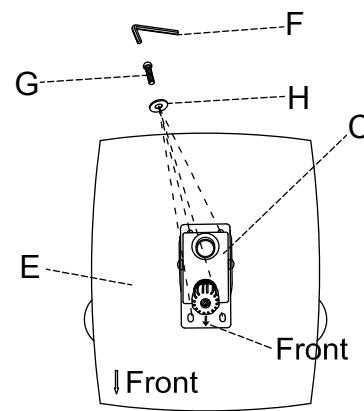


Step 1:
Turn the chair over to install the mechanism(C) .
Tighten the bolts with Allen wrench (F).

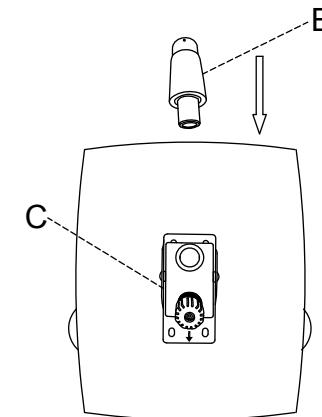


Step 2:
Insert the tube(B) to the mechanism(C).

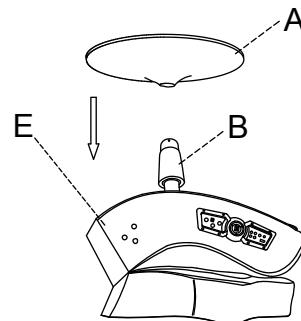


Step 3:
Place the pedestal onto the tube,then press the pedestal to tighten up the tube.

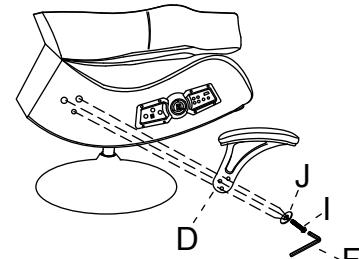

Step 4:
Attach the right arm to the chair using the illustration place the small washer(J) between the metal sleeve and the screw(I),use the supplied allen wrench(F) to tighten the bolts. The arms should be pivoted freely after assembling correctly.

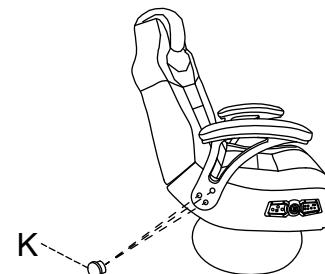

Step 5:
Push the plastic cap(K) into the bolts hole to finish the arm assembly for that side.
Repeat the above steps 4-5 for assembling the left arm of the chair.

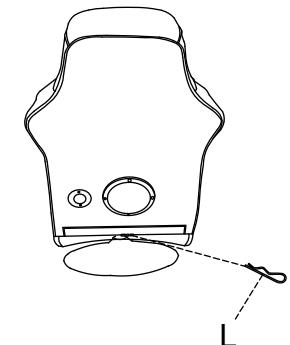

Step 6:
Insert pin(L) into closure.
Attach the Velcro flap