


CANVAS^{TM/MC}

OVERBROOK ENTRYWAY BENCH

PRODUCT NO. 168-0137-8

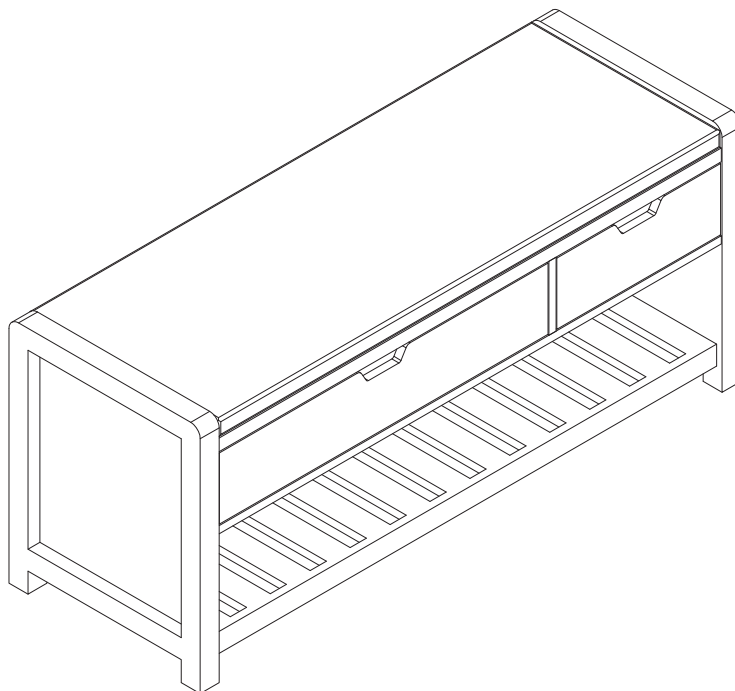

ASSEMBLY INSTRUCTIONS



HAVING TROUBLE?

TOLL-FREE:

1-888-670-6684

IMPORTANT: Please read this manual carefully before beginning assembly of this product. Keep this manual for future reference.

CANVAS™

INSPIRED BY CANADA



We believe in the power of décor and its ability to make up the fabric of your home.

That's why **CANVAS®** collections draw **inspiration from Canadians and the way they live.**

From on-trend furniture pieces to holiday décor and all your outdoor living essentials, **CANVAS®** makes it easy to refresh your space to reflect **your unique style and the way you live every day.**

We would love to hear from you and welcome your thoughtful feedback. Visit our website at **canadiantire.ca** to tell us about your experience, and share your photos with us using **#myCANVASstyle.**

Show us how you bring **CANVAS®** products to life. We can't wait to see!

TABLE OF CONTENTS


Parts List	4
Before You Begin Assembly	7
Step-by-step Guide	8
Technical Data	22
Caring for Your Item	23
Warranty	23




WARNING! TO REDUCE THE RISK OF SERIOUS INJURY, READ THE FOLLOWING SAFETY INSTRUCTIONS BEFORE ASSEMBLING AND USING THE PRODUCT.

- Please read and understand this entire manual before attempting to assemble, operate, or install the product.
- Follow all warning labels.
- Any assembly or maintenance of the product must be carried out by adults only.
- Some parts may contain sharp edges. Wear protective gloves if necessary.
- To prevent damage, place all parts on a level surface during assembly. Add a layer of protective surface if needed.
- Due to the nature of steel, surface oxidation (rusting) will occur if the protective coating is scratched. This is a natural process. To minimize this condition, it is recommended that care be taken when assembling and handling the product in order to prevent the paint from being scratched.


TOOLS REQUIRED

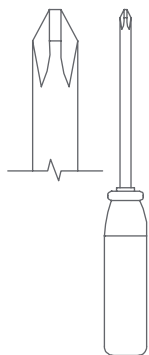

No. 2 Cross-head Screwdriver
Tip Shown Actual Size


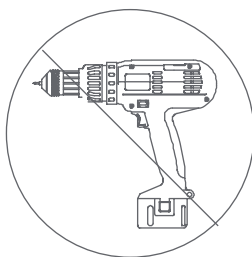

















NOTE: Do not over drill/
Be aware of over-drilling

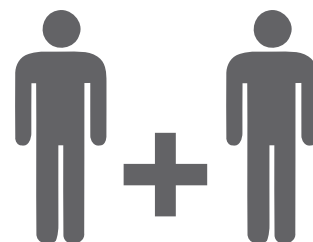


2 people

PARTS LIST






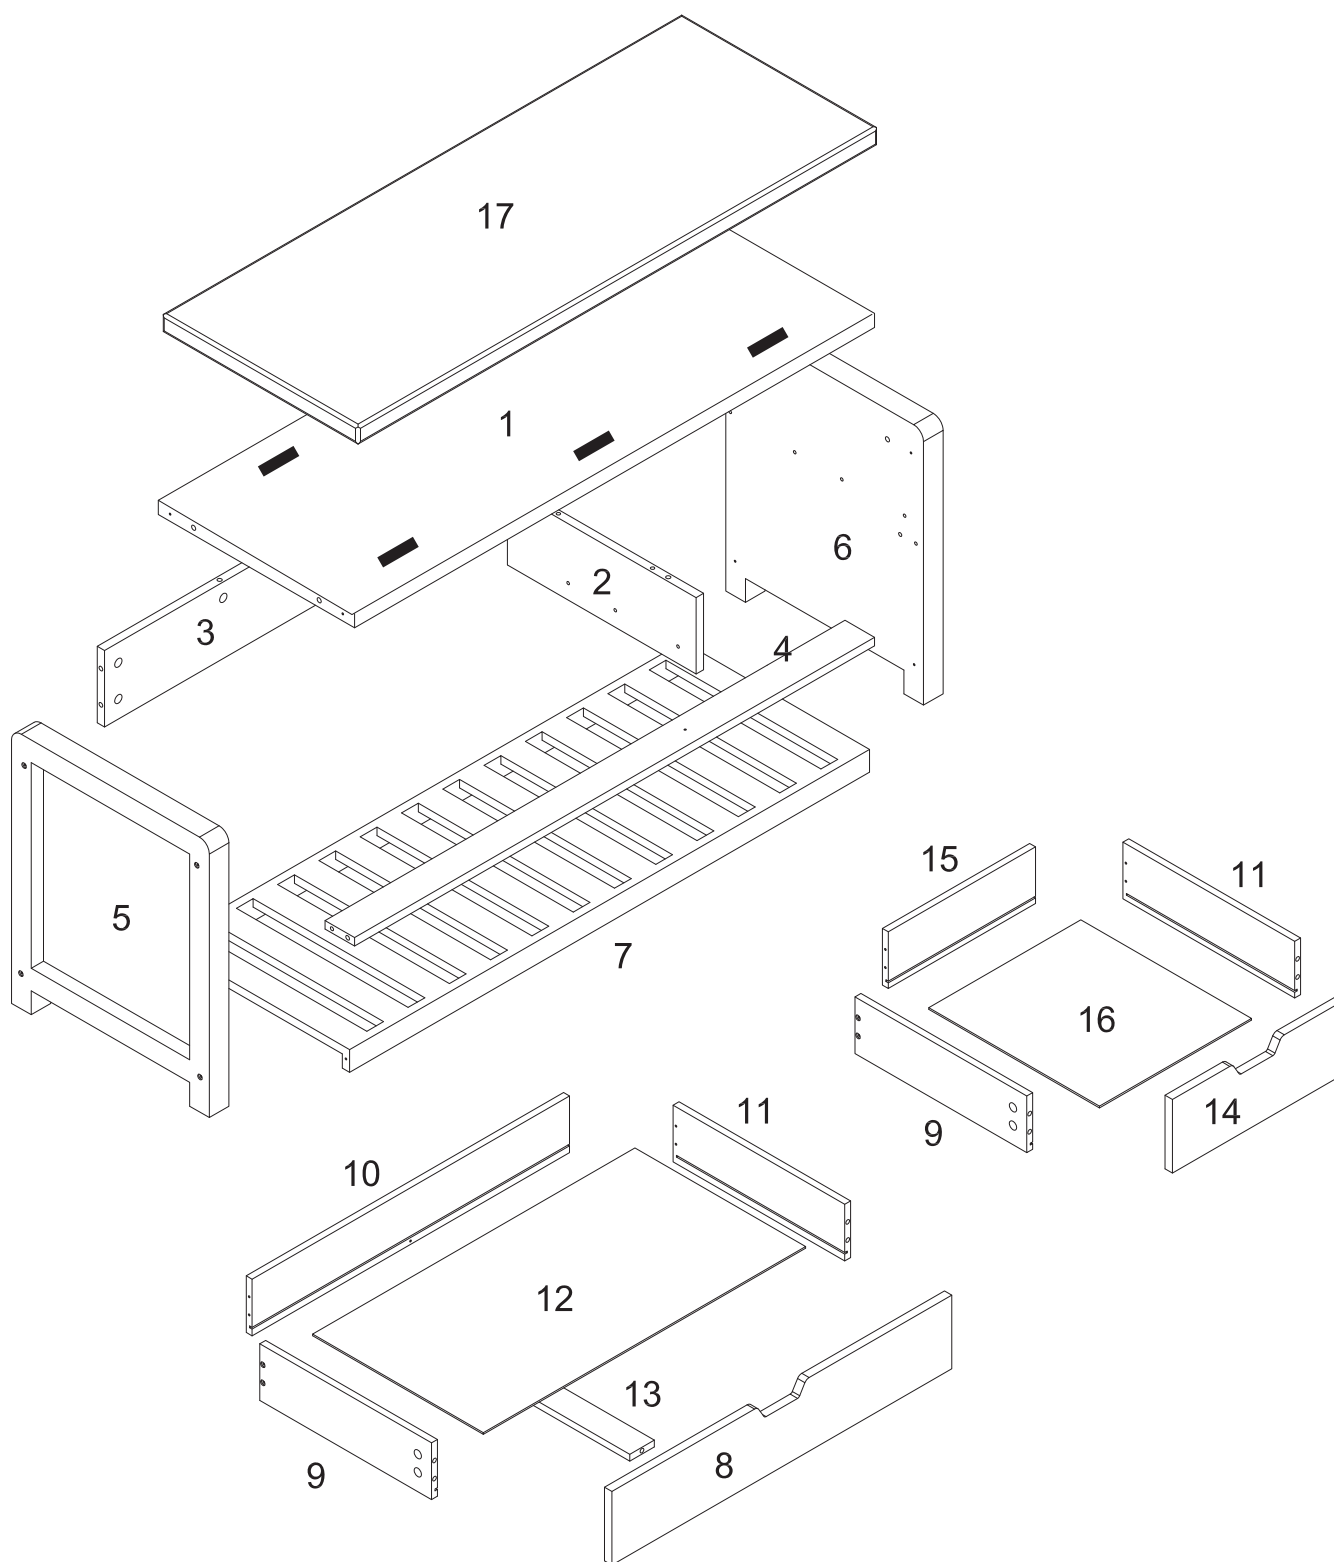










ITEM	DESCRIPTION	THUMBNAIL	QUANTITY
1	Bench top panel		1
2	Bench divider		1
3	Bench back		1
4	Drawer support		1
5	Left side panel		1
6	Right side panel		1
7	Shoe rack		1
8	Left drawer front		1
9	Drawer left		2
10	Left drawer back		1
11	Drawer right		2
12	Left drawer bottom		1
13	Left drawer bottom support		1
14	Right drawer front		1
15	Right drawer back		1
16	Right drawer bottom		1
17	Cushion		1

EXPLODED PARTS



Warning: Before assembly, please check all accessories in the hardware box, and ensure parts are not missing.

HARDWARE LIST

ITEM	DESCRIPTION	THUMBNAIL	QUANTITY
A	Cam bolt		20
B	Cam lock		20
C	Large wood dowel		4
D	Small wood dowel		5
E	Flat-head screw		1
F	Left extension rail		2
G	Right extension rail		2
H	Screw		24
I	Bolt		8
J	Barrel nut		8
K	Screw		9
L	Right extension slide		2
M	Left extension slide		2
N	Coated paper sticker		8
O	Adjustable foot		4
P	Hex key		1

BEFORE YOU BEGIN ASSEMBLY


MAKE SURE ALL PARTS ARE PRESENT

Compare all pieces to the parts and hardware lists, and make sure you have all tools required for assembly.




ASSEMBLE IN A CLEARED AREA

Place all parts from the box on the floor in front of you on a clean, dry, level surface to protect the product as it is being built.

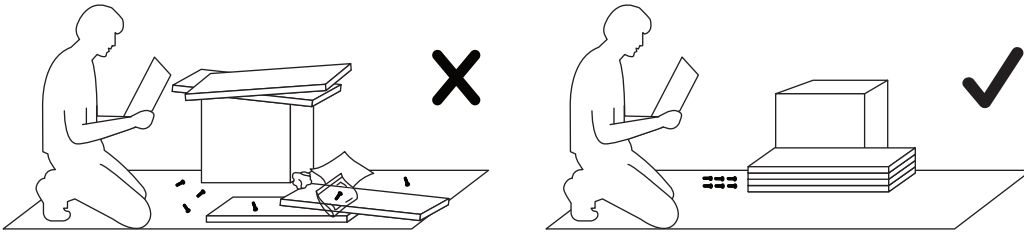


REMOVE PACKAGING MATERIALS

Place packing materials back in the box. Do not dispose of packing materials until assembly is complete.

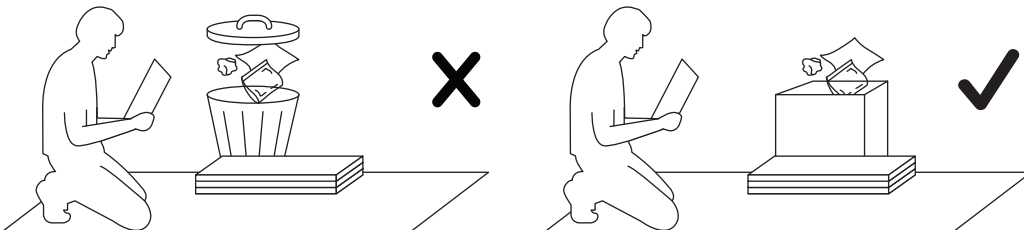








READ EACH STEP CAREFULLY

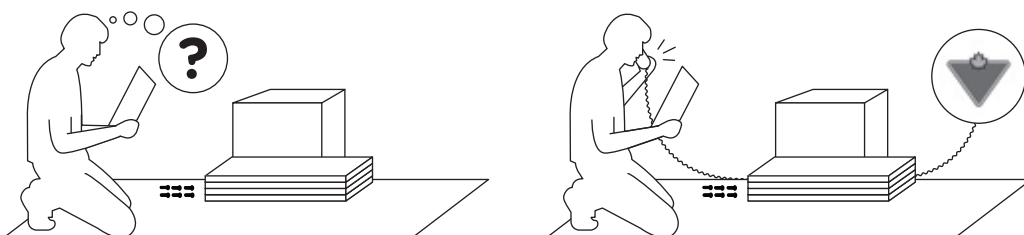Make sure you understand each step. If you have any questions, contact CANVAS® customer service at 1-888-670-6684 (toll free).



STEP-BY-STEP GUIDE

STEP 1

2 x1	5 x1	6 x1	A x6	F x1	G x2	H x9
						


Insert three screws **H** through the left extension rail **F-CL** (cabinet left) into the left side panel **5**.

Insert three screws **H** through the right extension rail **G-CR** (cabinet right) into the right side panel **6**.

Insert three screws **H** through the right extension rail **G-CR** (cabinet right) into the left side of bench divider **2**.


Insert six cam bolts **A** into the left side panel **5** and right side panel **6**.

Tighten all screws and cam bolts.

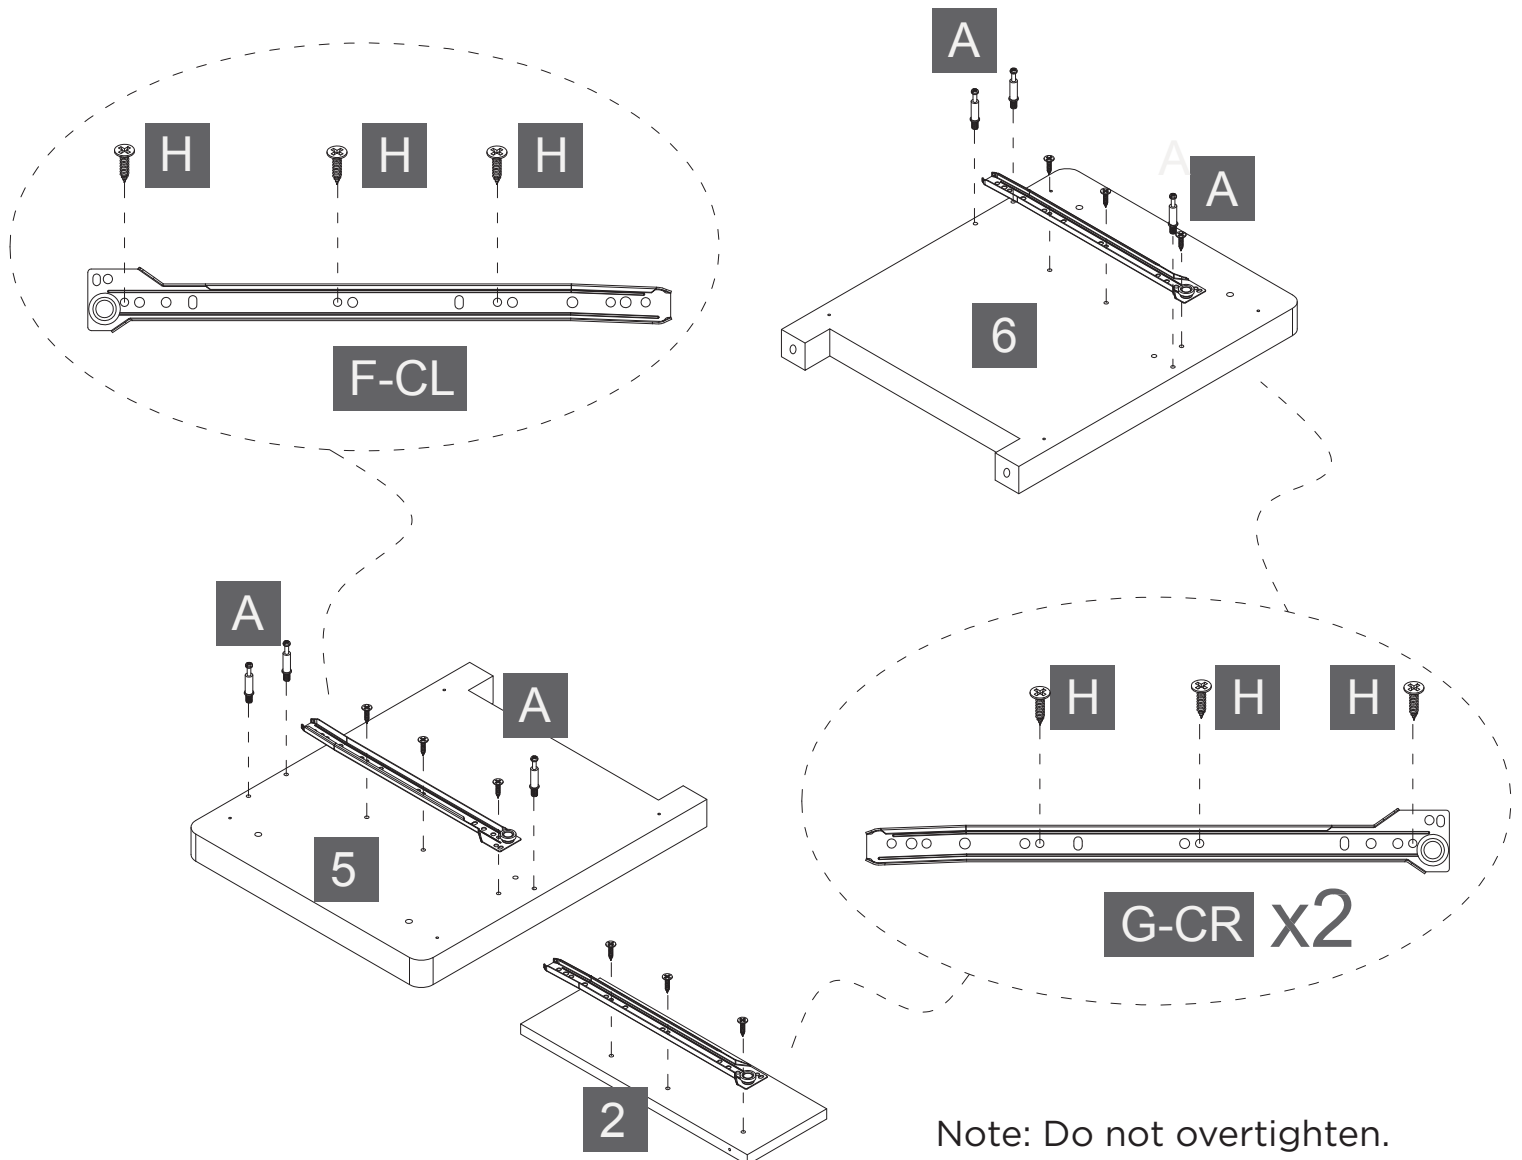


STEP-BY-STEP GUIDE

STEP 2


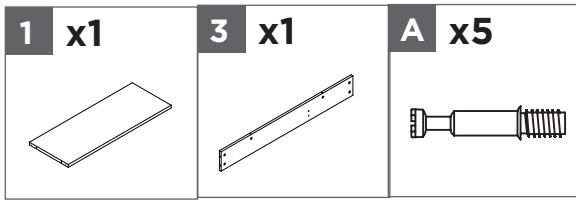




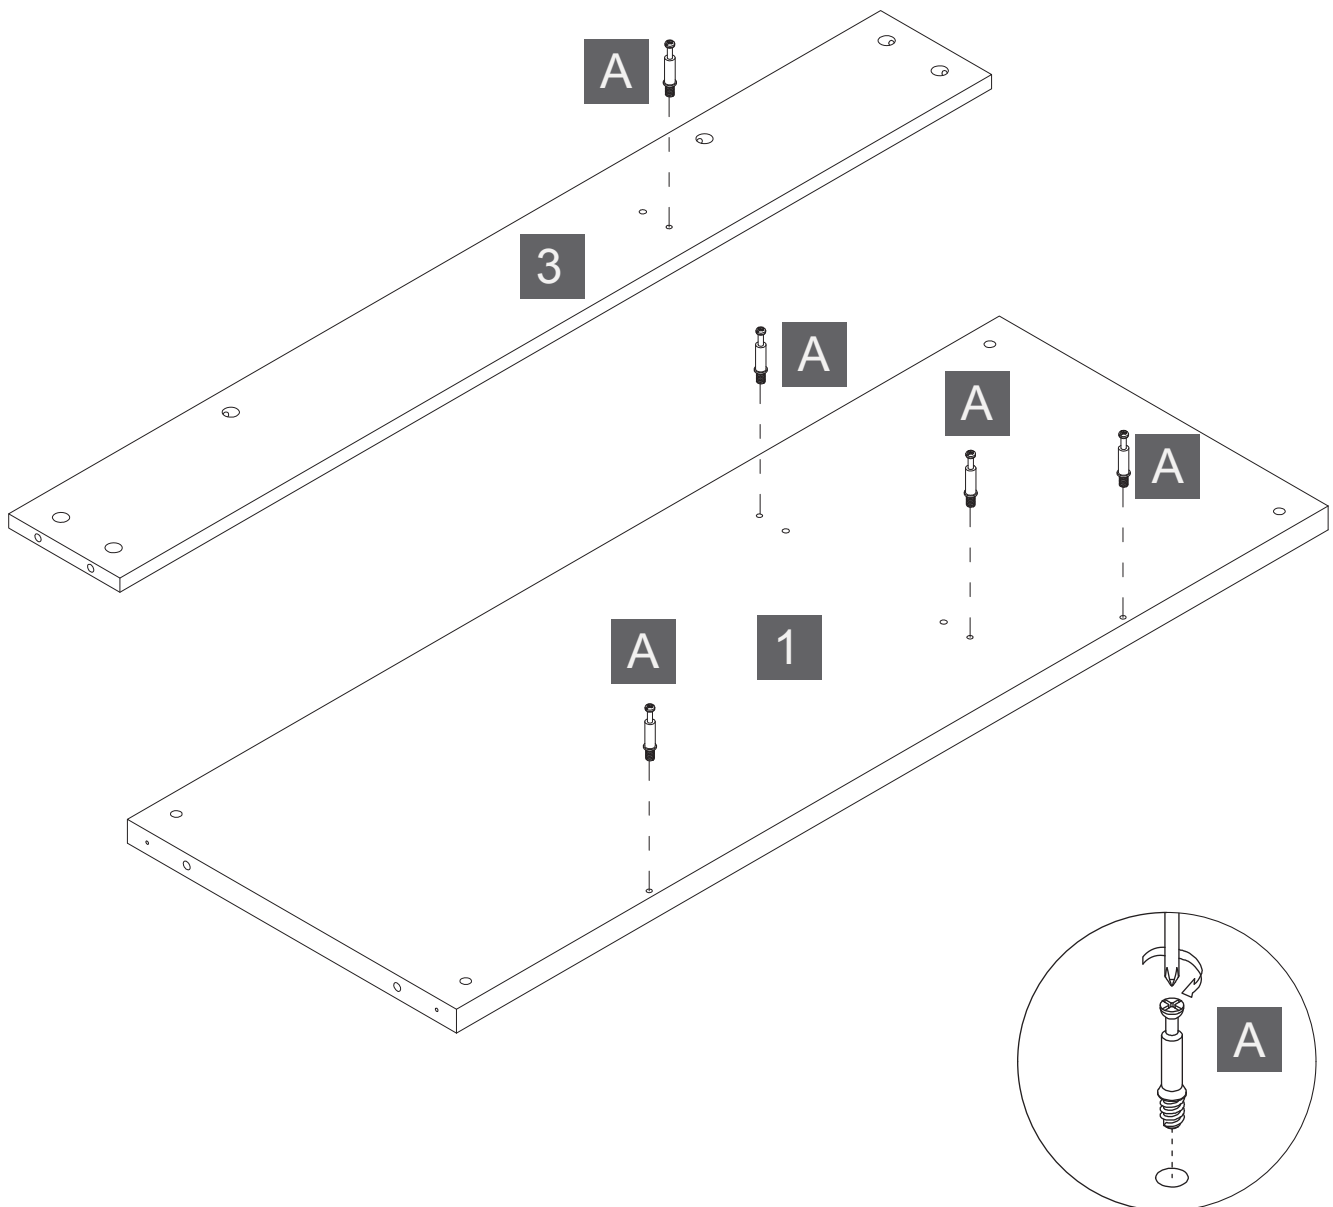

Insert five cam bolts **A** into the bench top **1** and bench back **3**.
Tighten all cam bolts.



STEP-BY-STEP GUIDE

STEP 3

2 x1	3 x1	B x1	D x1	F x1	H x3
					


Insert three screws **H** through left extension rail **F-CL** (cabinet left) into the right side of the bench divider **2**.

Insert one small wood dowel **D** into the bench back **3**.

Attach the bench divider **2** to the bench back **3**.


Insert one cam lock **B** into bench divider **2**.

Tighten all screws and cam lock.

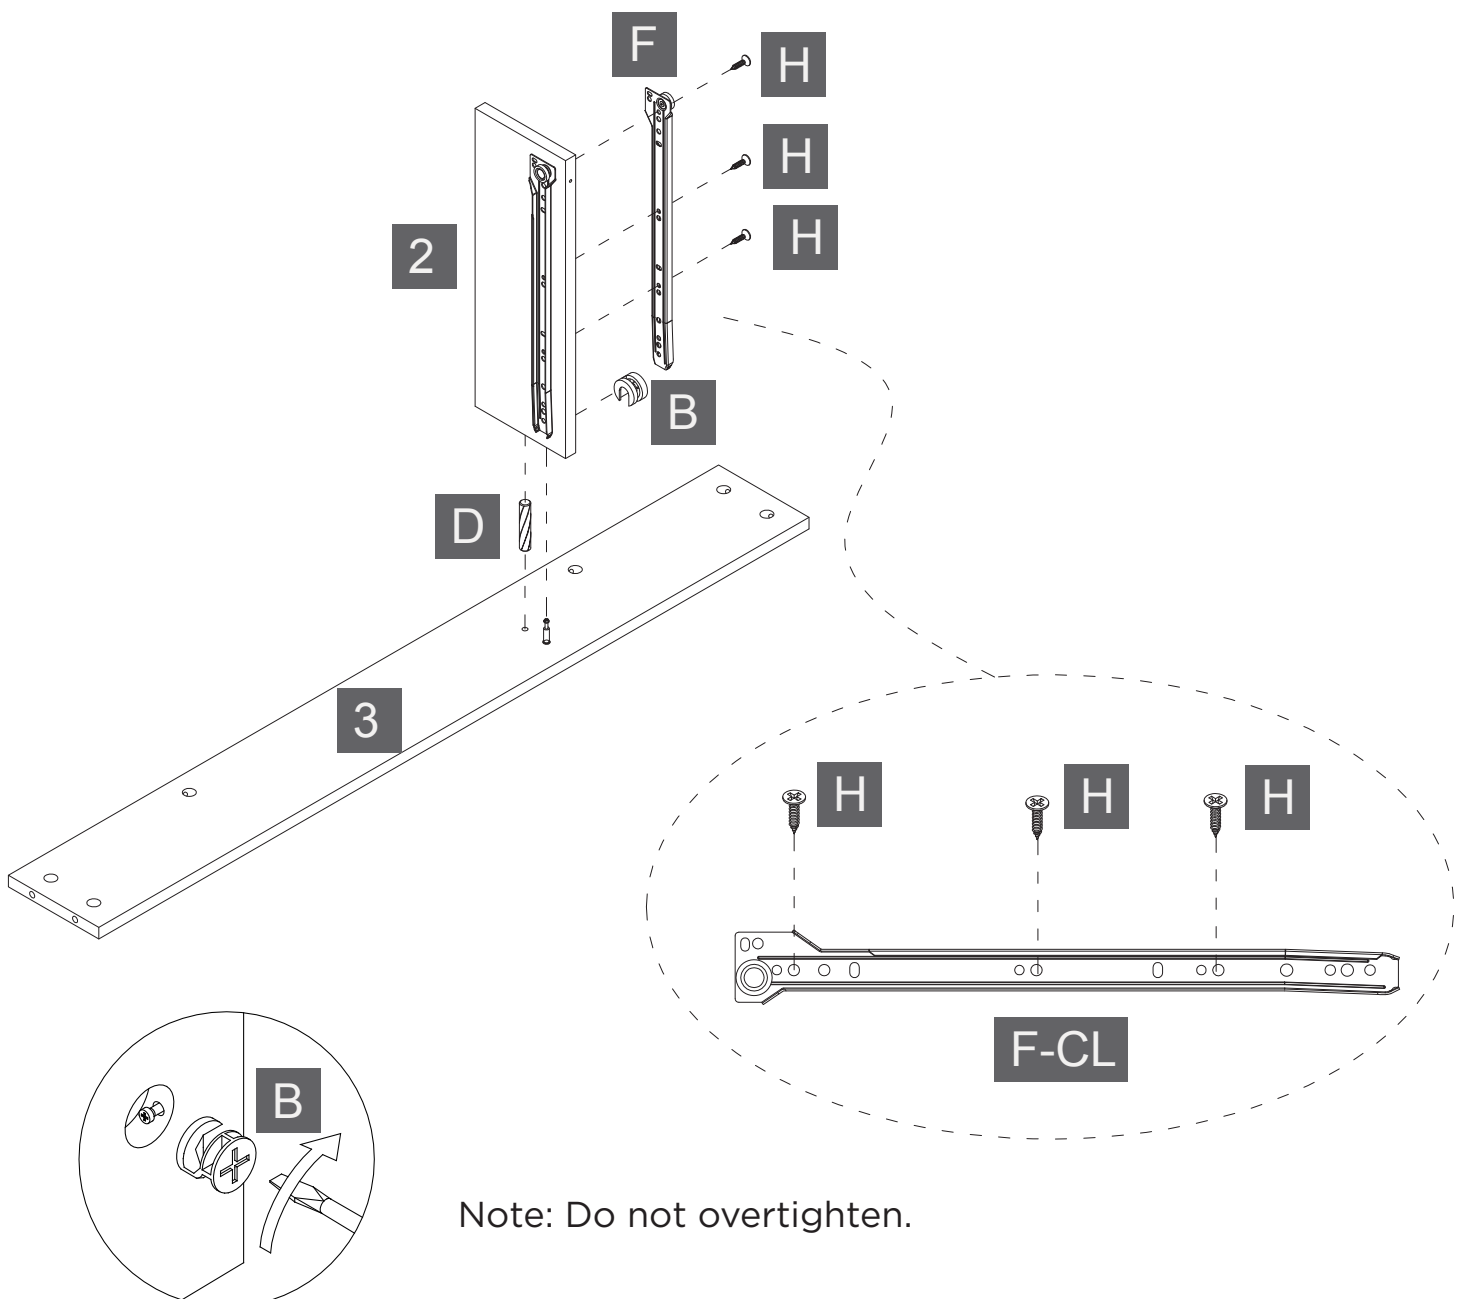


STEP-BY-STEP GUIDE

STEP 4

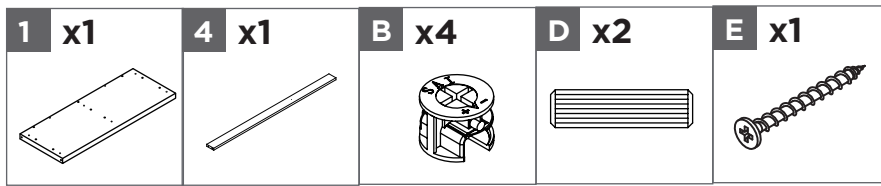

Insert two small wood dowels **D** into the bench top panel **1**.
Attach the bench top panel **1** to the bench divider **2** and bench back **3**.
Insert four cam locks **B** into the bench divider **2** and bench back **3**.
Insert one flat-head screw **E** through the drawer support **4** into the bench divider **2**.
Tighten all cam locks and screw.

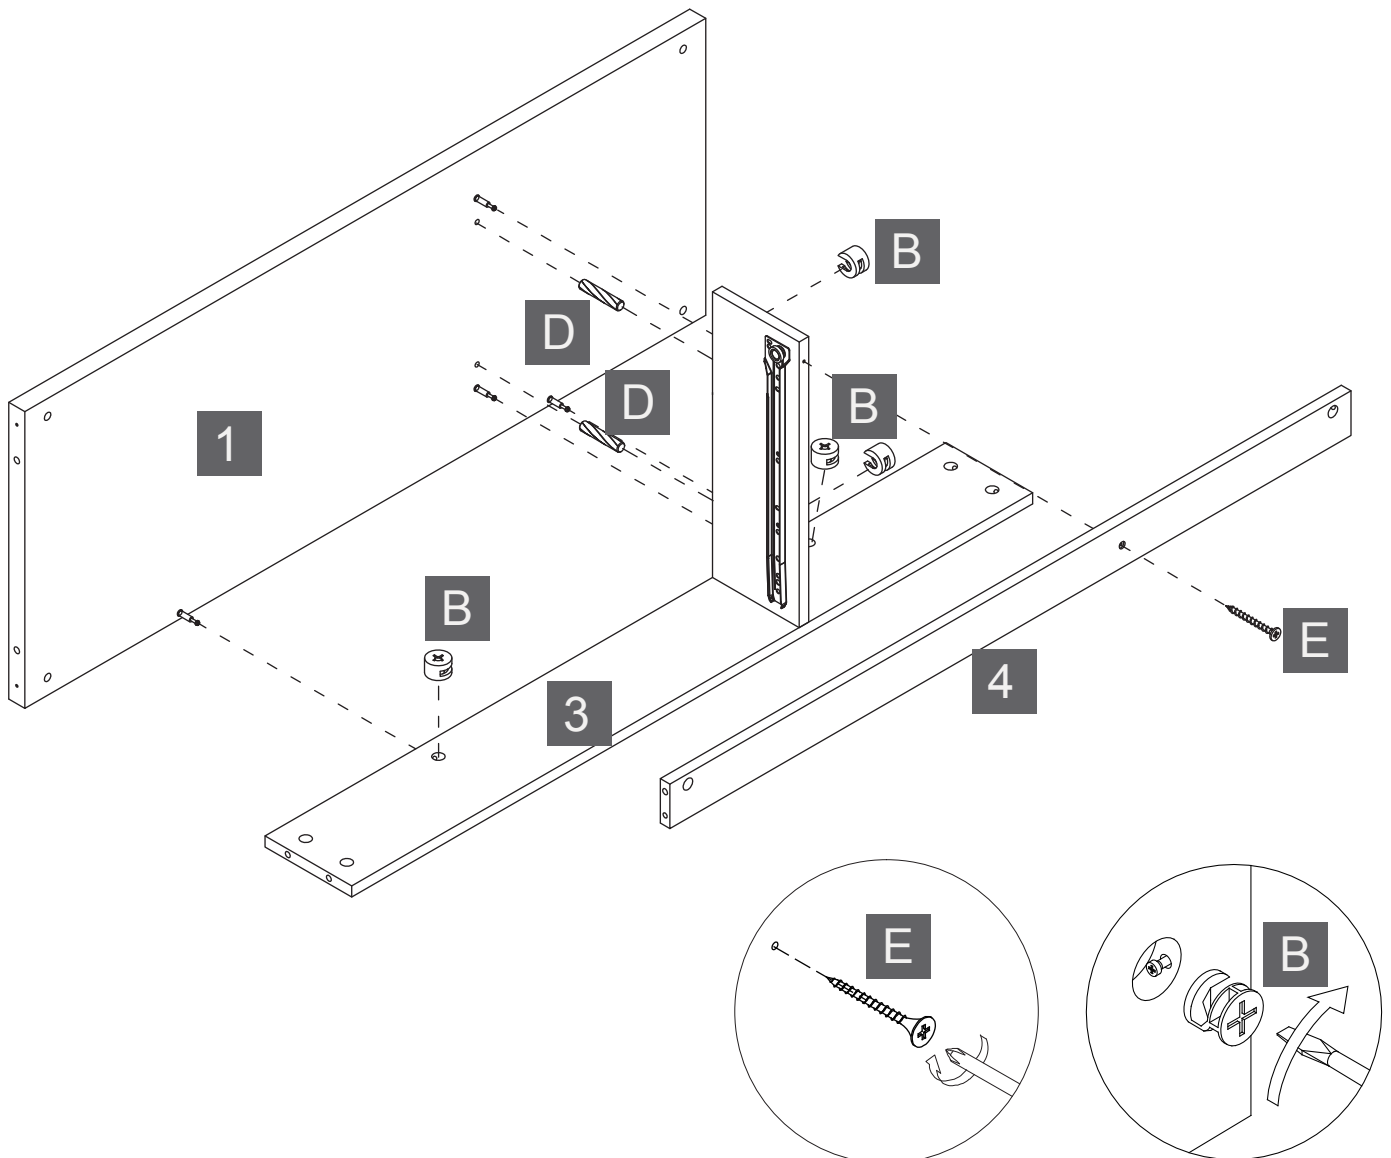

STEP-BY-STEP GUIDE

STEP 5

6 x1	C x2	D x1	J x2	I x2	B x3	P x1

Insert two large wood dowels **C** into the bench top panel **1**.


Insert one small wood dowel **D** into the drawer support **4**.

Insert two barrel nuts **J** into the bench top panel **1**.

Insert two bolts **I** through the right side panel **6** into the bench top panel **1**.


Insert three cam locks **B** into the bench back **3** and drawer support **4**.

Tighten all bolts using hex key provided, and tighten all cam locks.

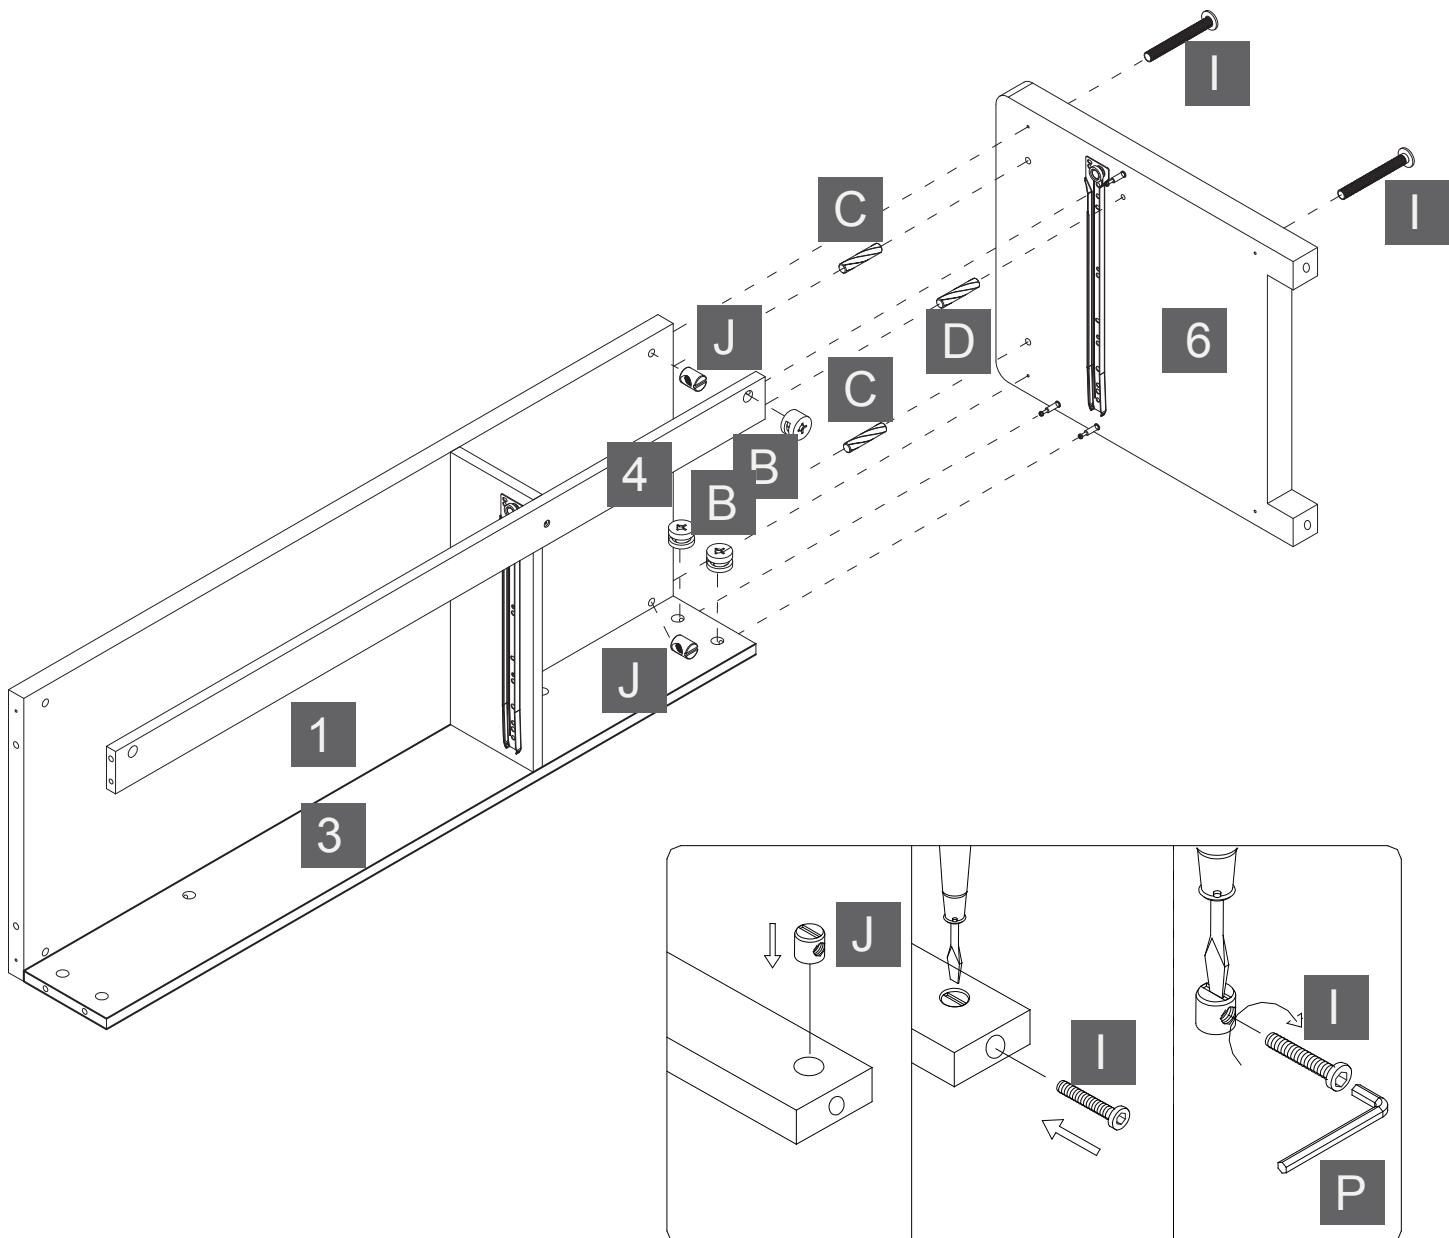


STEP-BY-STEP GUIDE

STEP 6

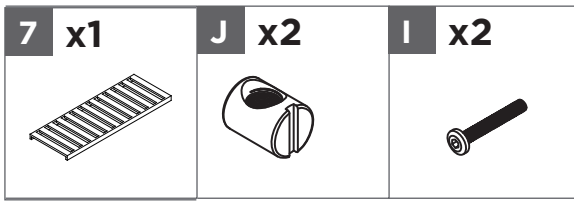




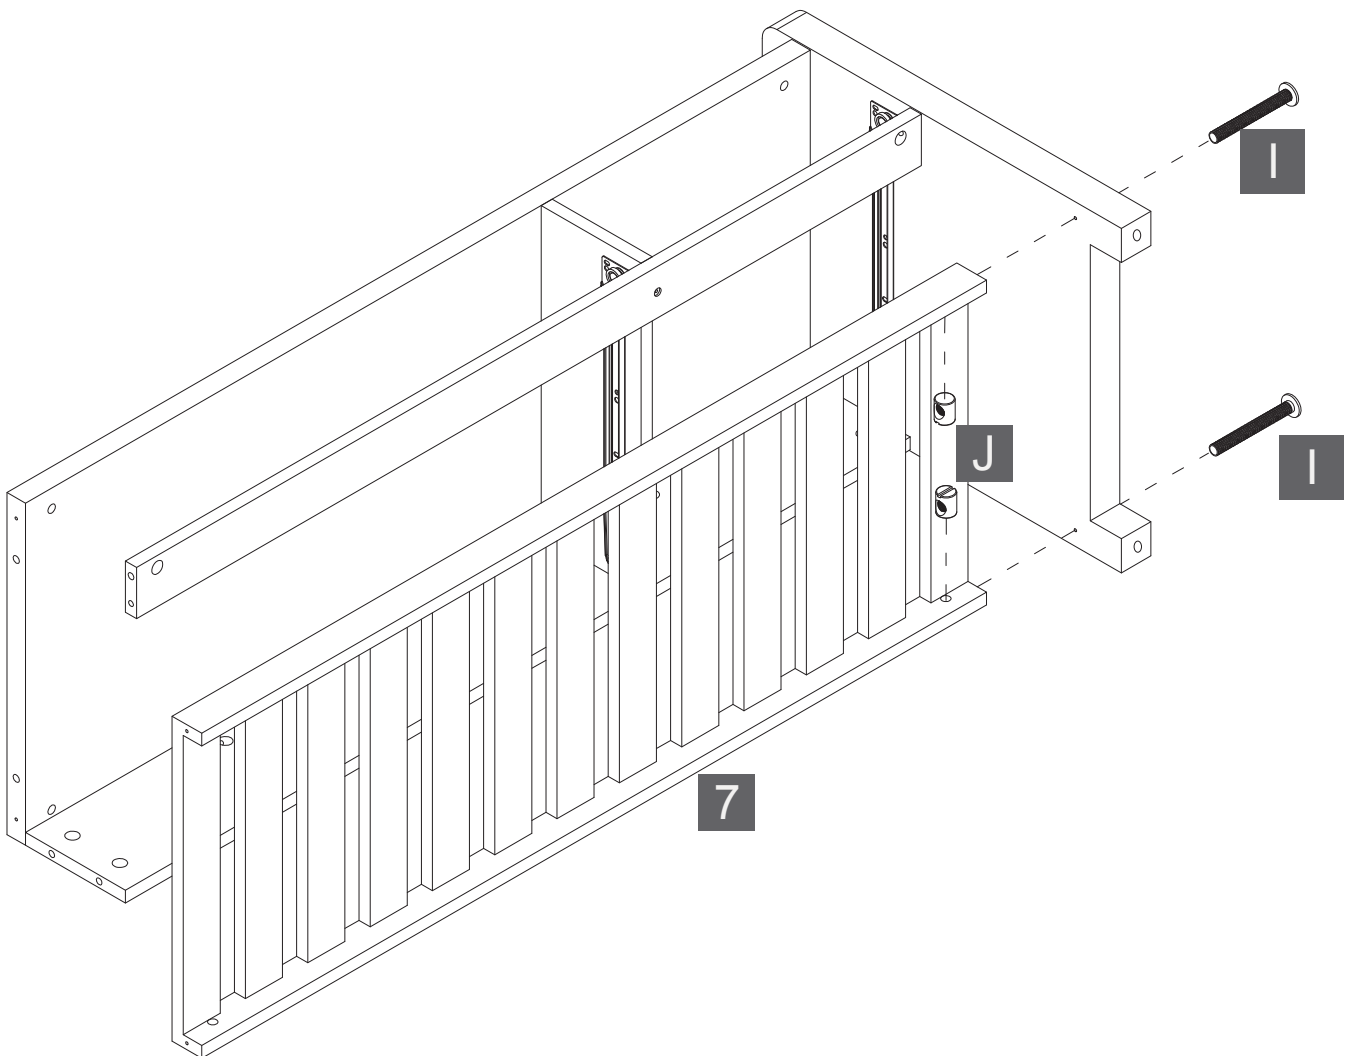



Insert two barrel nuts **J** into shoe rack **7**.
Insert two bolts **I** through the right side panel **6** into the shoe rack **7**.
Tighten all bolts using hex key provided.



STEP-BY-STEP GUIDE

STEP 7

5 x1	C x2	D x1	J x4	I x4	B x3	O x4
						

Insert two large wood dowels **C** into the bench top panel **1**.

Insert one small wood dowel **D** into the drawer support **4**.


Insert four barrel nuts **J** into the bench top panel **1** and shoe rack **7**.

Insert four bolts **I** through the left side panel **5** into the bench top panel **1** and shoe rack **7**.

Insert three cam locks **B** into the bench back **3** and drawer support **4**.







Screw four adjustable feet **O** into the left side panel **5** and right side panel **6**.

Tighten all bolts using hex key provided, and tighten all cam locks.

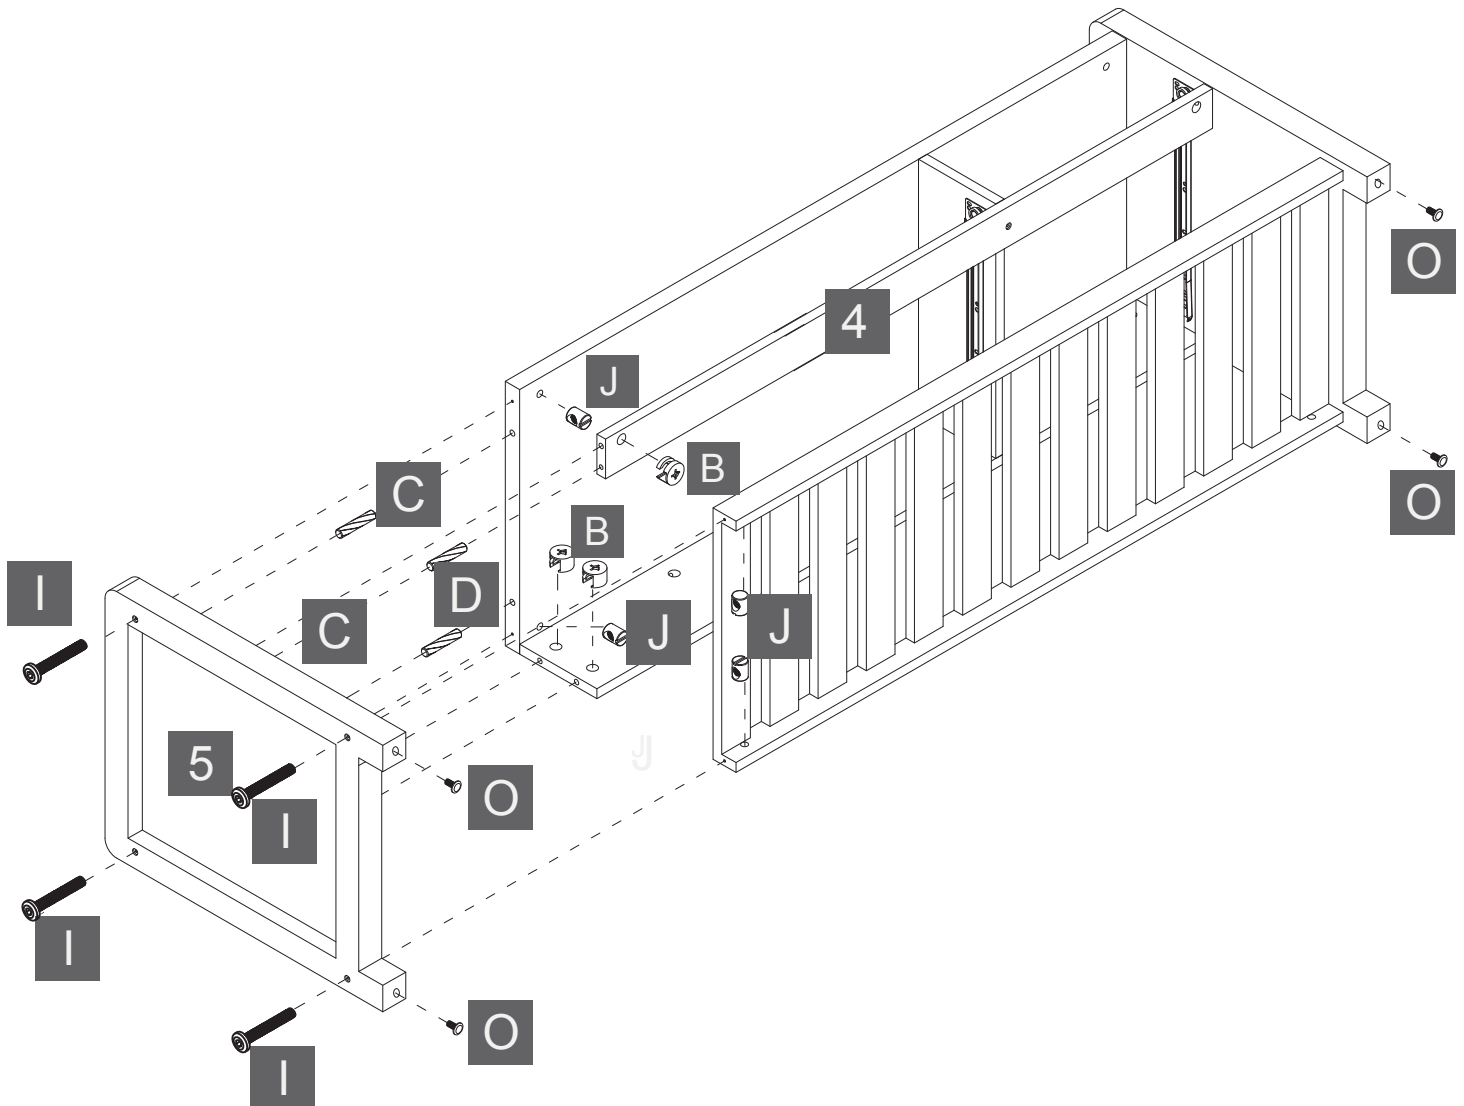

STEP-BY-STEP GUIDE


STEP 8

8 x1	9 x1	10 x1	11 x1	A x5	K x4
					

Insert five cam bolts **A** into the left drawer front **8**.


Insert four screws **K** through the drawer left **9** and drawer right **11** into the left drawer back **10**.

Tighten all bolts and screws.

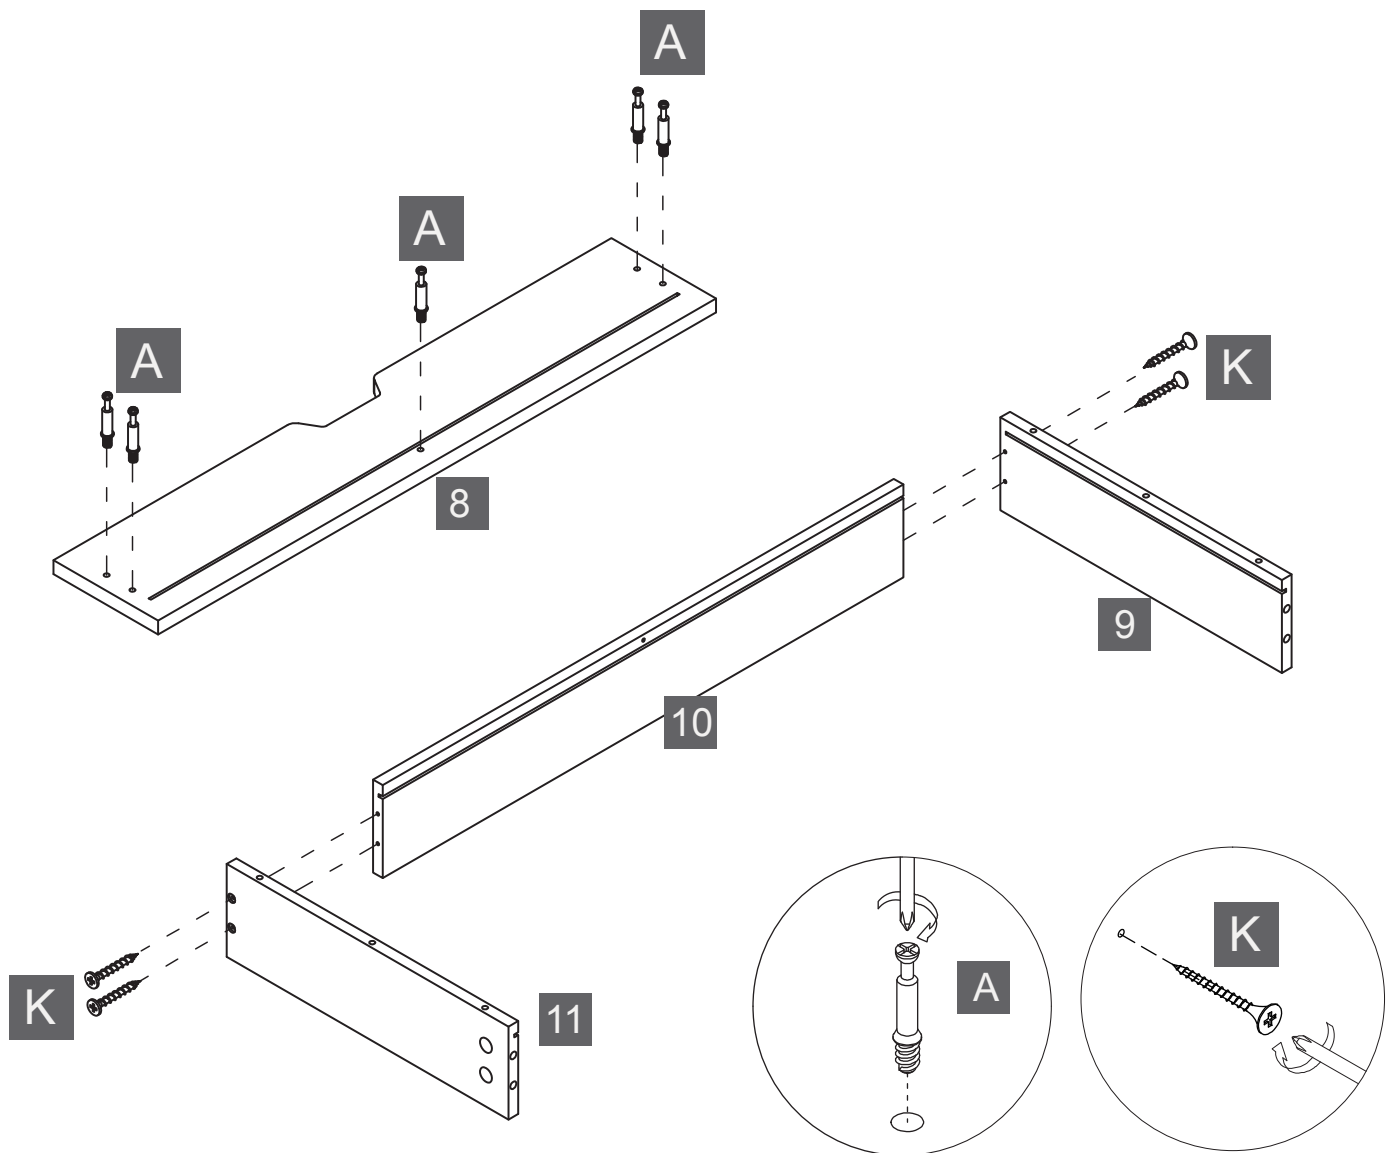

STEP-BY-STEP GUIDE

STEP 9

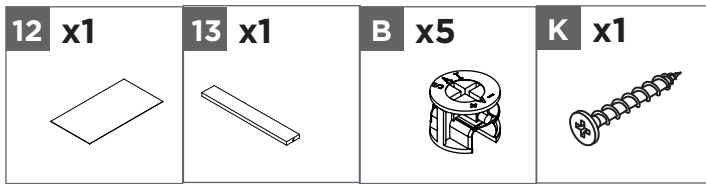


Insert the left drawer bottom **12** into the groove around the bottom of the drawer left **9**, drawer back **10** and drawer right **11**.

Insert one screw through the drawer back **10** into the left drawer bottom support **13**.

Attach the left drawer front **8** to the drawer left **9** and drawer right **11**.


Insert five cam locks into the drawer left **9**, drawer right **11** and left drawer bottom support **13**.

Tighten all screws and cam locks.

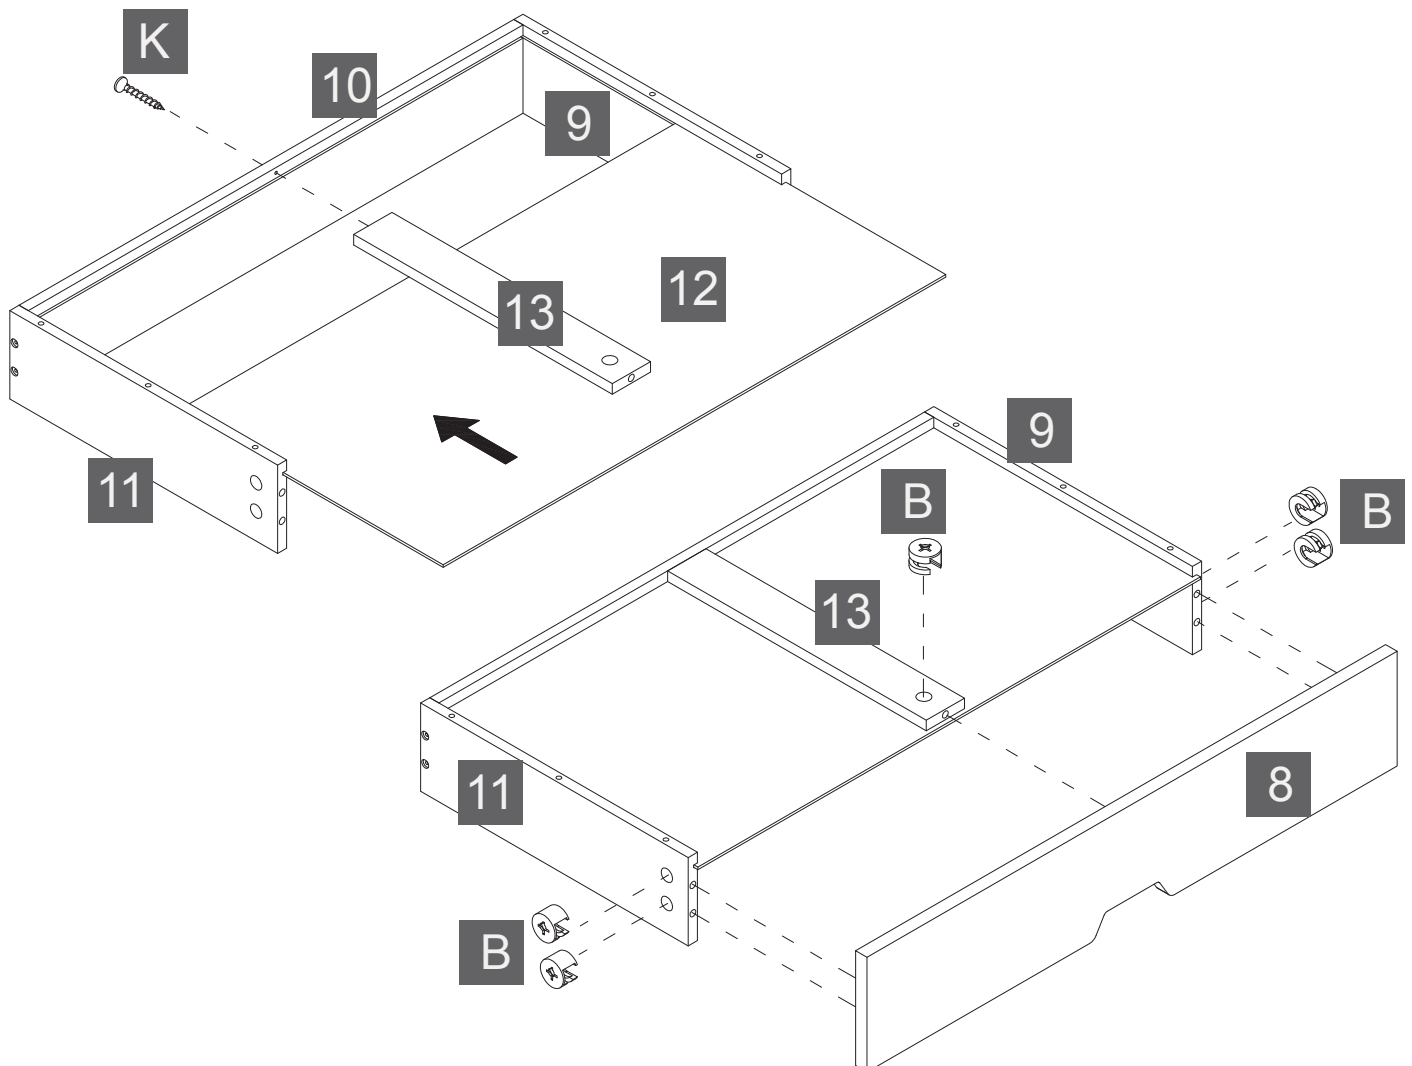

STEP-BY-STEP GUIDE

STEP 10

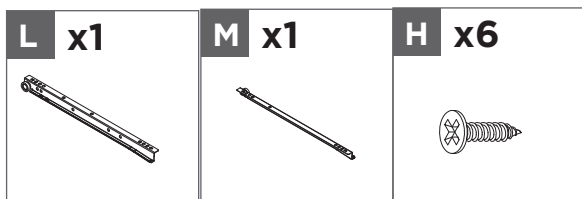


Insert three screws **H** through the left extension slide **M-DL** (drawer left) into the drawer left **9**.

Insert three screws **H** through the right extension slide **L-DR** (drawer right) into the drawer right **11**.







Tighten all screws.

Note: Do not overtighten.

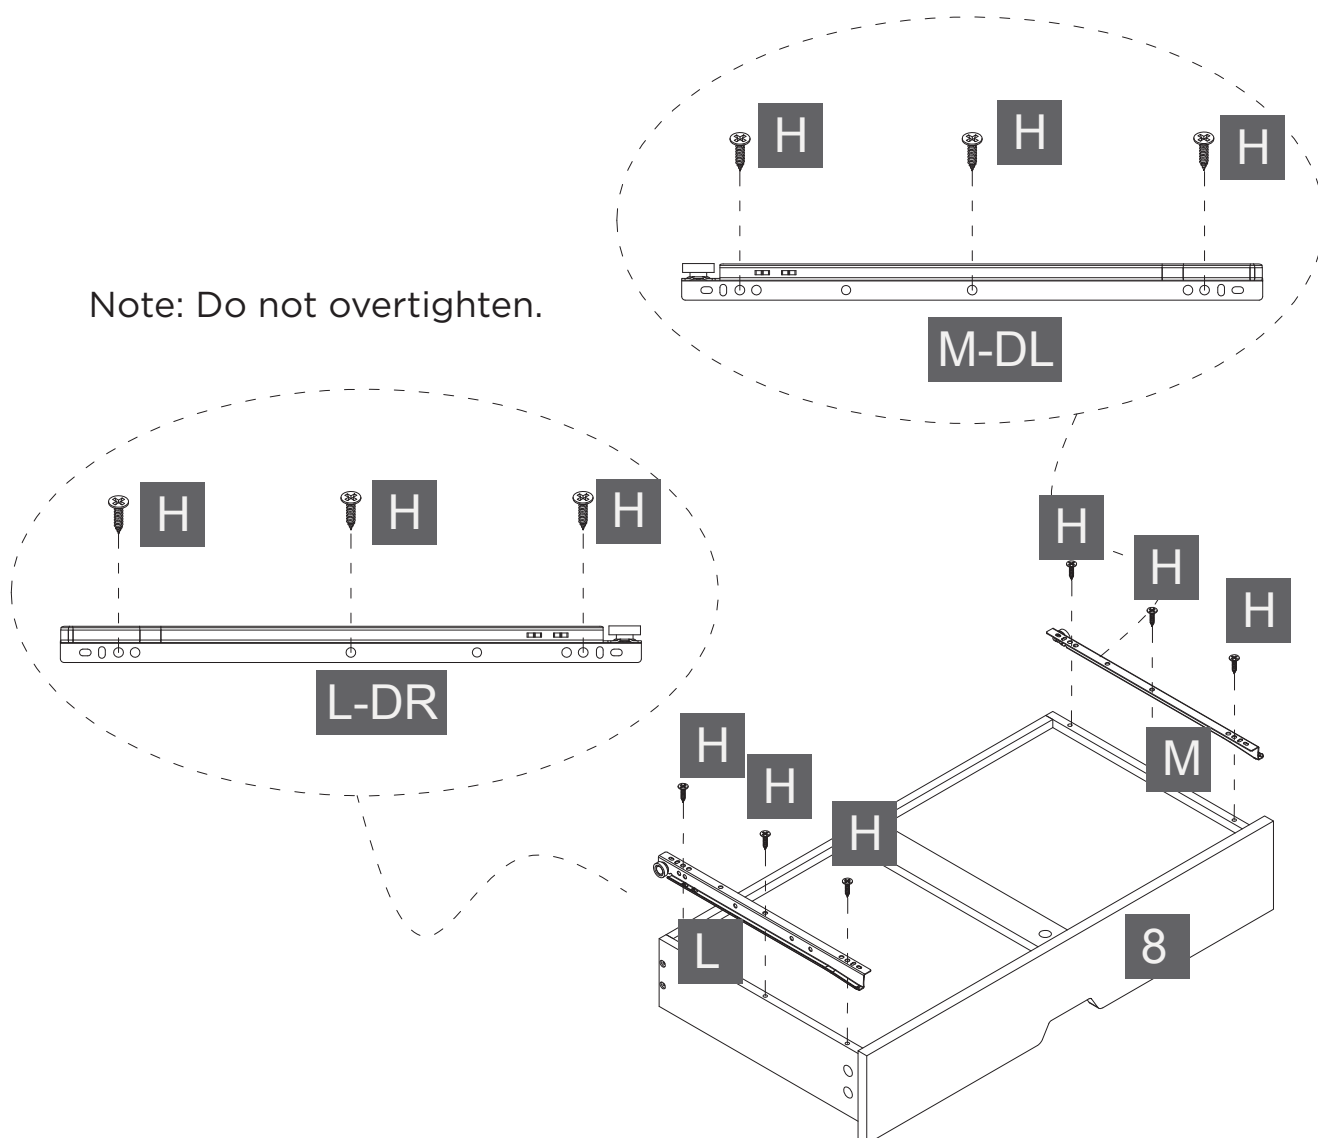

STEP-BY-STEP GUIDE


STEP 11

9 x1	11 x1	14 x1	15 x1	A x4	K x4
					

Insert four cam bolts into right drawer front **14**.

Insert four screws **K** through the drawer left **9** and drawer right **11** into the right drawer back **15**.


Tighten all cam bolts and screws.

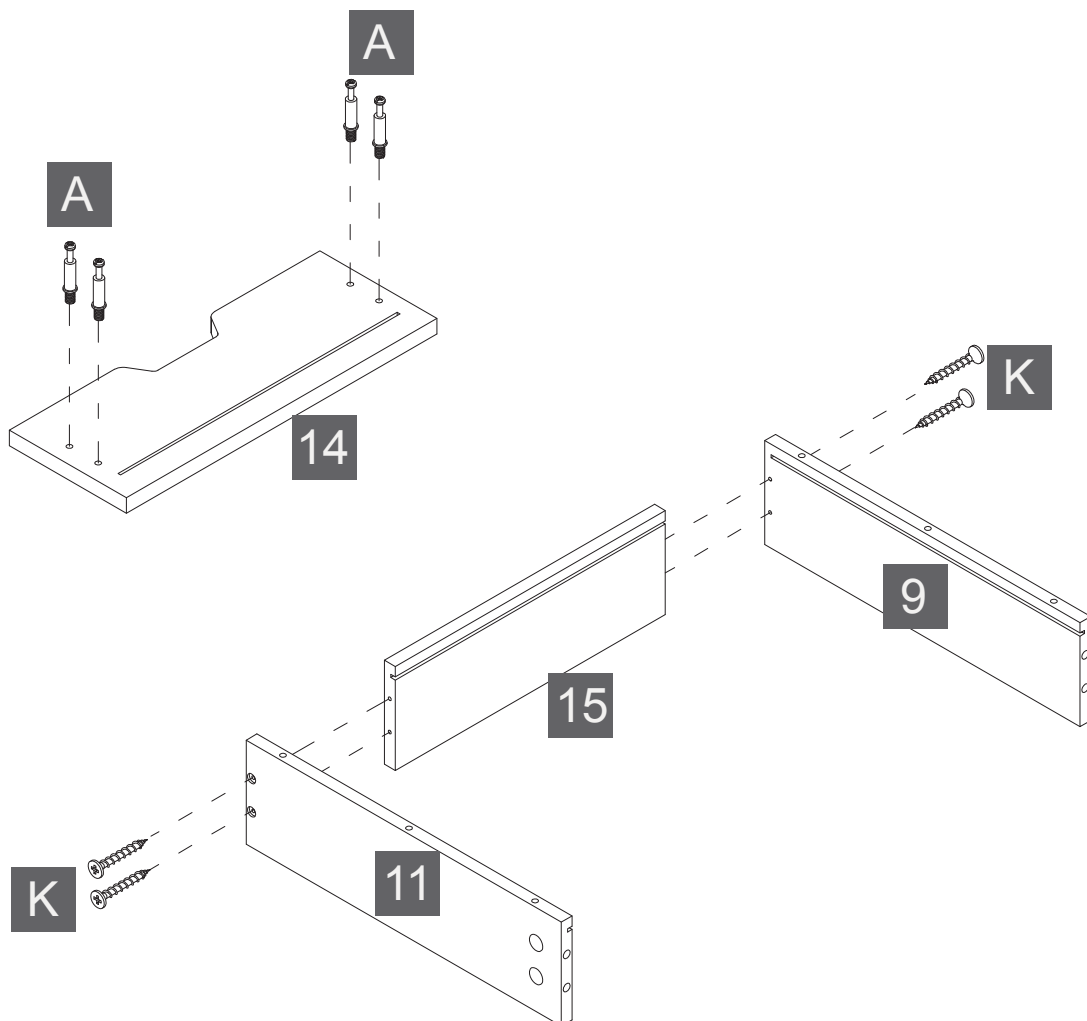

STEP-BY-STEP GUIDE

STEP 12

14 x1



16 x1



B x4




Insert right drawer bottom **16** into the groove around the bottom of the drawer left **9**, drawer right **11** and right drawer back **15**.

Attach the right drawer front **14** to the drawer left **9** and drawer right **11**.


Insert four cam locks **B** into the drawer left **9** and drawer right **11**.

Tighten all cam locks.

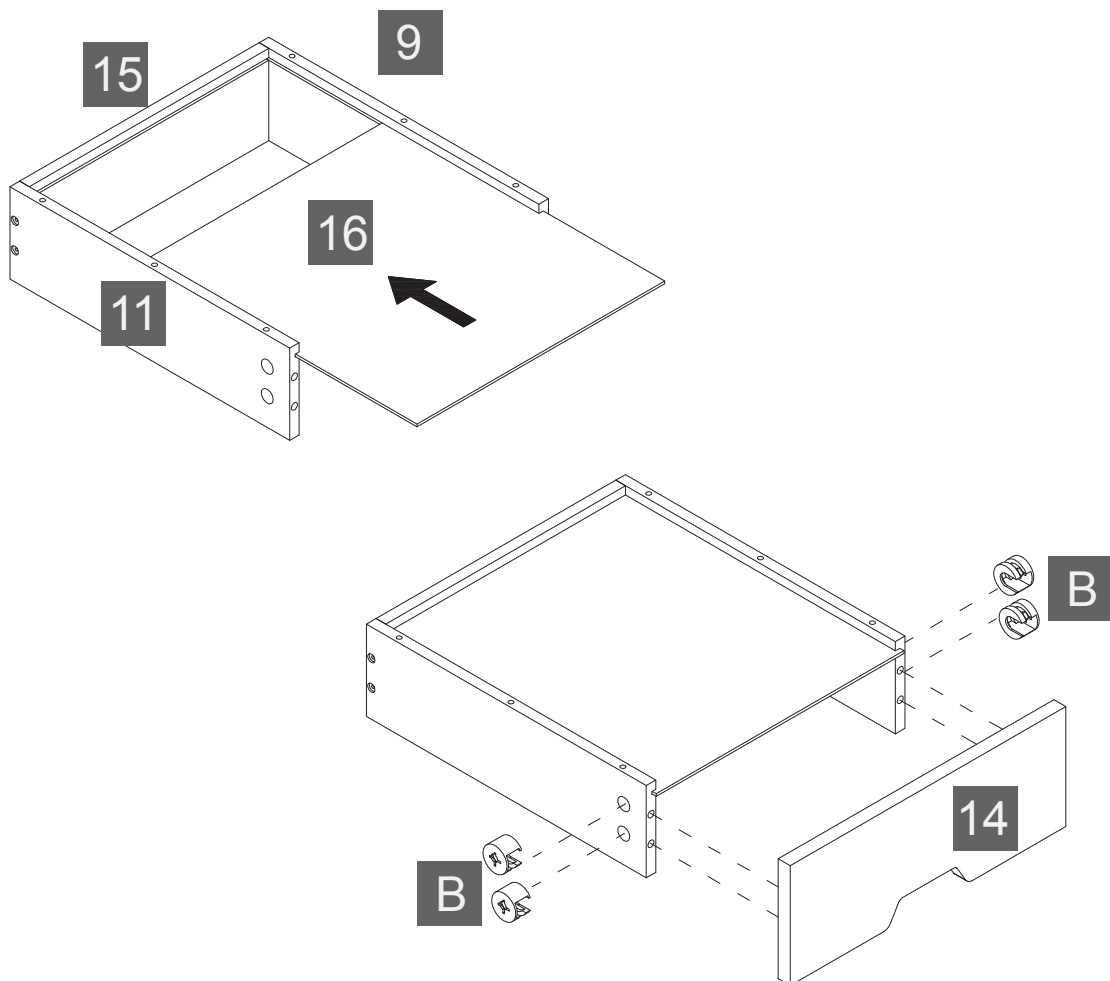

STEP-BY-STEP GUIDE

STEP 13

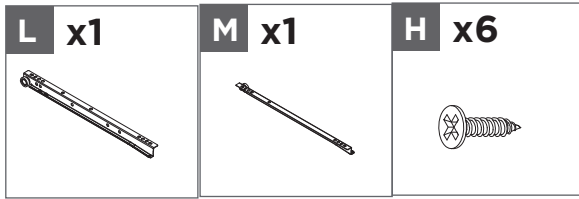


Insert three screws **H** through the left extension slide **M-DL** (drawer left) into the drawer left **9**.

Insert three screws **H** through the right extension slide **L-DR** (drawer right) into the drawer right **11**.

Tighten all screws.


Note: Do not overtighten.

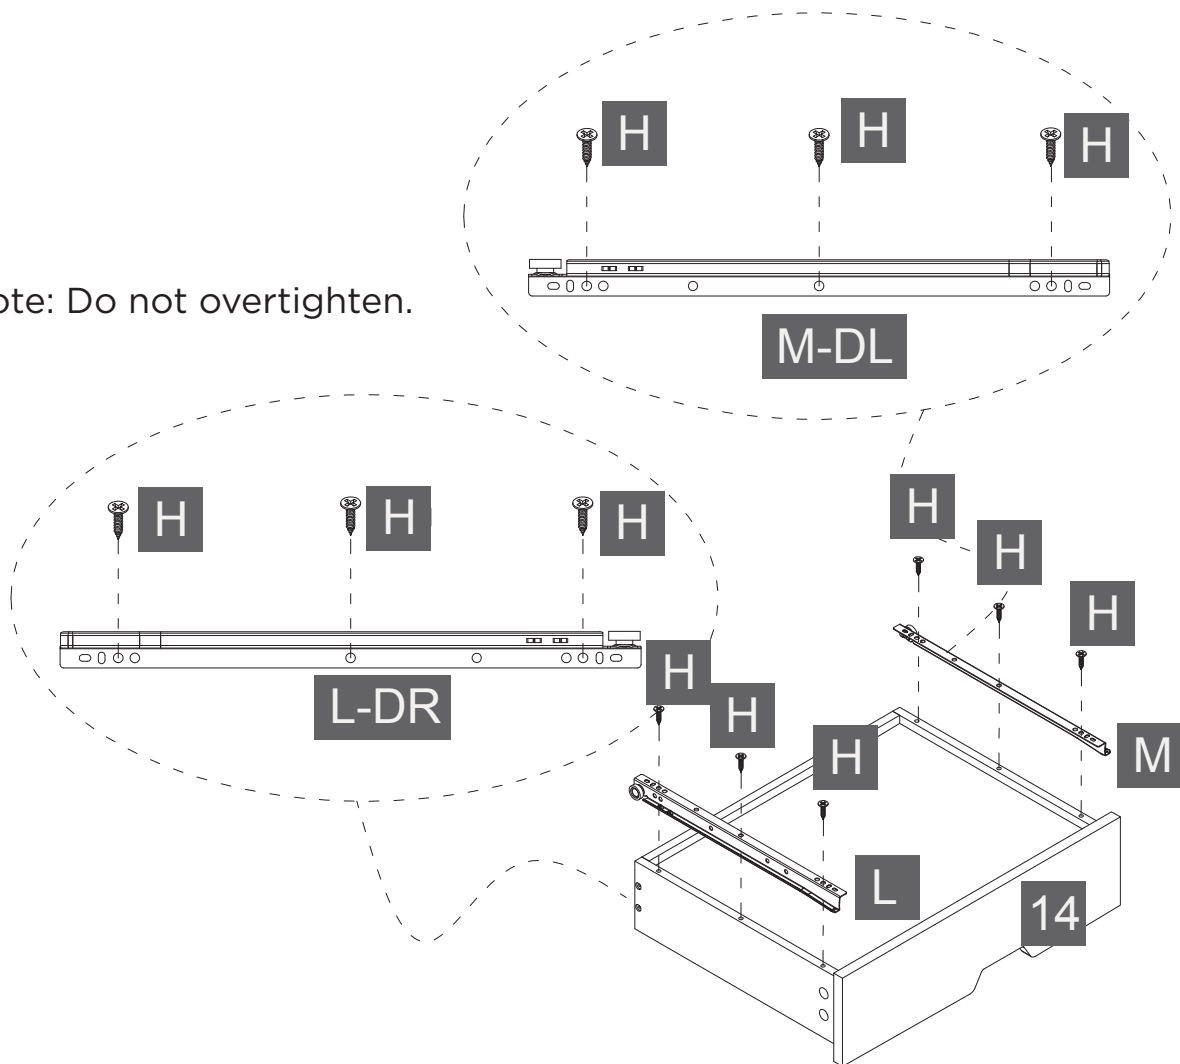

STEP-BY-STEP GUIDE

STEP 14

17 x1




N x8




Put the cushion **17** on the bench top **1**.

Insert the drawers into the bench by lining up the slide track on the drawer with the slide runner on the bench.

Place the coated paper stickers **N** over the bolt holes.

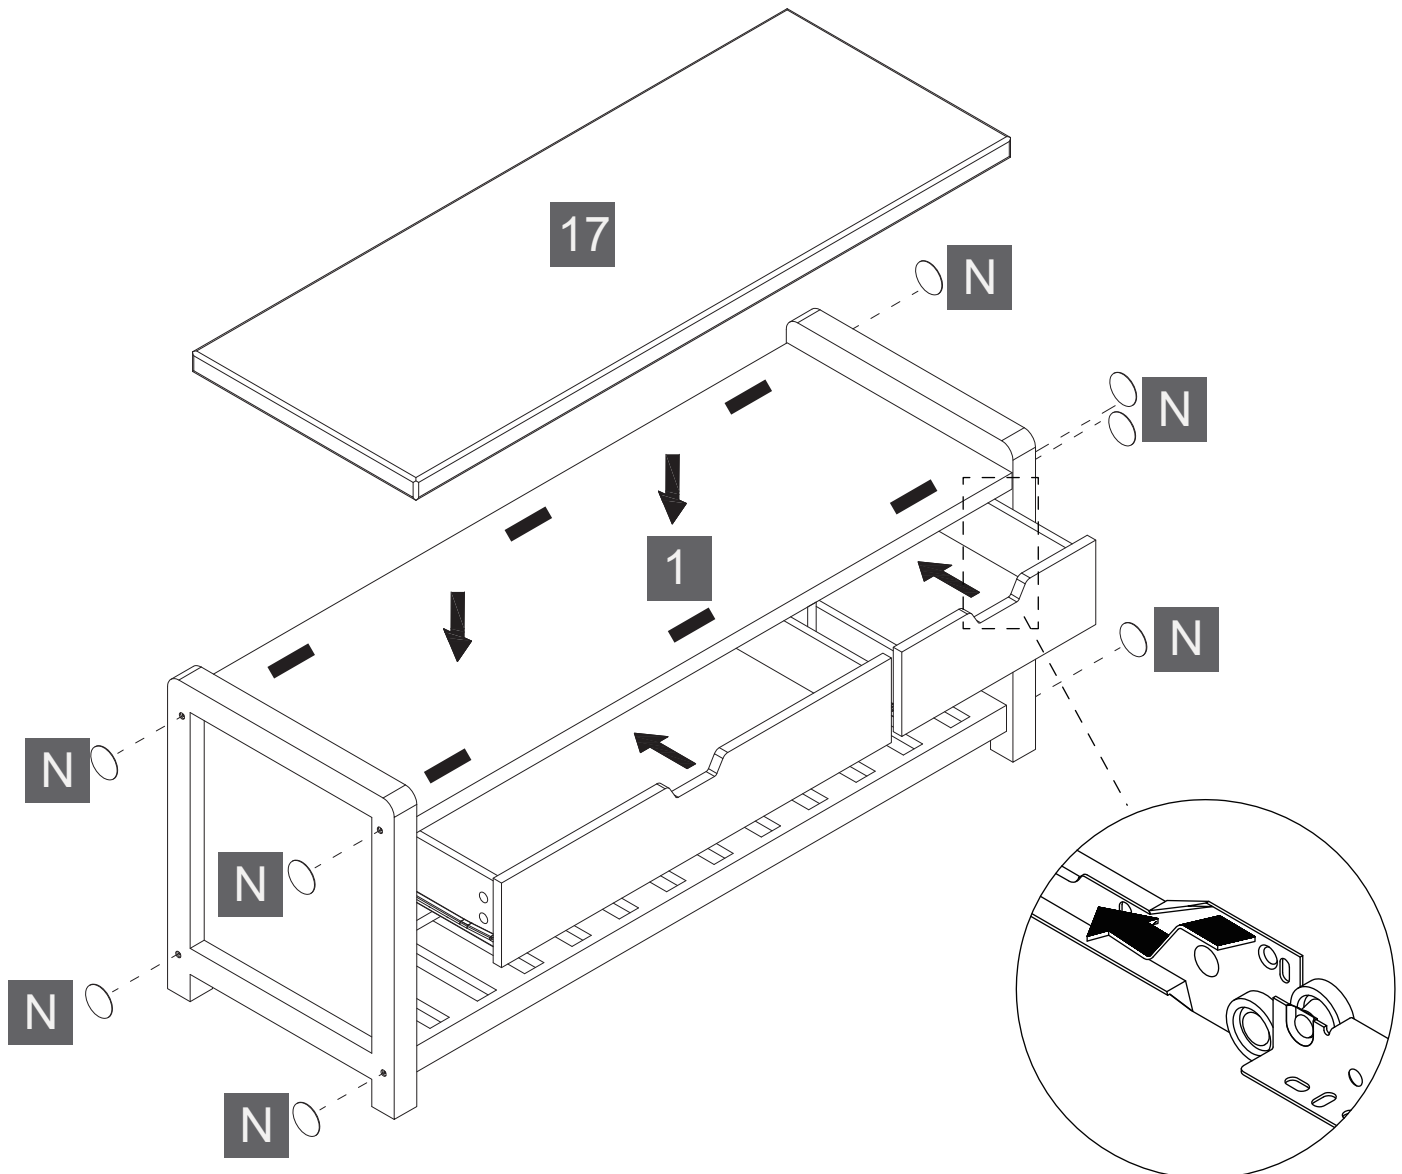

TECHNICAL DATA

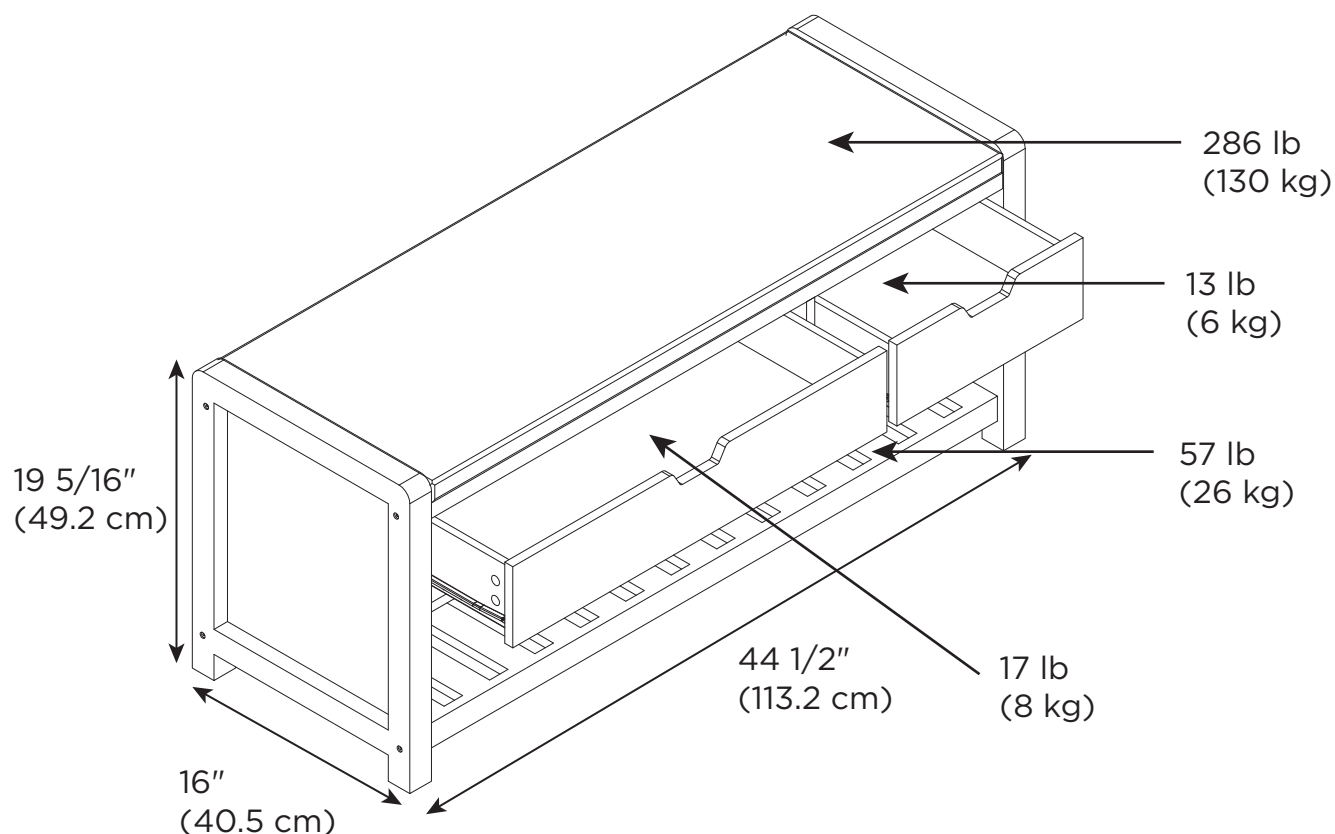

SPECIFICATIONS

ASSEMBLED DIMENSIONS (W x D x H) 44 1/2 x 16 x 19 5/16"

113.2 x 40.5 x 49.2 cm

ASSEMBLED WEIGHT 55 lb 9 oz

25.2 kg

MAXIMUM WEIGHT CAPACITY (Bench) 286 lb

130 kg

MAXIMUM WEIGHT CAPACITY (Left drawer) 17 lb

8 kg

MAXIMUM WEIGHT CAPACITY (Right drawer) 13 lb

6 kg

MAXIMUM WEIGHT CAPACITY (Shoe rack) 57 lb

26 kg

ASSEMBLY TROUBLESHOOTING



**BEFORE RETURNING
YOUR PRODUCT**

**HAVING TROUBLE?
LET US HELP YOU!**

**TOLL-FREE:
1-888-670-6684**

If you have questions regarding your product or require warranty assistance, please call our customer service helpline.



**CALL US;
WE CAN HELP**

CARING FOR YOUR ITEM

1

Weight Capacity:

- Do not exceed maximum weight capacity of 286 lb (130 kg) on bench.
- Do not exceed maximum weight capacity of 17 lb (8 kg) in left drawer.
- Do not exceed maximum weight capacity of 13 lb (6 kg) in right drawer.
- Do not exceed maximum weight capacity of 57 lb (26 kg) on shoe rack.

2

Furniture tipping over can be dangerous. To reduce your risk:

- For indoor use only.
- Always place the unit on a flat, level surface.
- Regularly tighten all hardware to ensure unit is secure and stable.

3

Wipe clean with a damp cloth.

4

Avoid direct sunlight.

WARRANTY INFORMATION



1-YEAR LIMITED WARRANTY*

This CANVAS® product carries a one (1) year warranty against defects in workmanship and materials. Trileaf Distribution agrees to replace the defective product free of charge within the stated warranty period, when returned by the original purchaser with proof of purchase. This product is not guaranteed against wear or breakage due to misuse and/or abuse.

PRODUCT NO. 168-0137-8

Made in China

Imported by Trileaf Distribution Trifeuil Toronto, Canada M4S 2B8

CANVAS™

INSPIRED BY CANADA

