


CANVAS^{TM/MC}

OVERBROOK TALL SHOE ORGANIZER

PRODUCT NO. 168-0147-4

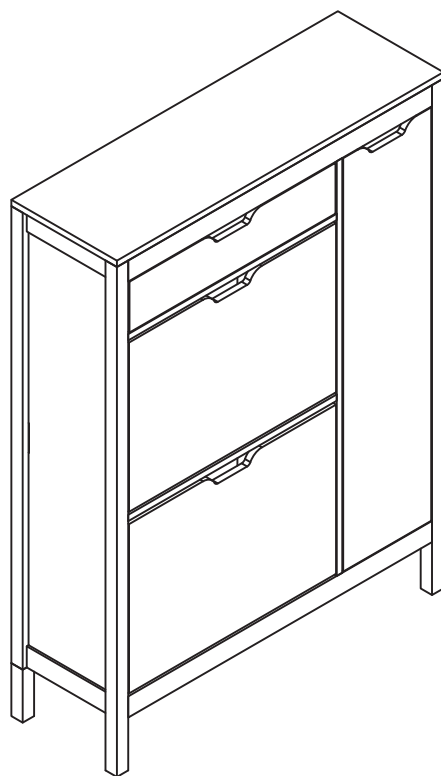

ASSEMBLY INSTRUCTIONS



HAVING TROUBLE?

TOLL-FREE:

1-888-670-6684

IMPORTANT: Please read this manual carefully before beginning assembly of this product. Keep this manual for future reference.

CANVAS™

INSPIRED BY CANADA



We believe in the power of décor and its ability to make up the fabric of your home.

That's why **CANVAS®** collections draw **inspiration from Canadians and the way they live.**

From on-trend furniture pieces to holiday décor and all your outdoor living essentials, **CANVAS®** makes it easy to refresh your space to reflect **your unique style and the way you live every day.**

We would love to hear from you and welcome your thoughtful feedback. Visit our website at **canadiantire.ca** to tell us about your experience, and share your photos with us using **#myCANVASstyle.**

Show us how you bring **CANVAS®** products to life. We can't wait to see!

TABLE OF CONTENTS



Parts List	4
Before You Begin Assembly	9
Step-by-step Guide	10
Technical Data	34
Caring for Your Item	35
Warranty	35




WARNING! TO REDUCE THE RISK OF SERIOUS INJURY, READ THE FOLLOWING SAFETY INSTRUCTIONS BEFORE ASSEMBLING AND USING THE PRODUCT.

- Please read and understand this entire manual before attempting to assemble, operate, or install the product.
- Follow all warning labels.
- Any assembly or maintenance of the product must be carried out by adults only.
- Some parts may contain sharp edges. Wear protective gloves if necessary.
- To prevent damage, place all parts on a level surface during assembly. Add a layer of protective surface if needed.
- Due to the nature of steel, surface oxidation (rusting) will occur if the protective coating is scratched. This is a natural process. To minimize this condition, it is recommended that care be taken when assembling and handling the product in order to prevent the paint from being scratched.

TOOLS REQUIRED

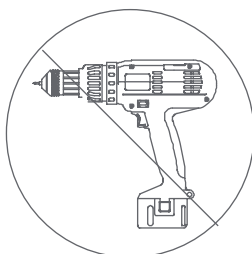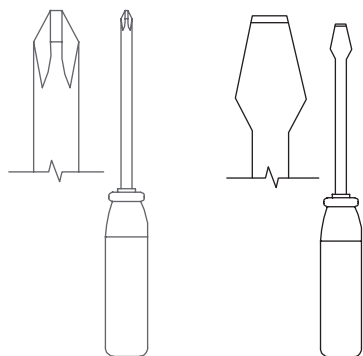















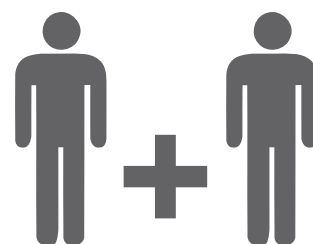


NOTE: Do not over drill/
Be aware of over-drilling












No. 2 Cross-head Screwdriver
Tip Shown Actual Size

2 people


PARTS LIST

ITEM	DESCRIPTION	THUMBNAIL	QUANTITY
1	Top		1
2	Left side frame		1
3	Top support		1
4	Connection		2
5	Back support		1
6	Divider		1
7	Adjustable shelf		2
8	Middle shelf		1
9	Right side frame		1
10	Big drawer front		2
11	Divider front		2
12	Divider back		2
13	Big drawer bottom		2
14	Left back		1
15	H-shaped strip		1
16	Middle back		1
17	Right back		1

PARTS LIST






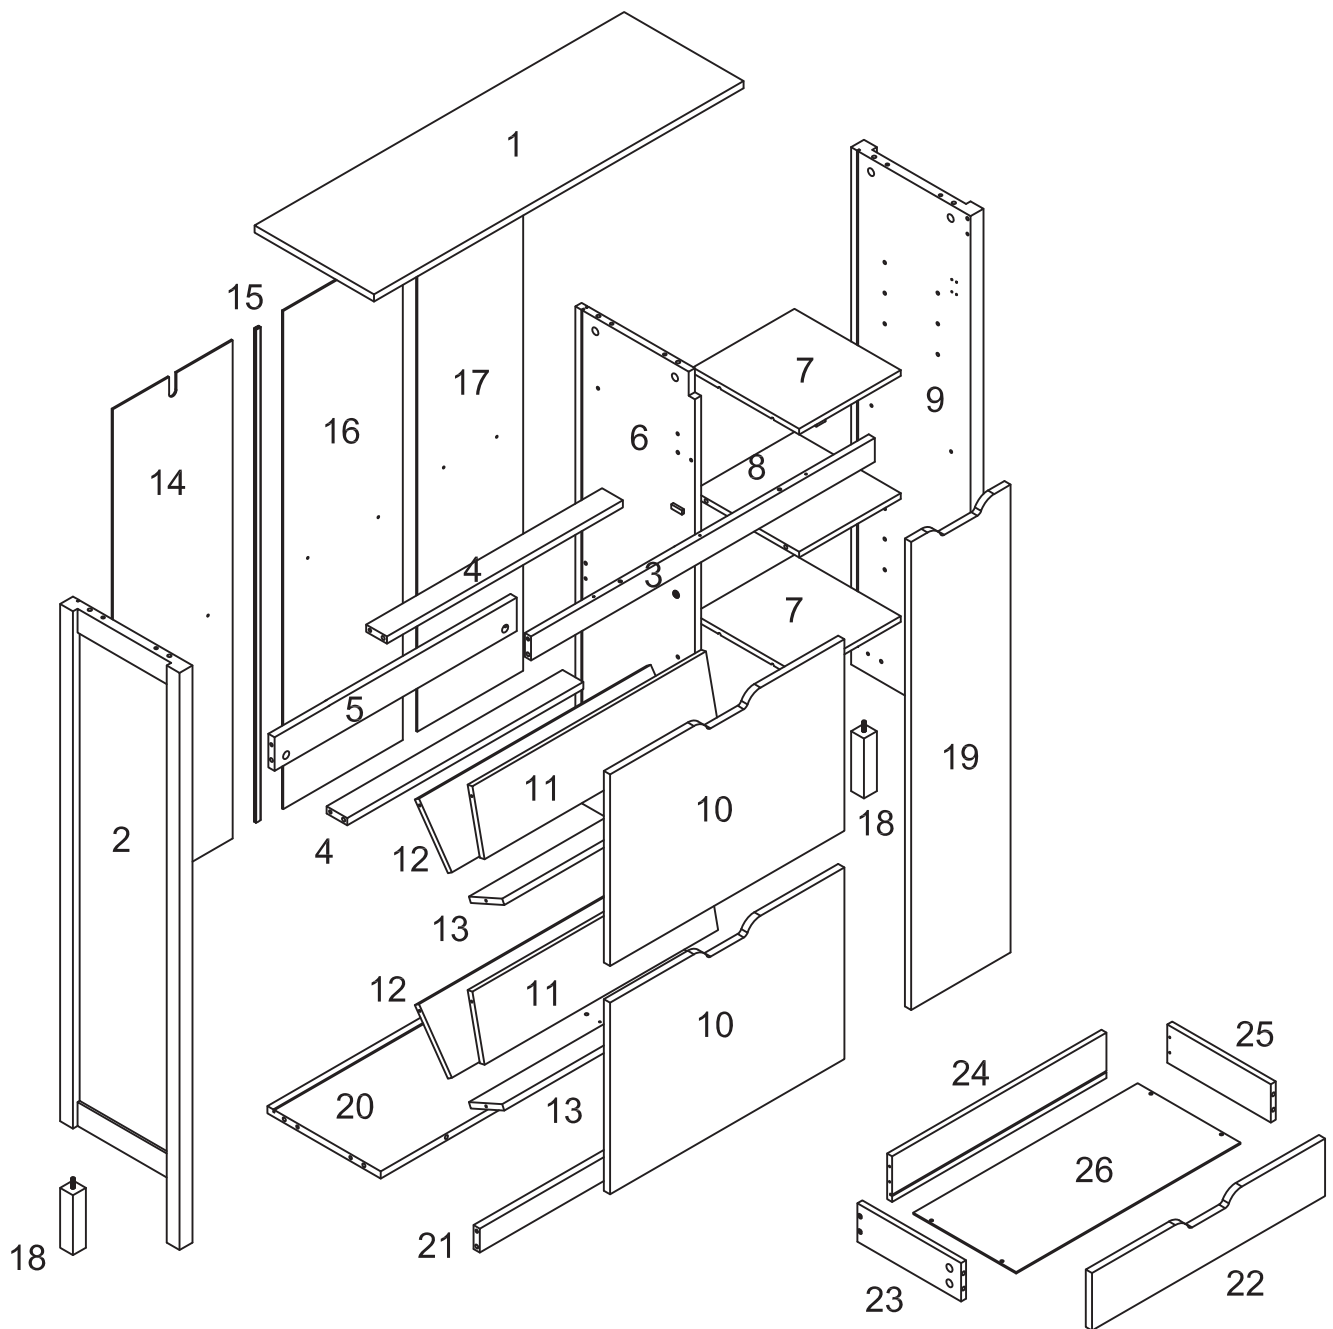










ITEM	DESCRIPTION	THUMBNAIL	QUANTITY
18	Adjustable back leg		2
19	Door		1
20	Bottom		1
21	Skirt		1
22	Small drawer front		1
23	Small drawer left		1
24	Small drawer back		1
25	Small drawer right		1
26	Small drawer bottom		1

EXPLODED PARTS












Warning: Before assembly, please check all accessories in the hardware box, and ensure parts are not missing.

HARDWARE LIST

ITEM	DESCRIPTION	THUMBNAIL	QUANTITY
A	Cam bolt		30
B	Cam lock		30
C	Wood dowel		26
D	Anti-tip bracket		2
E	Flat-head screw		8
F	Screw		2
G	Screw		4
H	Pan-head screw		2
I	Screw		3
J	Wall anchor		2
K	Screw		26
L	Backboard locker		18
M	Extension rail		1
N	Extension slide		1
O	Screw		8
P	Screw		8

HARDWARE LIST

ITEM	DESCRIPTION	THUMBNAIL	QUANTITY
Q	Left flip frame		2
R	Right flip frame		2
S	Magnetic catch		4
T	Metal plate		4
U	Screw		40
V	Screw		2
W	Shelf holder		8
X	EVA pads		4
Y	Hinge		2

BEFORE YOU BEGIN ASSEMBLY


MAKE SURE ALL PARTS ARE PRESENT

Compare all pieces to the parts and hardware lists, and make sure you have all tools required for assembly.




ASSEMBLE IN A CLEARED AREA

Place all parts from the box on the floor in front of you on a clean, dry, level surface to protect the product as it is being built.

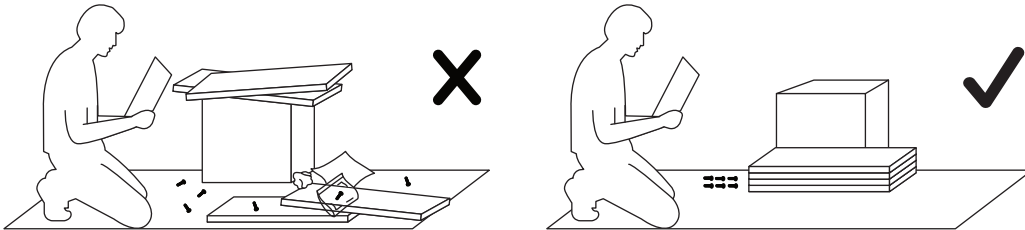


REMOVE PACKAGING MATERIALS

Place packing materials back in the box. Do not dispose of packaging materials until assembly is complete.

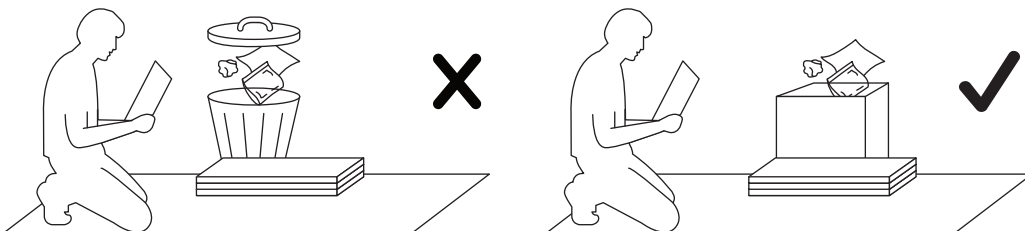





READ EACH STEP CAREFULLY

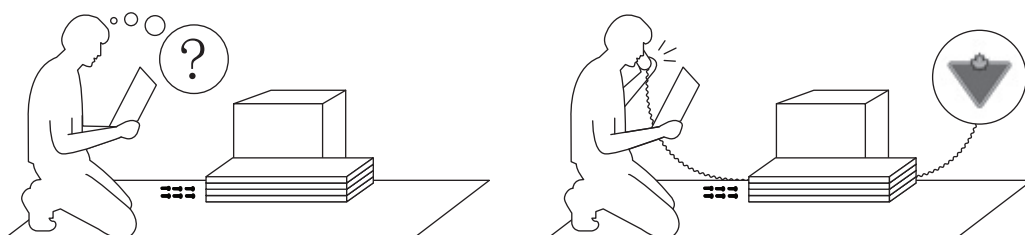Make sure you understand each step. If you have any questions, contact CANVAS® customer service at 1-888-670-6684 (toll free).




STEP-BY-STEP GUIDE

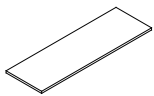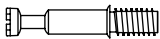STEP 1







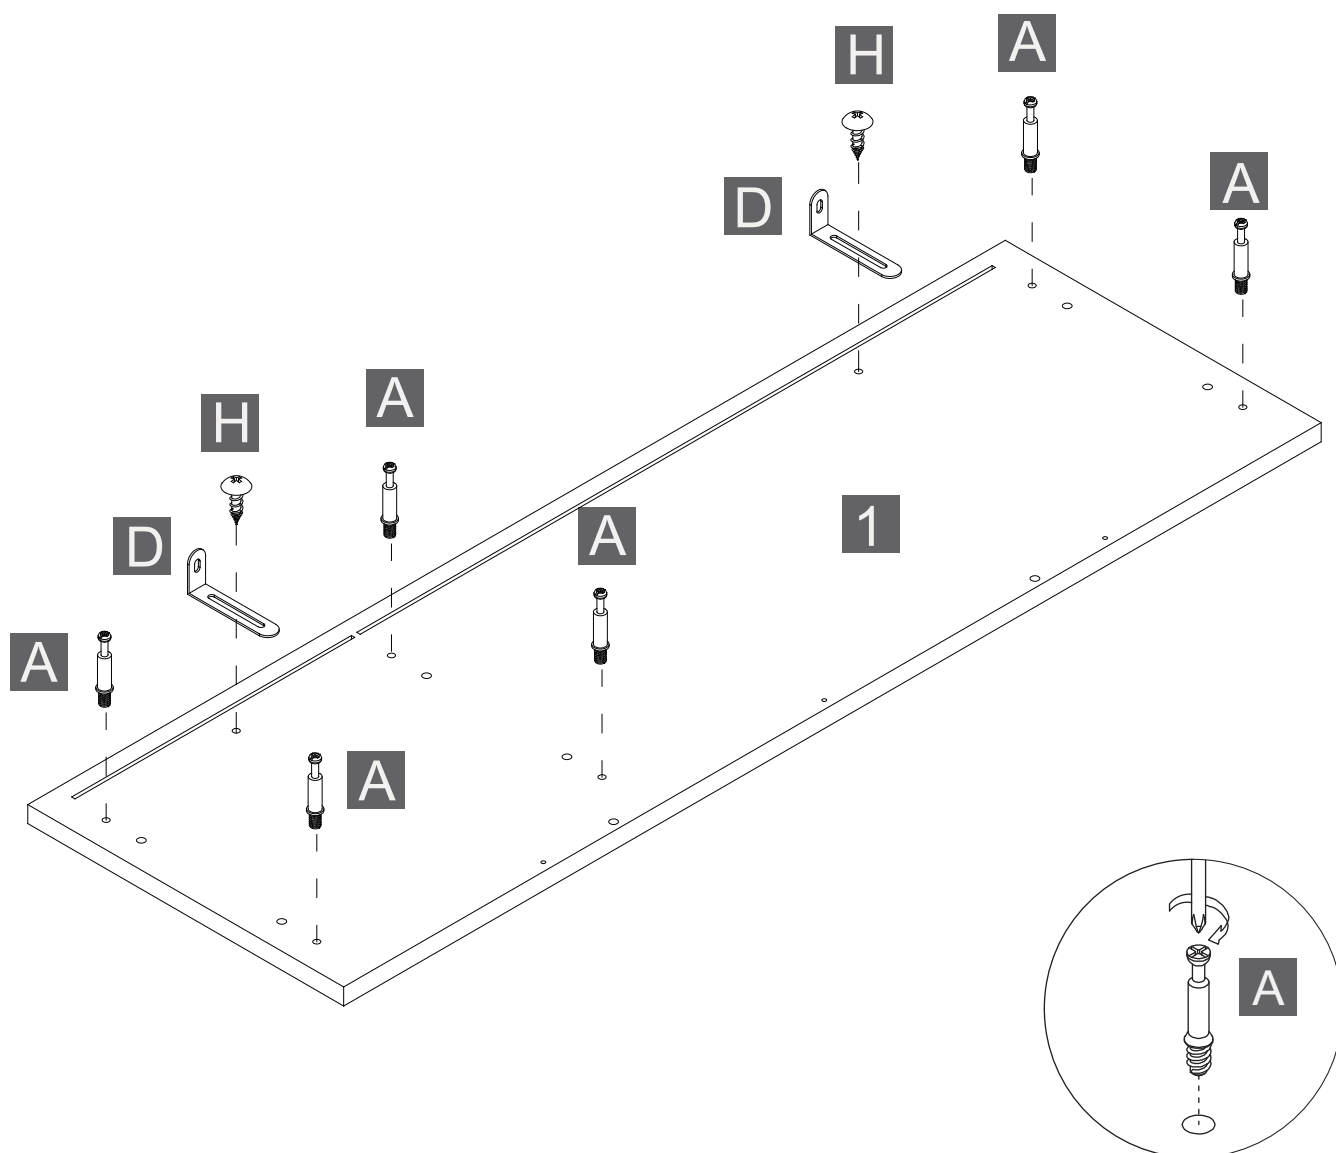

1 x1	A x6	D x2	H x2
			

Attach the anti-tip brackets **D** using two pan-head screws **H**.
Insert six cam bolts **A** into the top **1**.
Tighten all screws and cam bolts.



STEP-BY-STEP GUIDE

STEP 2

2 x1	18 x1	21 x1	A x9	E x2	K x4	S x2	M x1
							


Insert nine cam bolts **A** into the left side frame **2** and skirt **21**.

Insert two flat-head screws **E** through the extension rail **M-CL** (cabinet left) into the left side frame **2**.

Insert four screws **K** through the two magnetic catches **S** into the left side frame **2**.


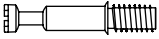


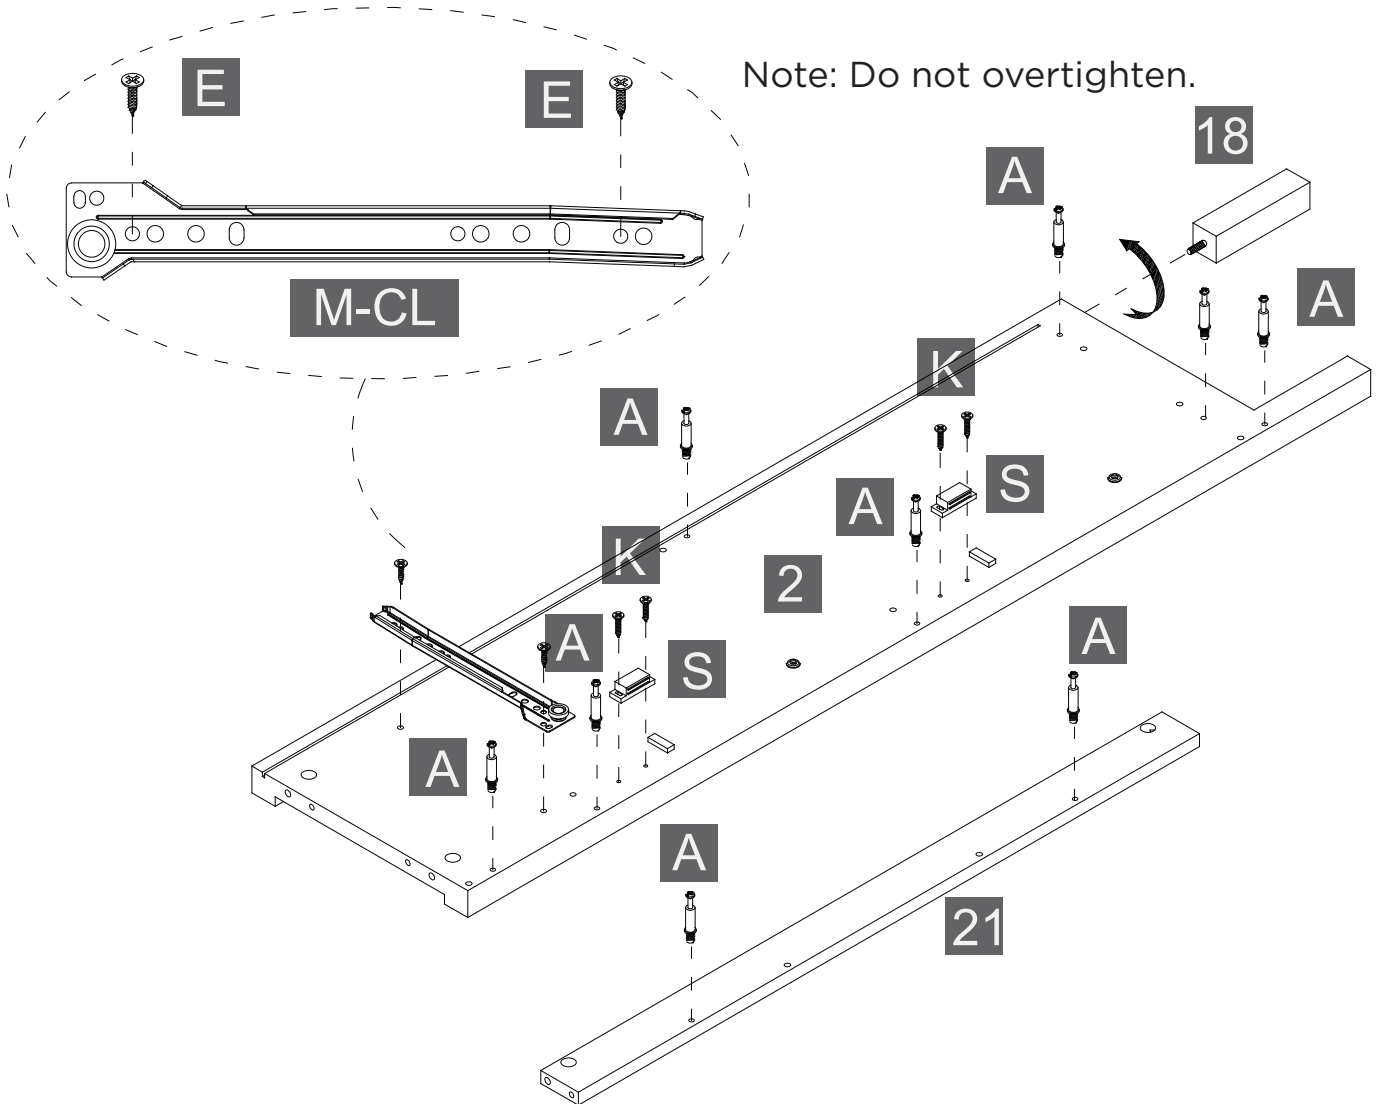

Screw one adjustable back leg **18** into the left side frame **2**.

Tighten all cam bolts and screws.



STEP-BY-STEP GUIDE


STEP 3

6 x1	A x5	E x2	K x4	S x2	M x1
					


Insert five cam bolts **A** into the divider **6**.

Insert two flat-head screws **E** through the extension rail **M-CR** (cabinet right) into the divider **6**.

Insert four screws **K** through two magnetic catches **S** into the divider **6**.
Tighten all cam bolts and screws.

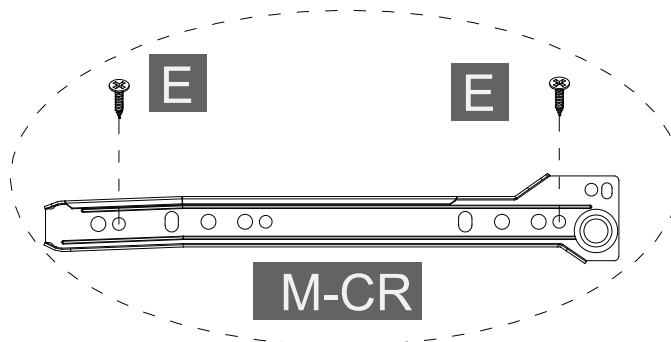


Note: Do not overtighten.

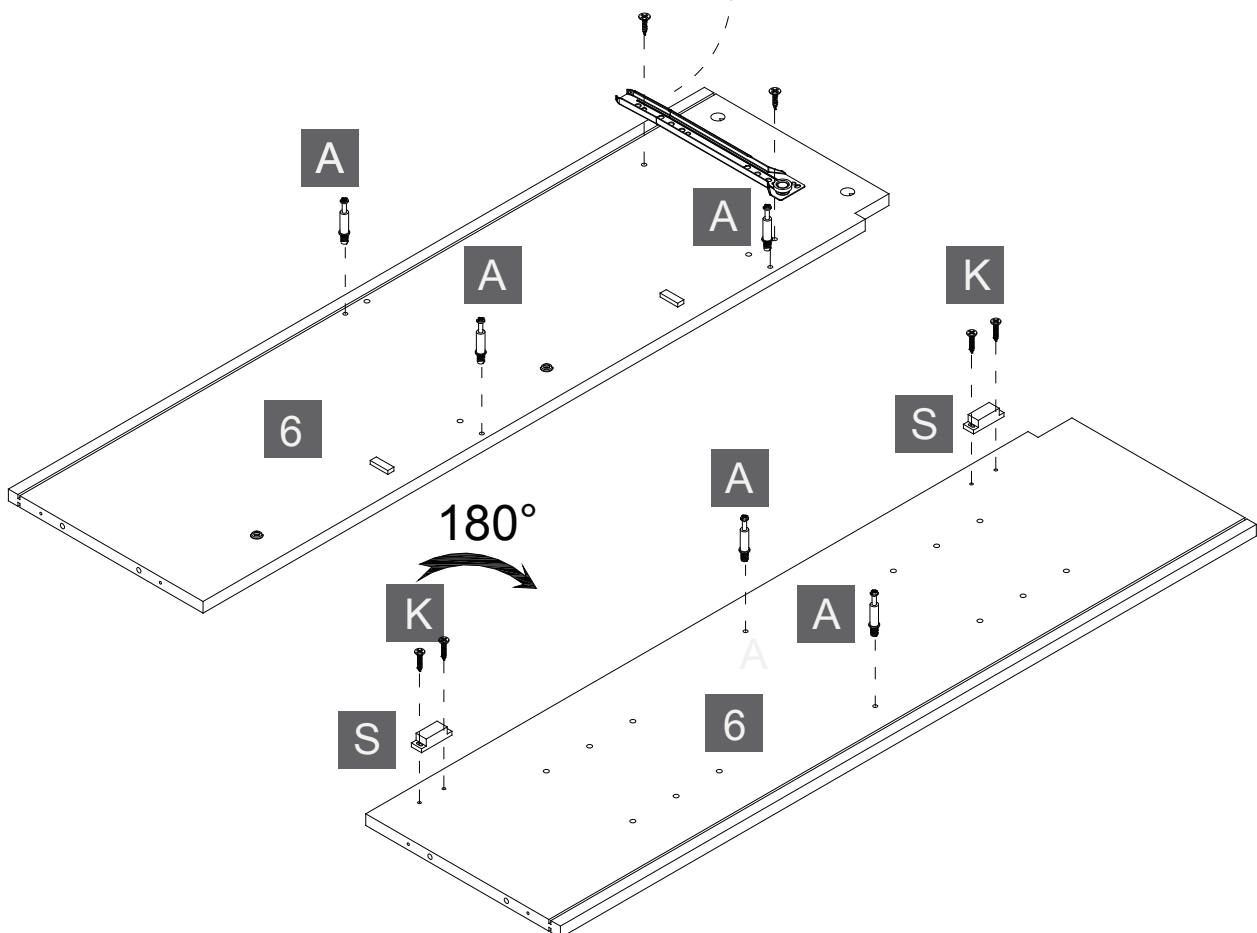


STEP-BY-STEP GUIDE

STEP 4

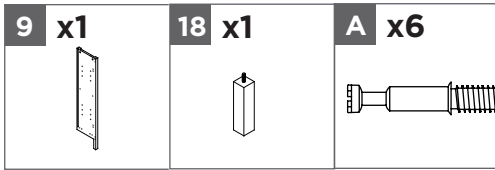


Insert six cam bolts **A** into the right side frame **9**.
Screw the adjustable back leg **18** into the right side frame **9**.
Tighten all cam bolts.

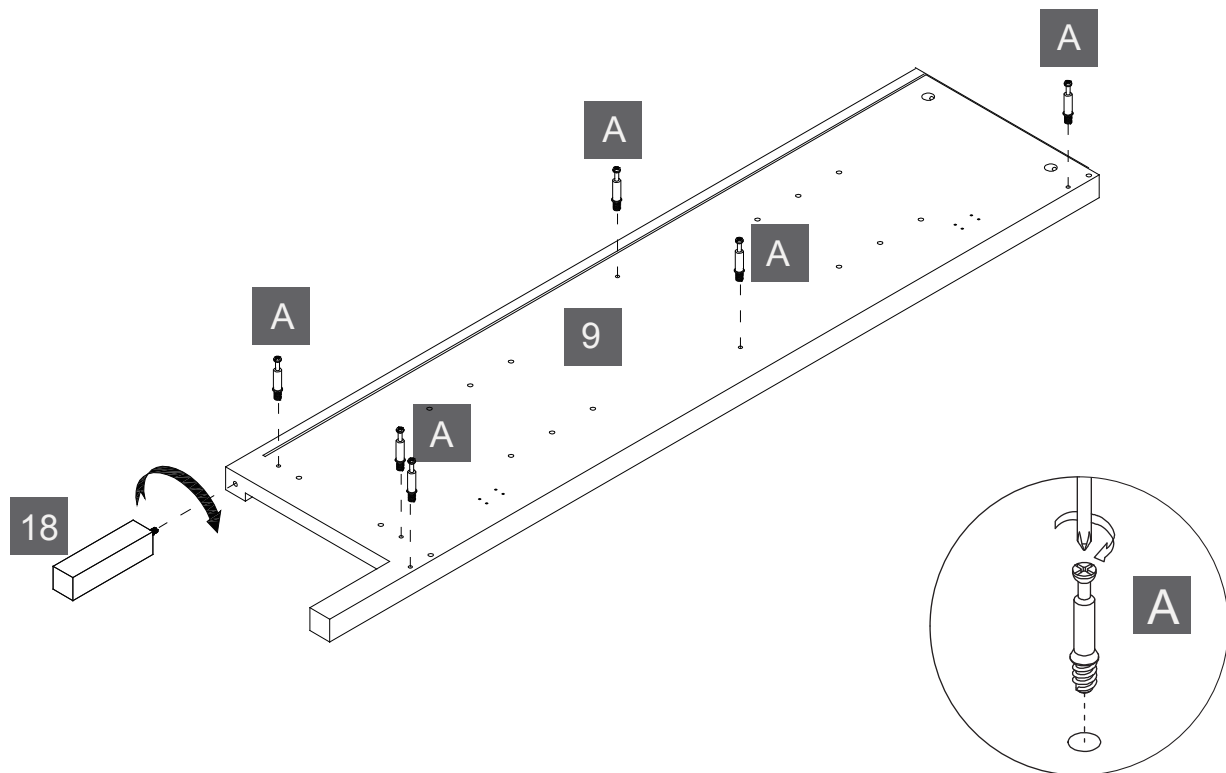


STEP-BY-STEP GUIDE

STEP 5

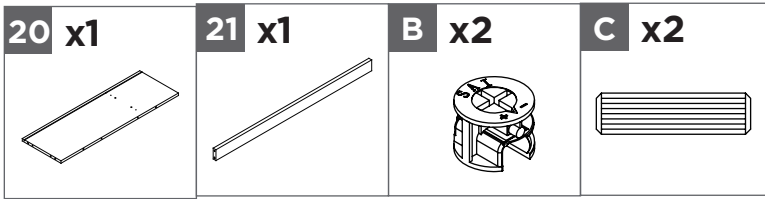


Insert two wood dowels **C** into the bottom **20**.
Attach the skirt **21** to the bottom **20**.
Insert two cam locks **B** into the bottom **20**.
Tighten all cam locks.

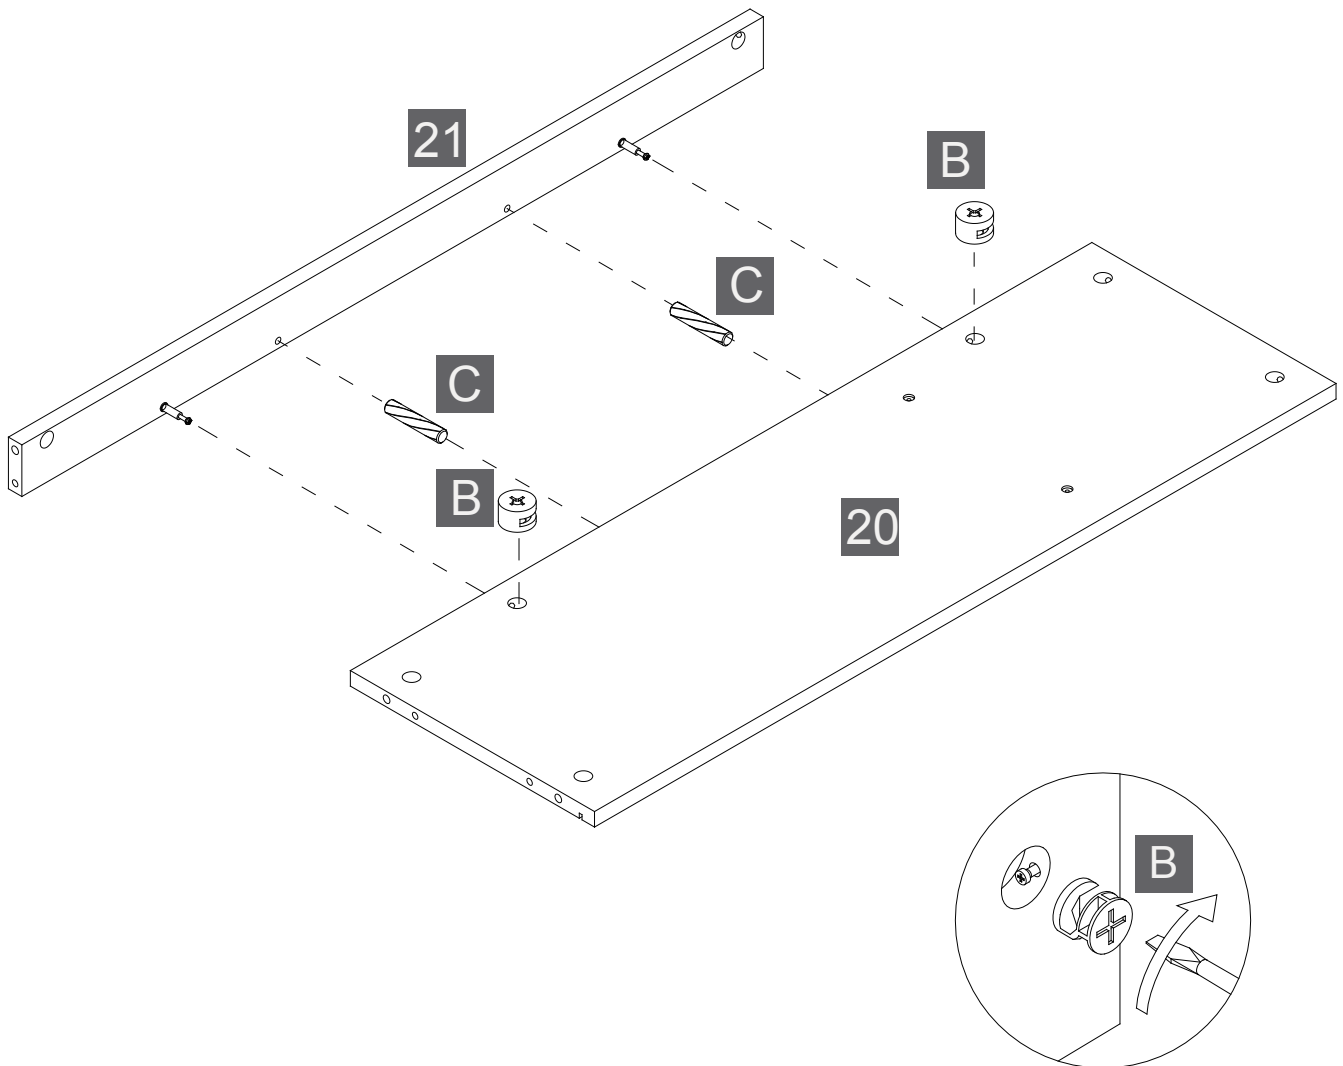


STEP-BY-STEP GUIDE

STEP 6

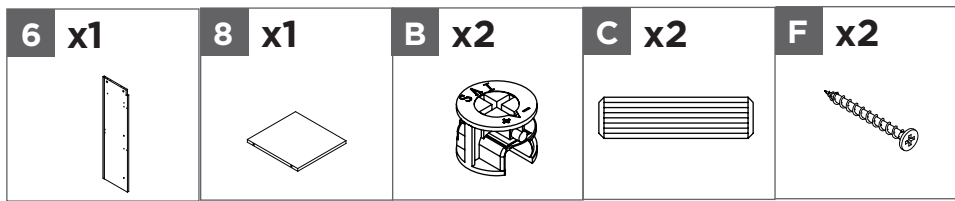


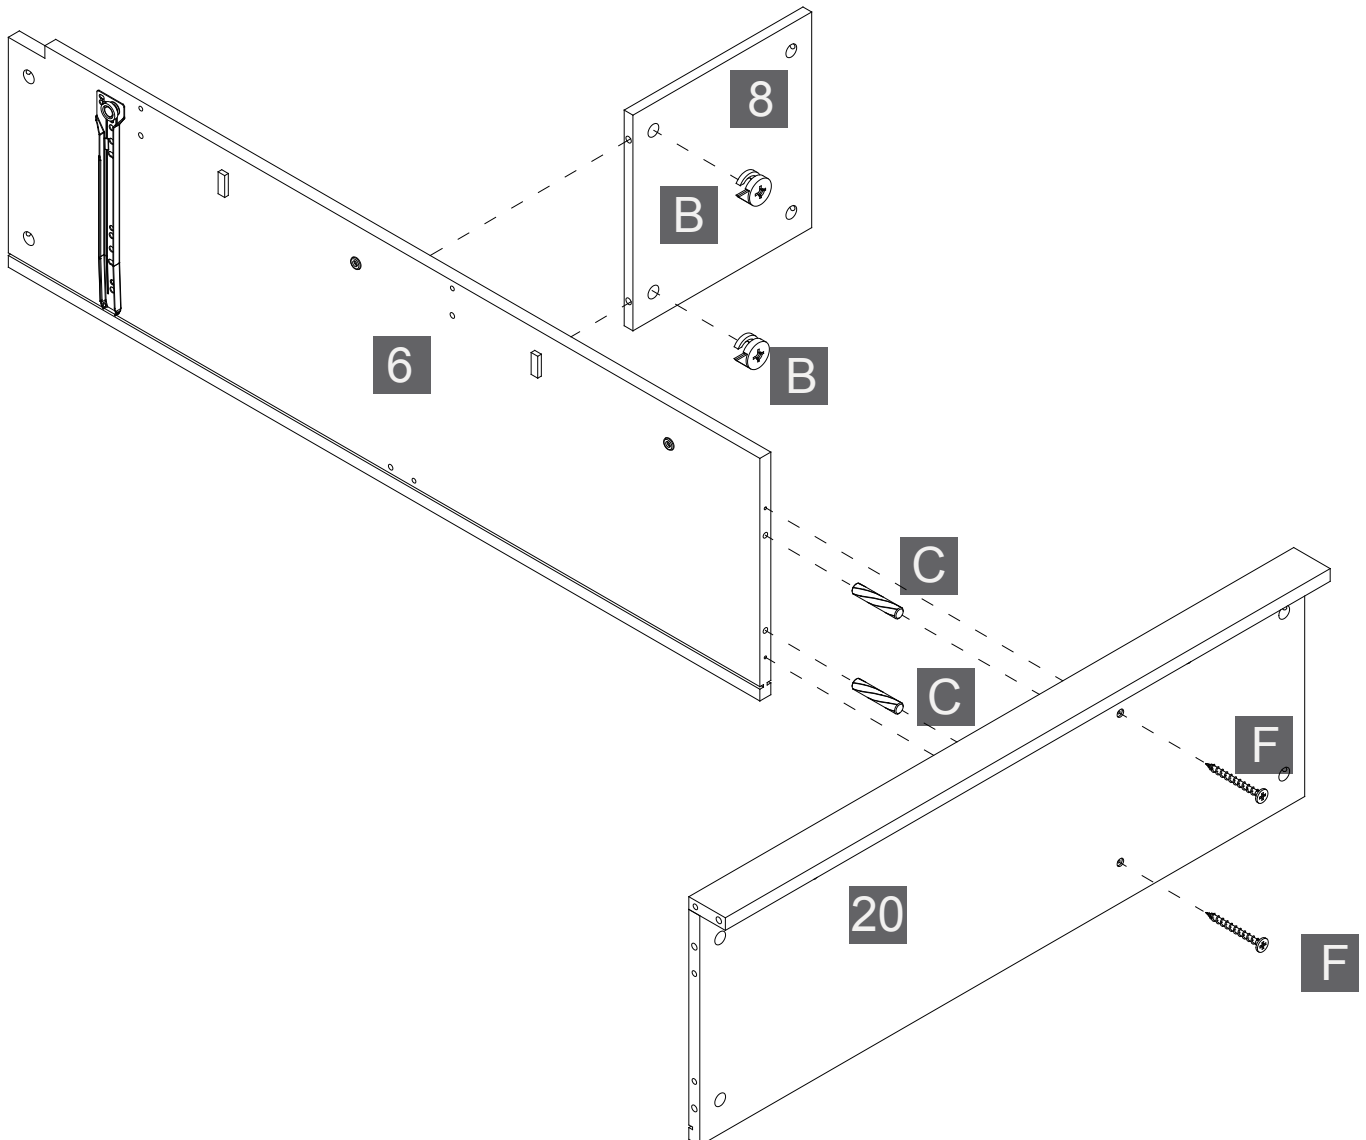


Insert two wood dowels **C** into the divider **6**.
Attach the middle shelf **8** and bottom **20** to the divider **6**.
Insert two cam locks **B** into the middle shelf **8**.
Insert two screws **F** through the bottom **20** into the divider **6**.
Tighten all cam locks and screws.



STEP-BY-STEP GUIDE

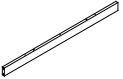STEP 7


3 x1	9 x1	B x6	C x4
			

Insert four wood dowels **C** into the top support **3** and bottom **20** and skirt **21**.
Fit the top support **3** into the cutout in divider **6**.

Attach the right side panel **9** to the top support **3**, middle shelf **8**, bottom **20** and skirt **21**.


Insert six cam locks **B** into the top support **3**, middle shelf **8**, bottom **20** and skirt **21**.

Tighten all cam locks.

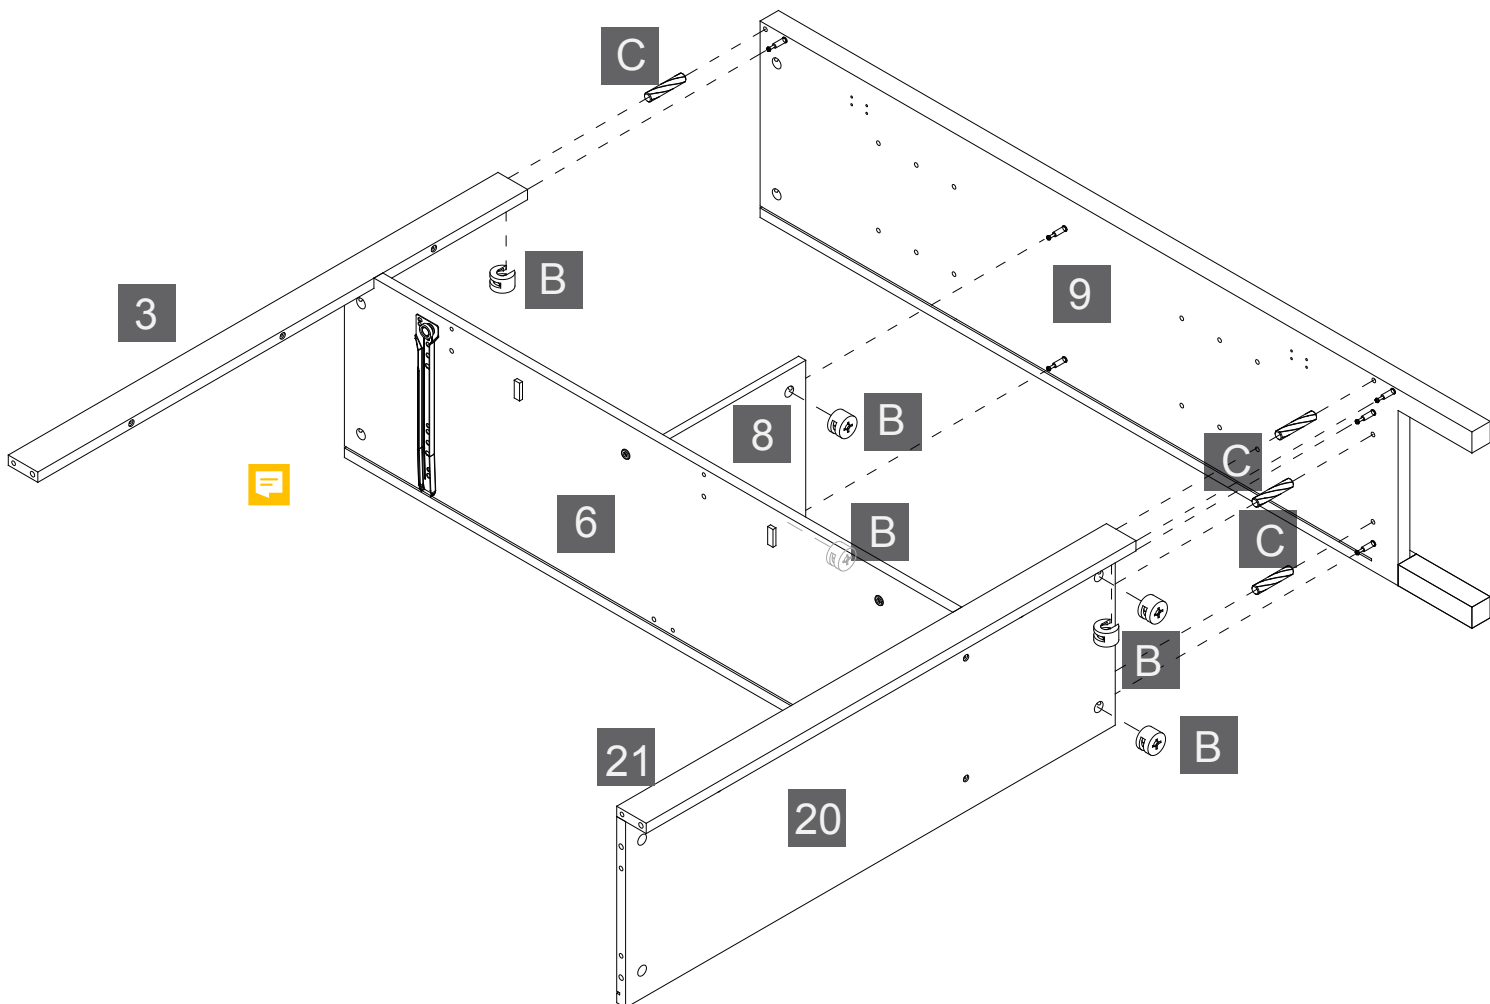


STEP-BY-STEP GUIDE

STEP 8

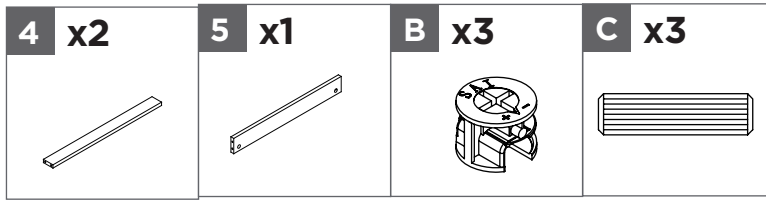


Insert three wood dowels **C** into the connections **4** and back support **5**.
Attach the connections **4** and back support **5** to divider **6**.
Insert three cam locks **B** into the connections **4** and back support **5**.
Tighten all cam locks.

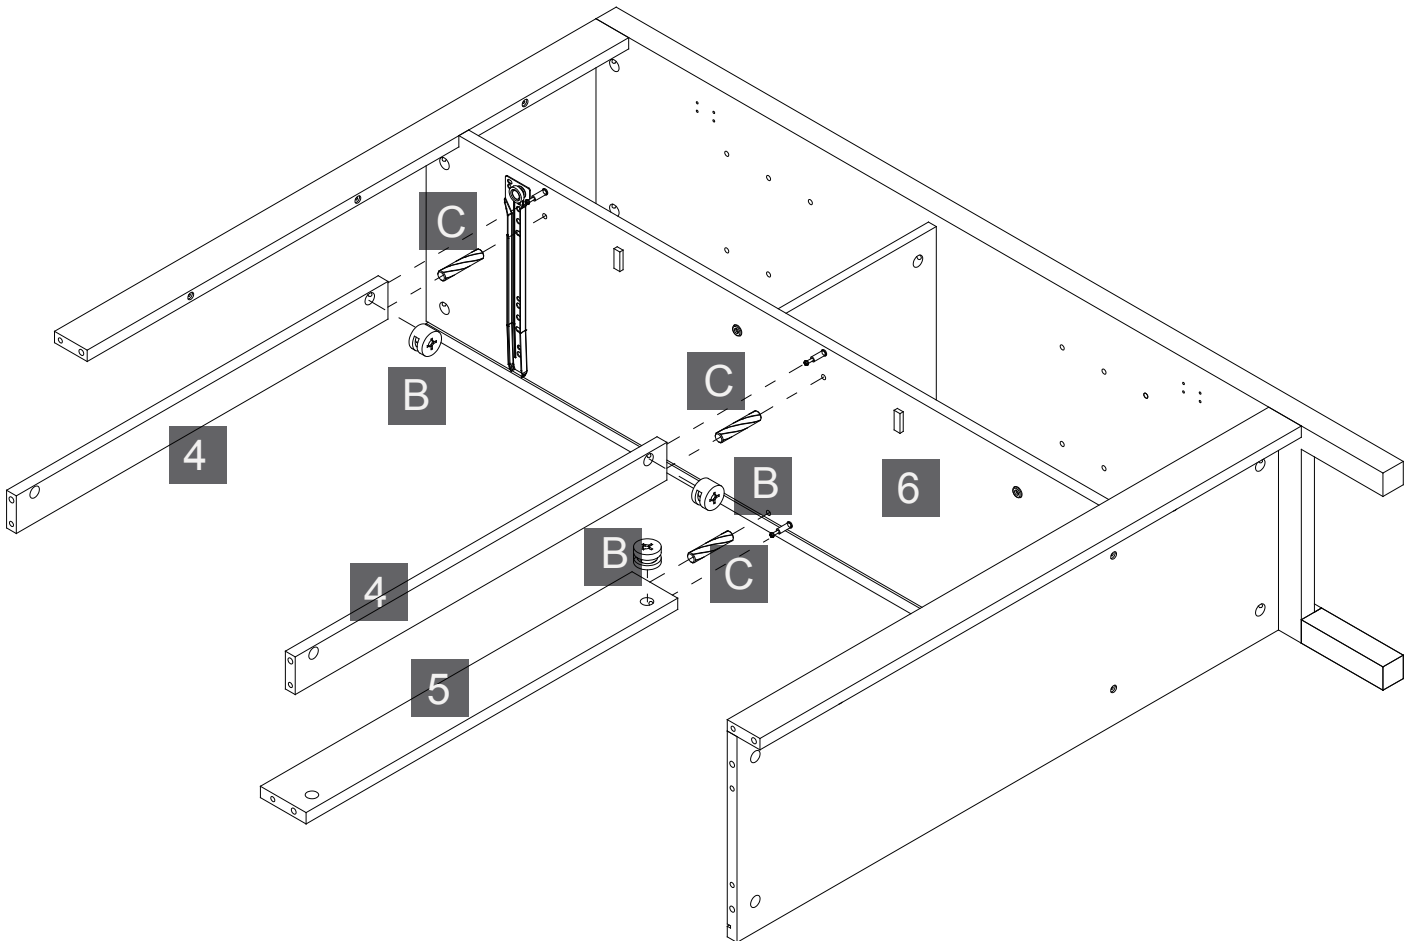

STEP-BY-STEP GUIDE

STEP 9

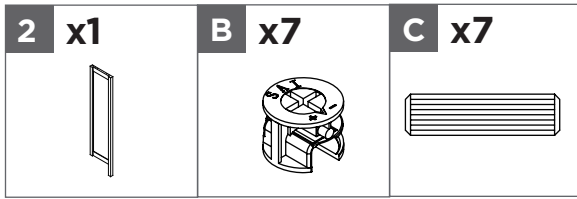


Insert seven wood dowels **C** into the top support **3**, connections **4**, back support **5**, bottom **20**, and skirt **21**.

Attach the left side frame **2** to the top support **3**, connections **4**, back support **5**, bottom **20**, and skirt **21**.

Insert seven cam locks **B** into the top support **3**, connections **4**, back support **5**, bottom **20**, and skirt **21**.

Tighten all cam locks.

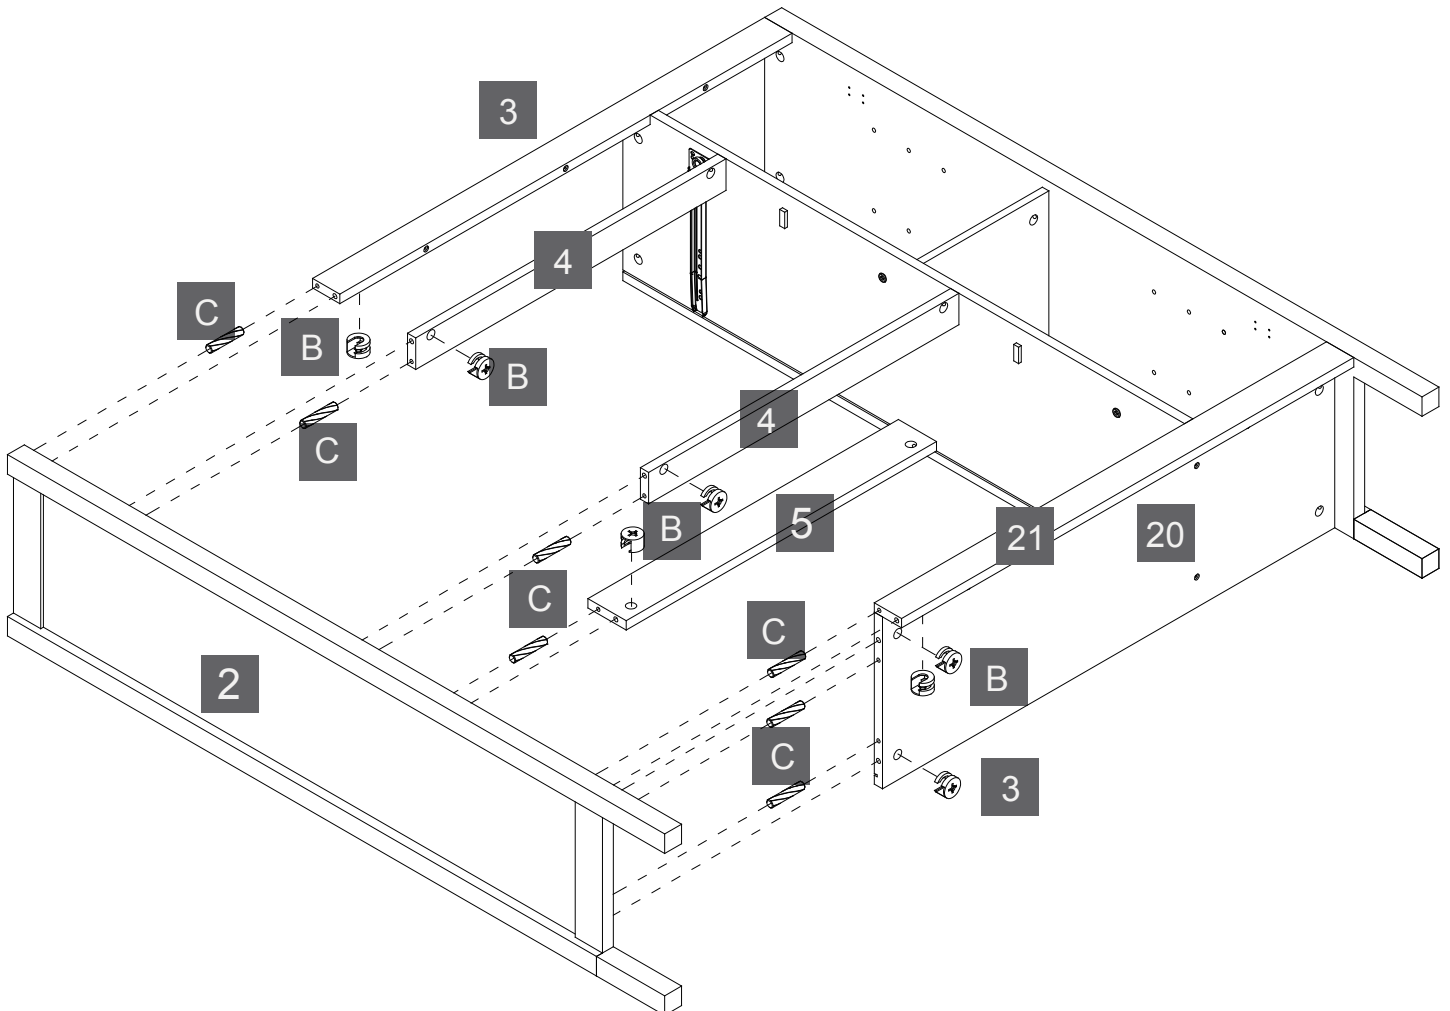


STEP-BY-STEP GUIDE

STEP 10

X x4




Place the EVA pads **X** on the bottom of the legs.

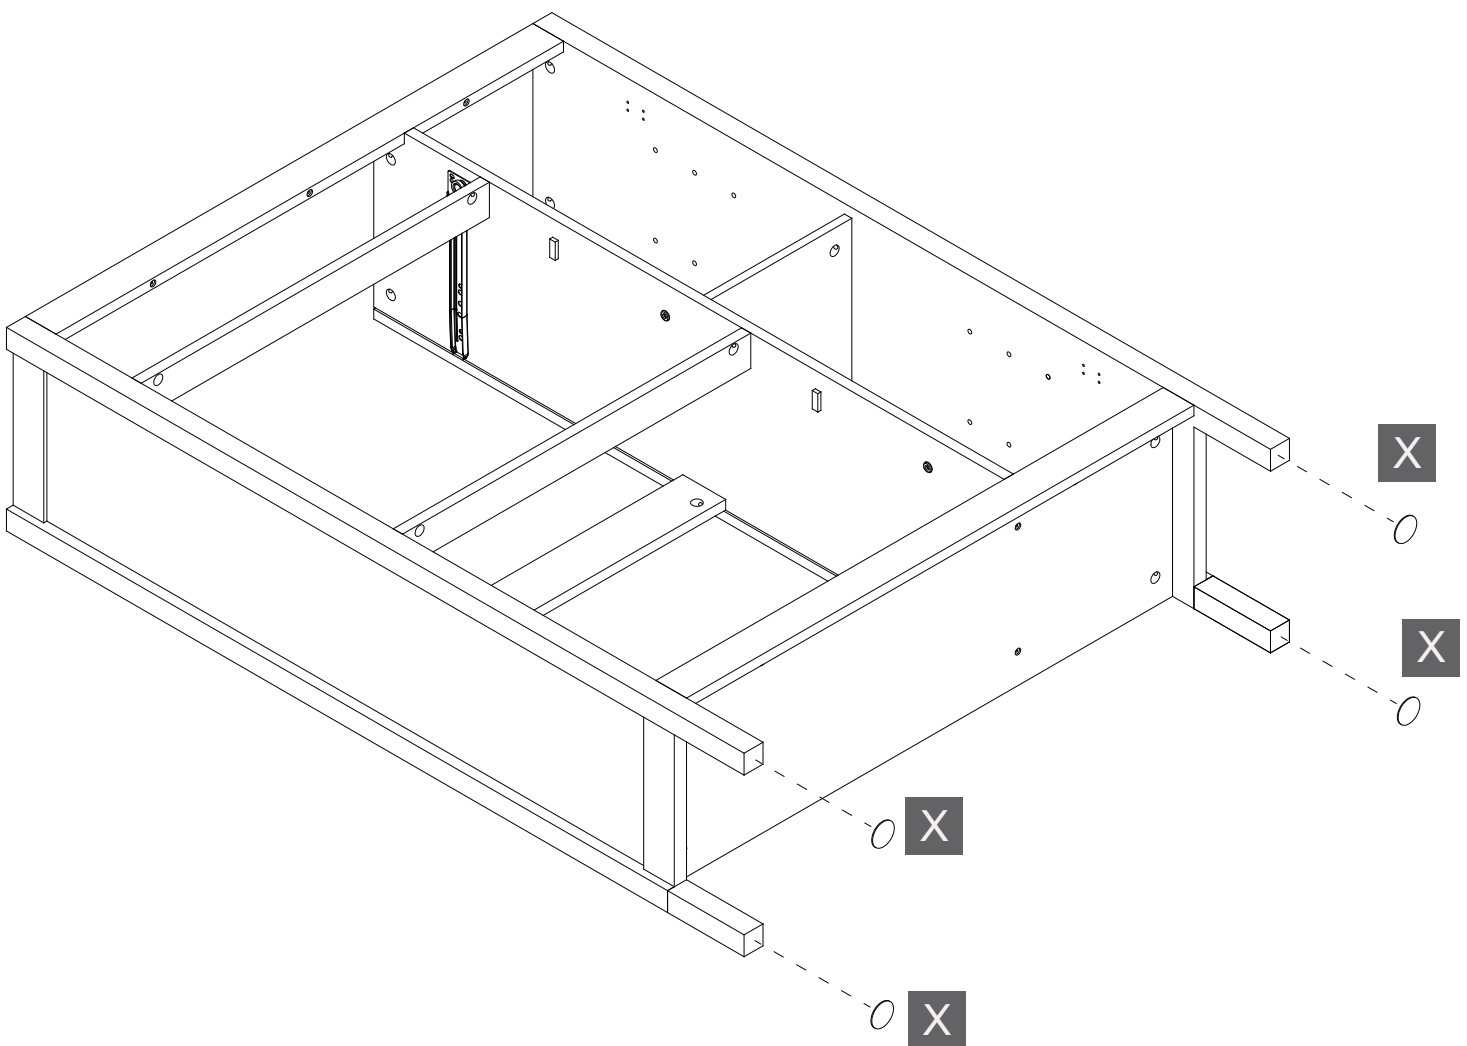

STEP-BY-STEP GUIDE

STEP 11

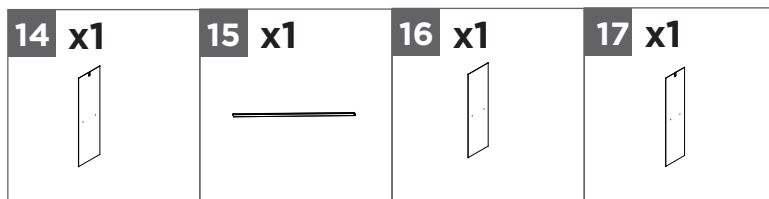


Insert the left back **14**, H-shaped strip **15** and middle back **16** into the groove between the left side frame **2** and divider **6**.

Insert the right back **17** into the groove between the divider **6** and right side frame **9**.





Make equal margins along all four edges of the left back **14**, middle back **16** and right back **17**.

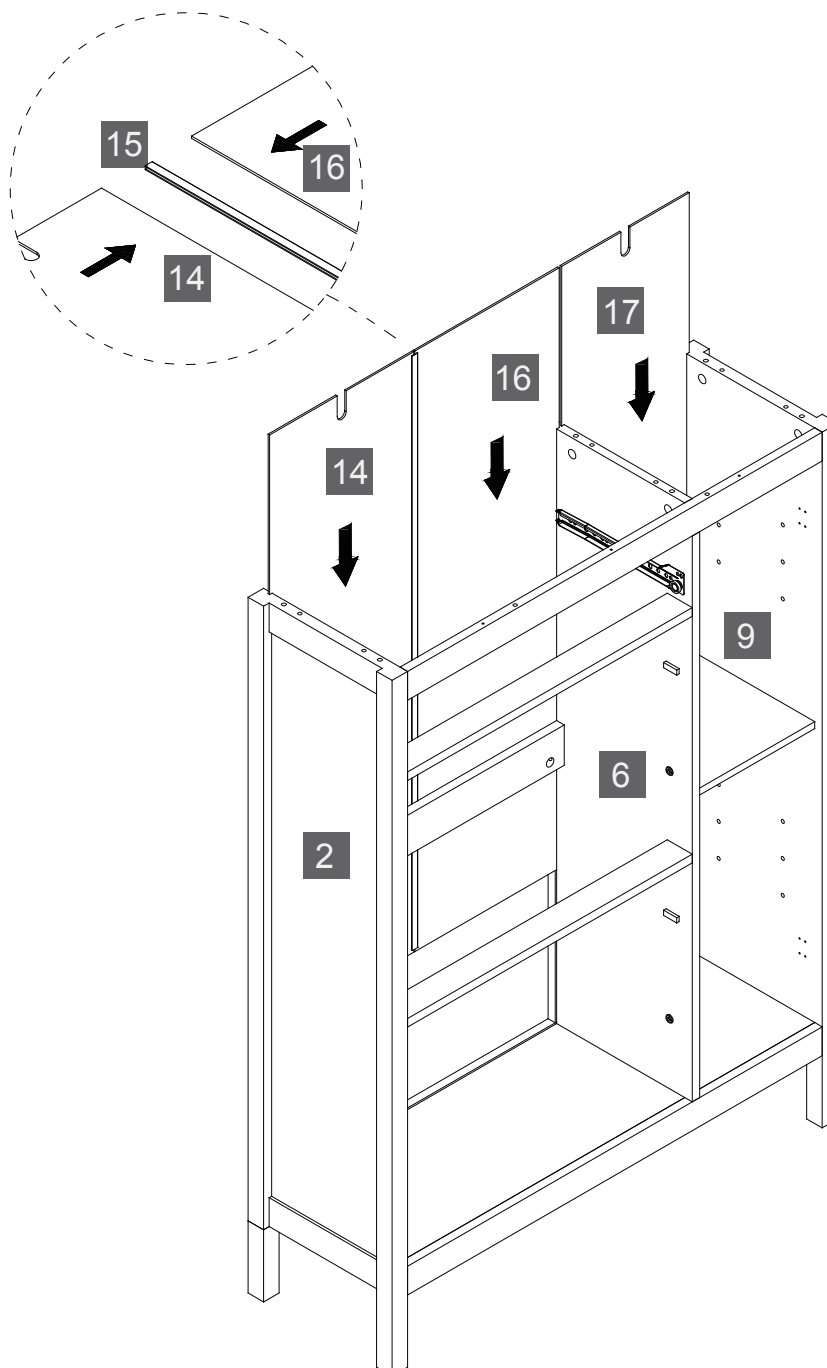Push on opposite corners of your unit if needed to make it “square”.



STEP-BY-STEP GUIDE

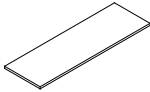STEP 12

1 x1	B x6	C x8	I x3
			


Insert eight wood dowels **C** into the left side frame **2**, top support **3**, divider **6** and right side frame **9**.

Attach the top **1** into the left side frame **2**, top support **3**, divider **6** and right side frame **9**.

Insert six cam locks **B** into the left side frame **2**, divider **6** and right side frame **9**.


Insert three screws **I** through top support **3** into the top **1**.

Tighten all cam locks and screws.

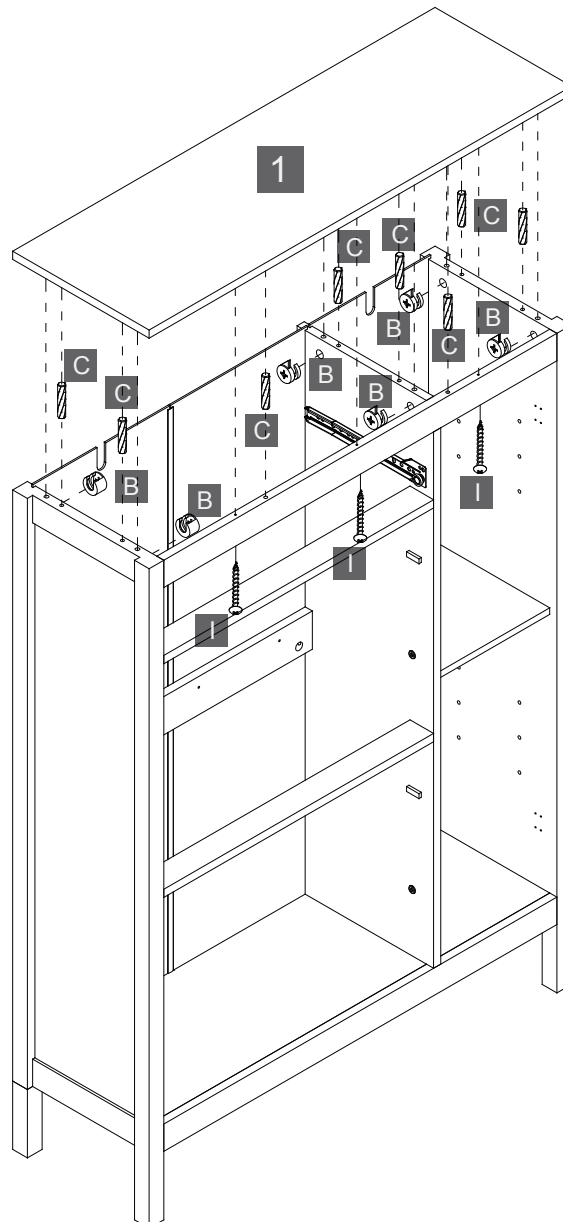


STEP-BY-STEP GUIDE

STEP 13

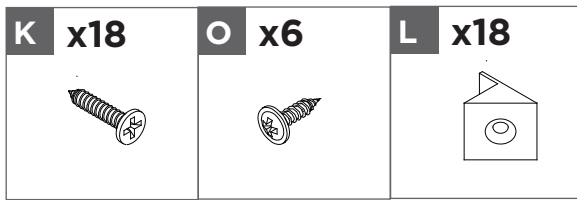


Insert eighteen screws **K** through the backboard locker **L** into the groove as shown. Insert six screws **O** through the backs into the back support **5**. Tighten all screws.

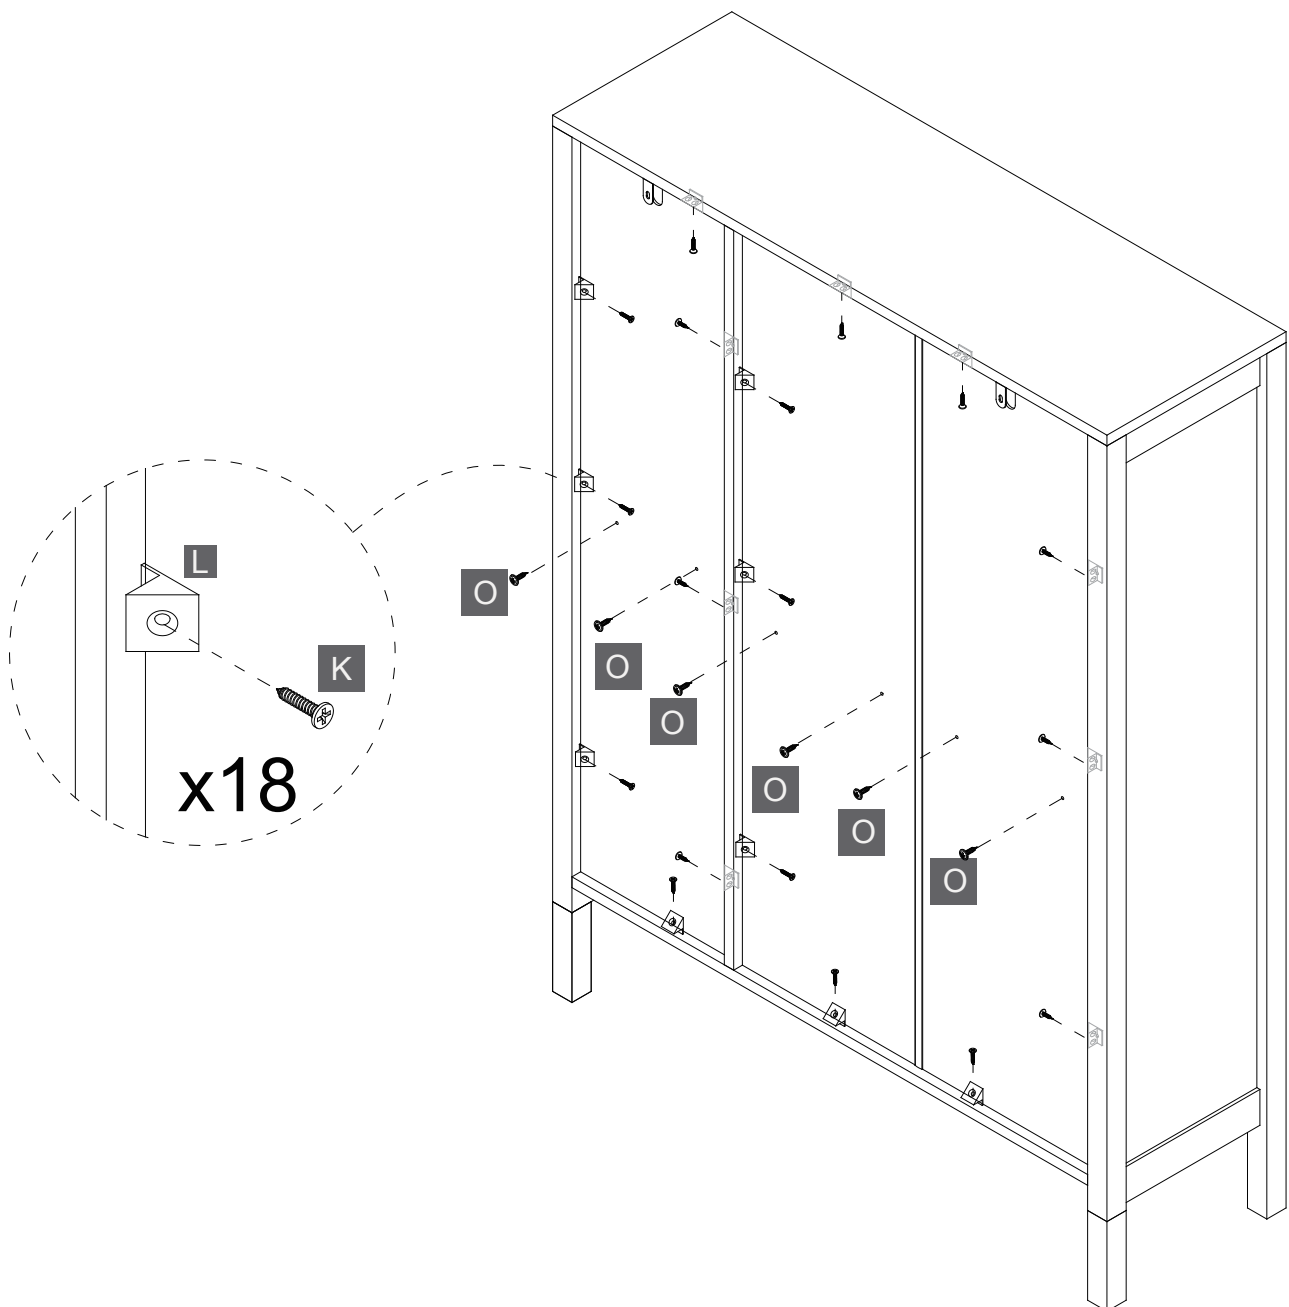


STEP-BY-STEP GUIDE

STEP 14

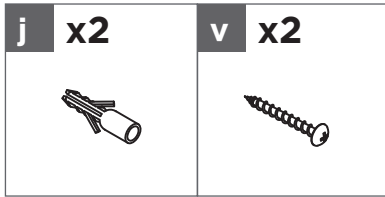

Using the anti-tip brackets **D** as a guide, mark two points on the wall, drill a hole at each mark, hammer two wall anchors **J** into the wall and fasten the anti-tip brackets **D** to the wall using two screws **V** screwed into the wall anchors **J**.

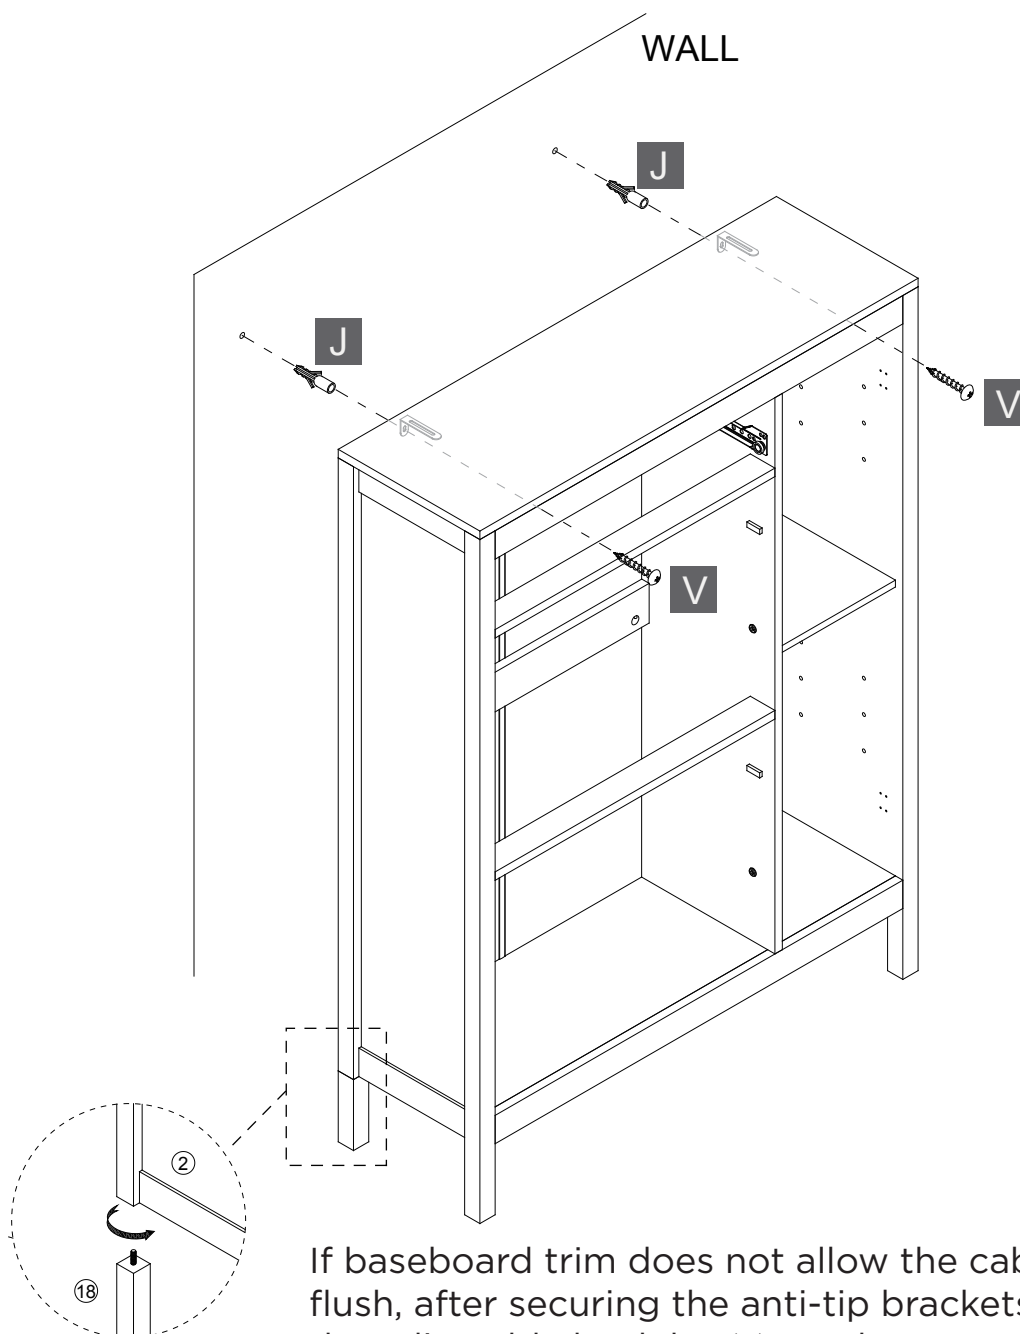


If baseboard trim does not allow the cabinet to sit flush, after securing the anti-tip brackets to the wall, the adjustable back leg(s) can be removed.

STEP-BY-STEP GUIDE

STEP 15


7 x2

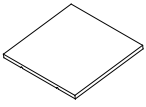

W x8





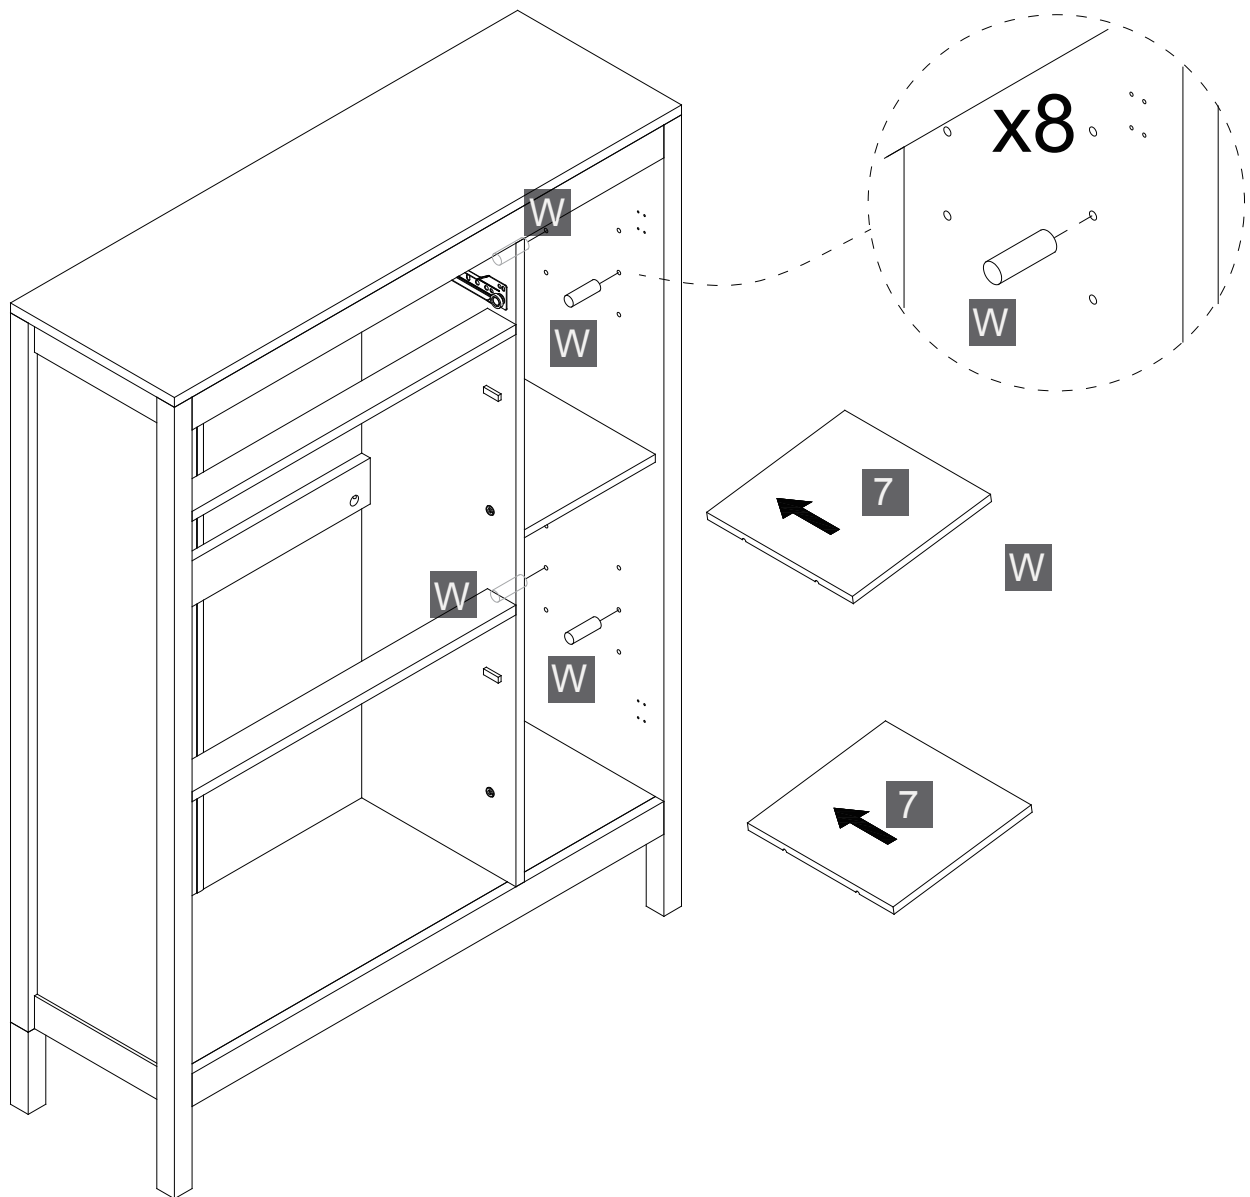


Insert eight shelf holders **W** into the pre-drilled holes as shown. Place the adjustable shelves **7** on the shelf holders **W**.




STEP-BY-STEP GUIDE

STEP 16

19 x1	Y x2	U x4	P x4	T x2
				


Insert four screws **U** through hinges **Y** into the door **19**.
Insert four screws **P** through metal plates **T** into the door **19**.
Tighten all screws.

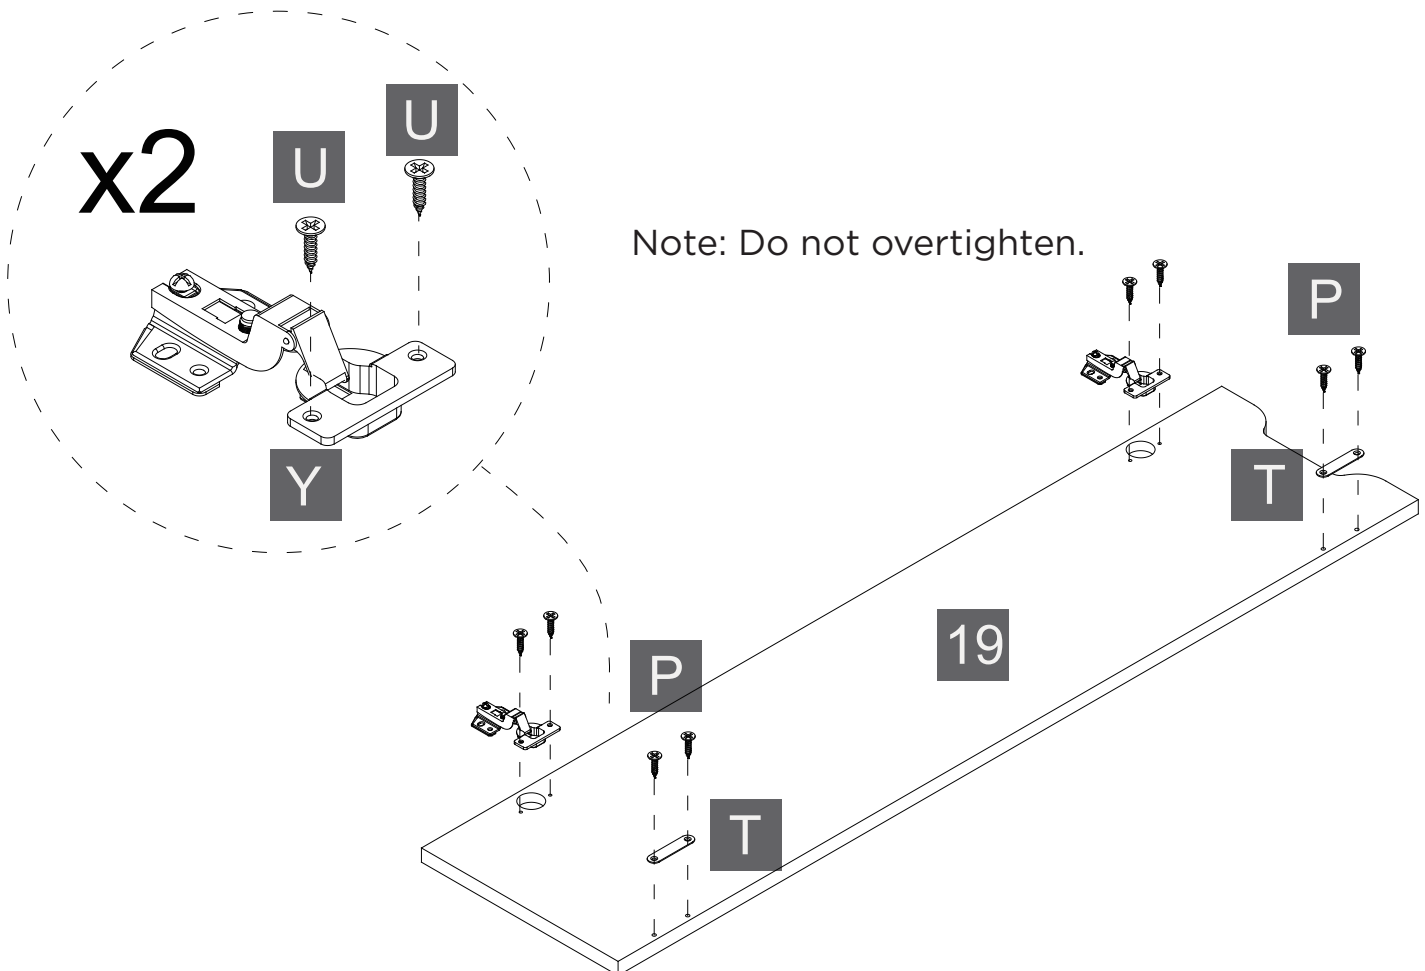

STEP-BY-STEP GUIDE

STEP 17




19 x1

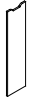

U x8









Insert eight screws **U** through hinges **Y** into the right side frame **9** and fasten the hinges to the right side frame **9**.
Tighten all screws.

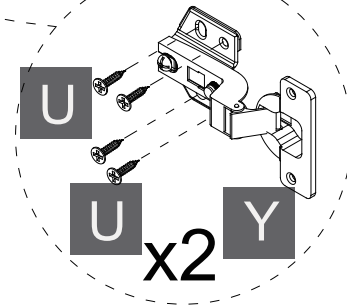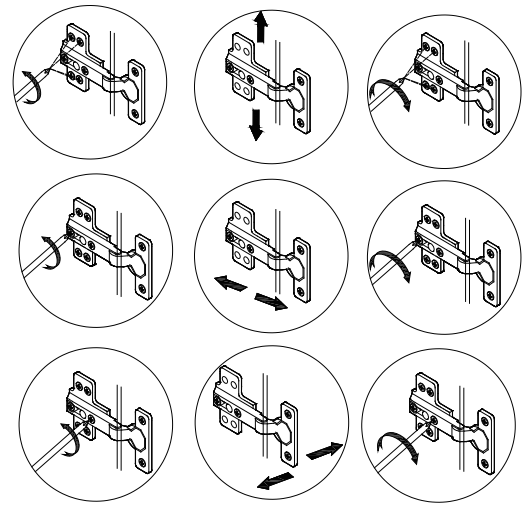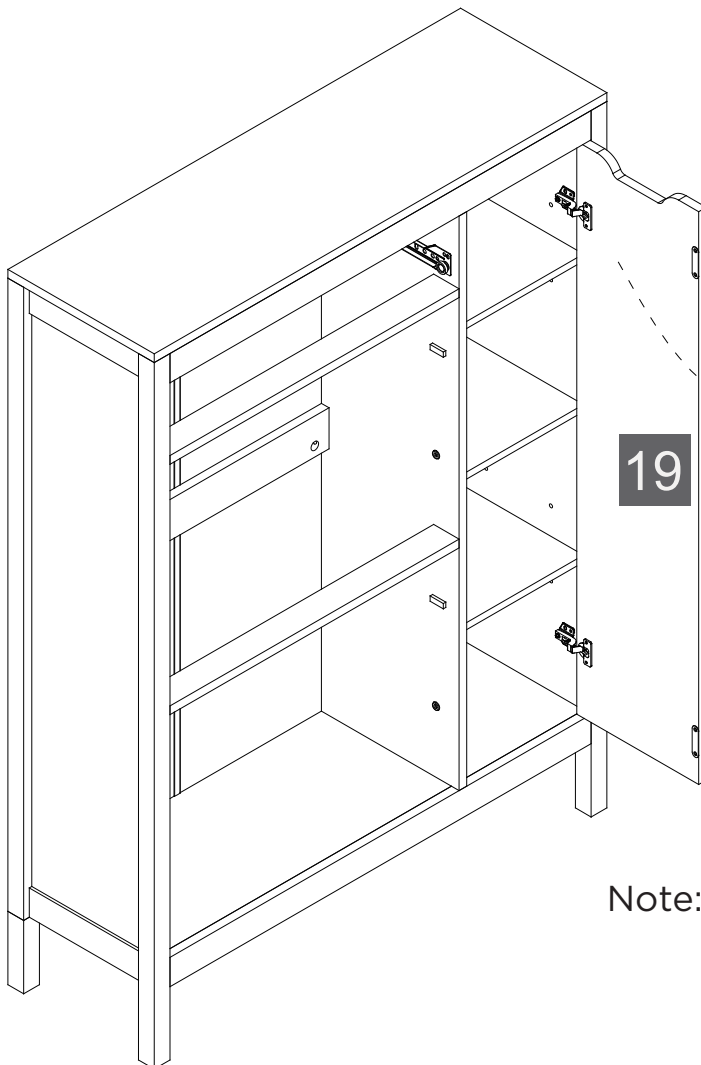

Note: Do not overtighten.

STEP-BY-STEP GUIDE


STEP 18

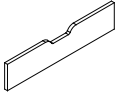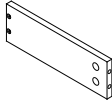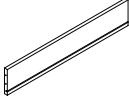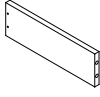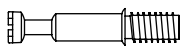22 x1	23 x1	24 x1	25 x1	A x4	G x4
					

Insert four cam bolts **A** into the small drawer front **22**.

Insert four screws **G** through small drawer left **23** and small drawer right **25** into small drawer back **24**.


Tighten all cam bolts and screws.

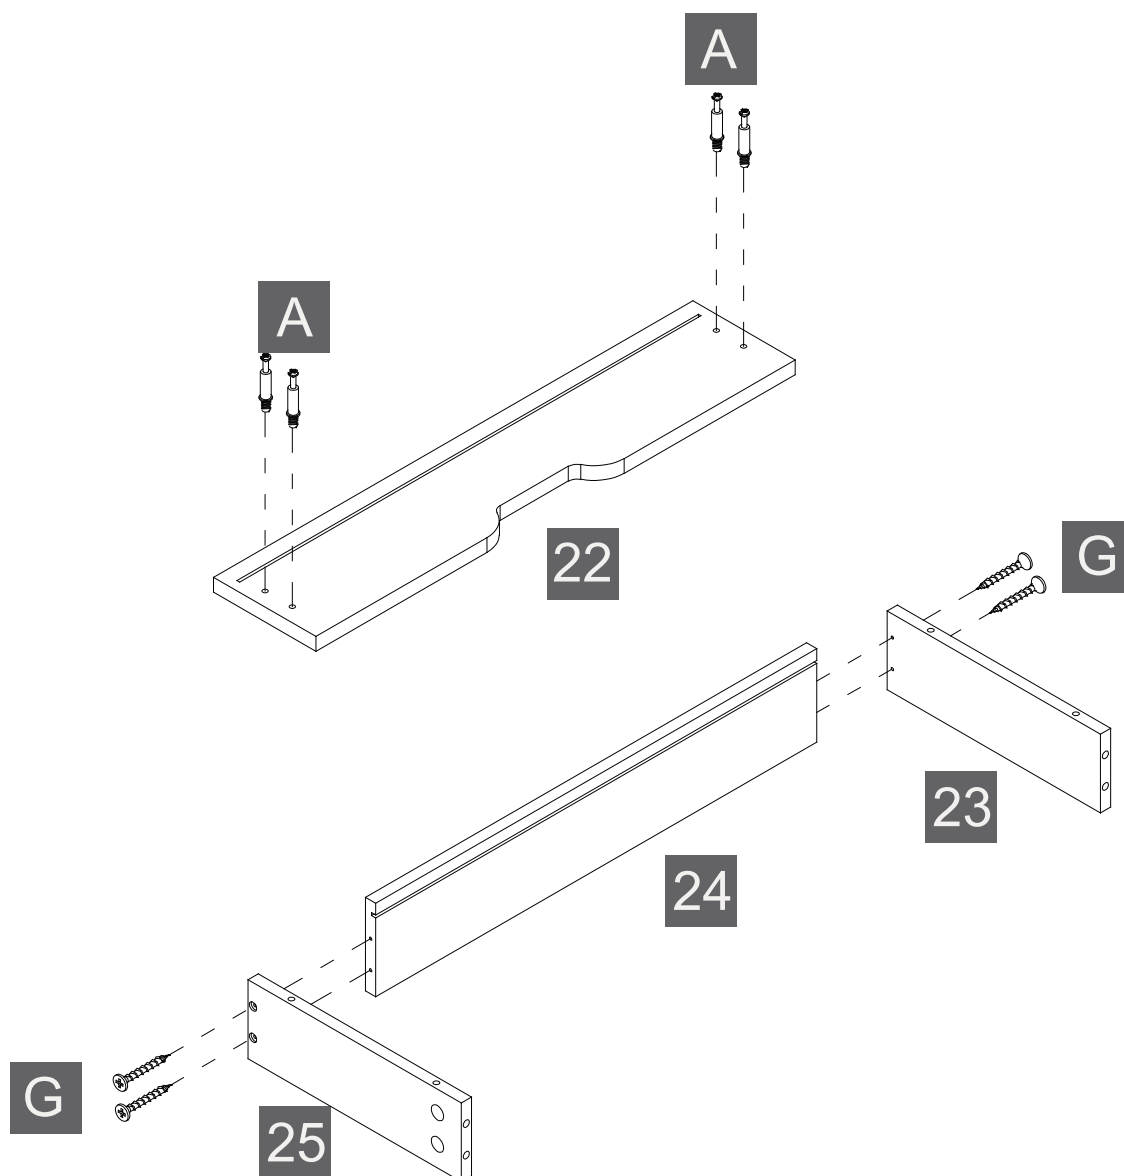


STEP-BY-STEP GUIDE

STEP 19

26 x1

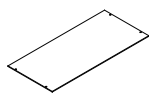


B x4

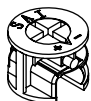

Insert small drawer bottom **26** into the groove around the bottom of the small drawer left **23**, small drawer right **25** and small drawer back **24**.


Attach the small drawer front **22** to the small drawer left **23** and small drawer right **25**.

Insert four cam locks **B** into the small drawer left **23** and small drawer right **25**. Tighten all cam locks.

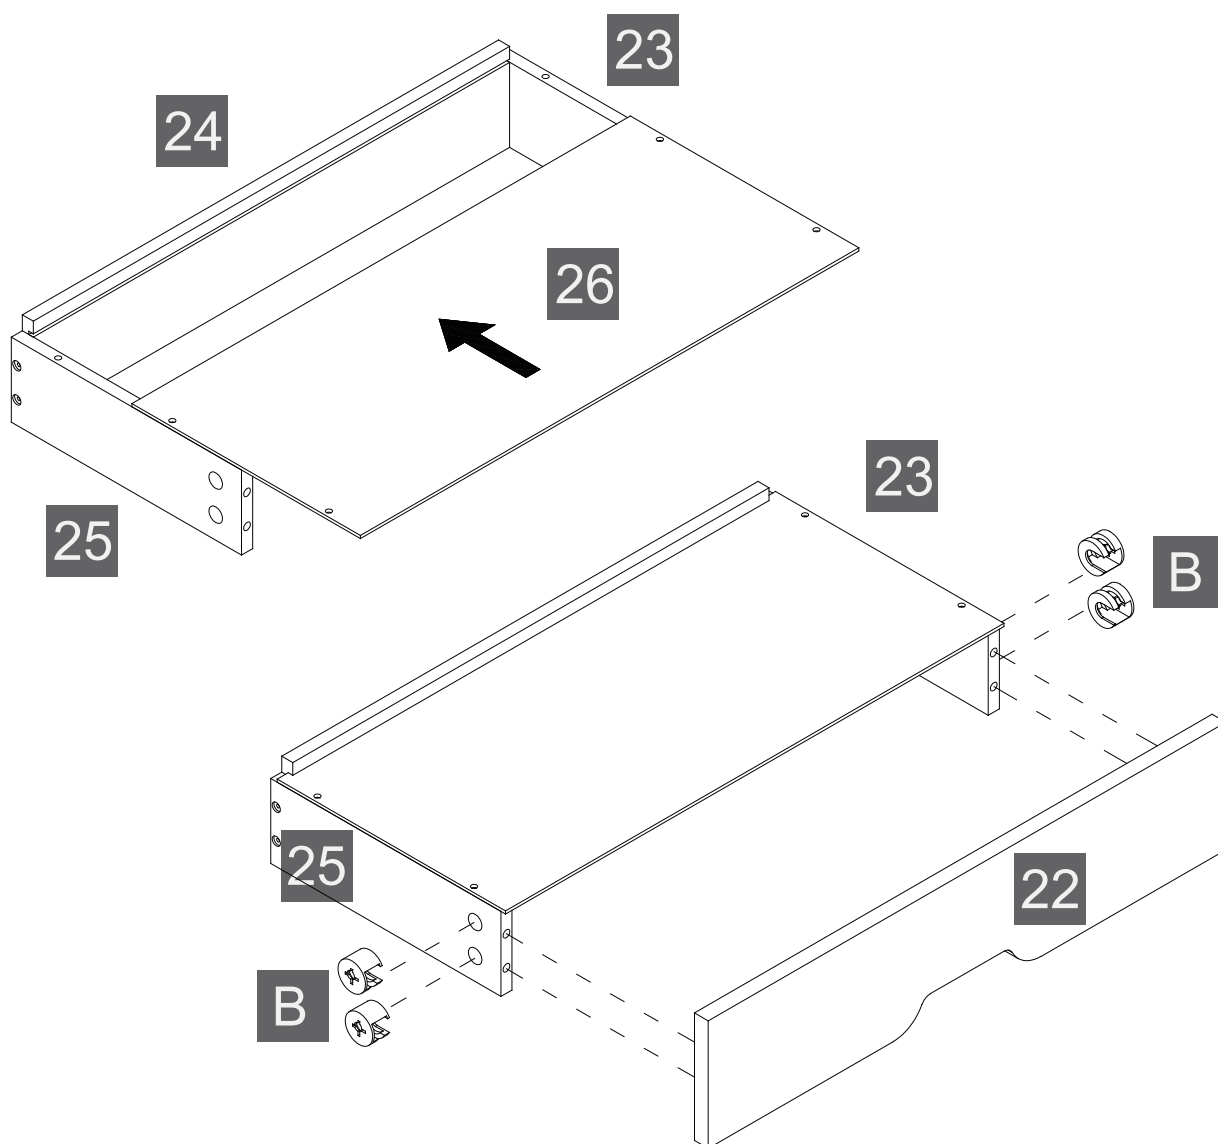

STEP-BY-STEP GUIDE

STEP 20

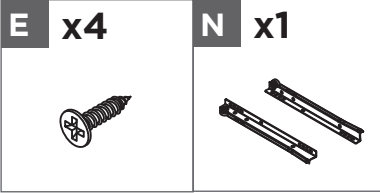


Insert two flat-head screws **E** through the extension slide **N-DL** (drawer left) into the small drawer left **23**.

Insert two flat-head screws **E** through the extension slide **N-DR** (drawer right) into the small drawer right **25**.

Tighten all screws.


Note: Do not overtighten.

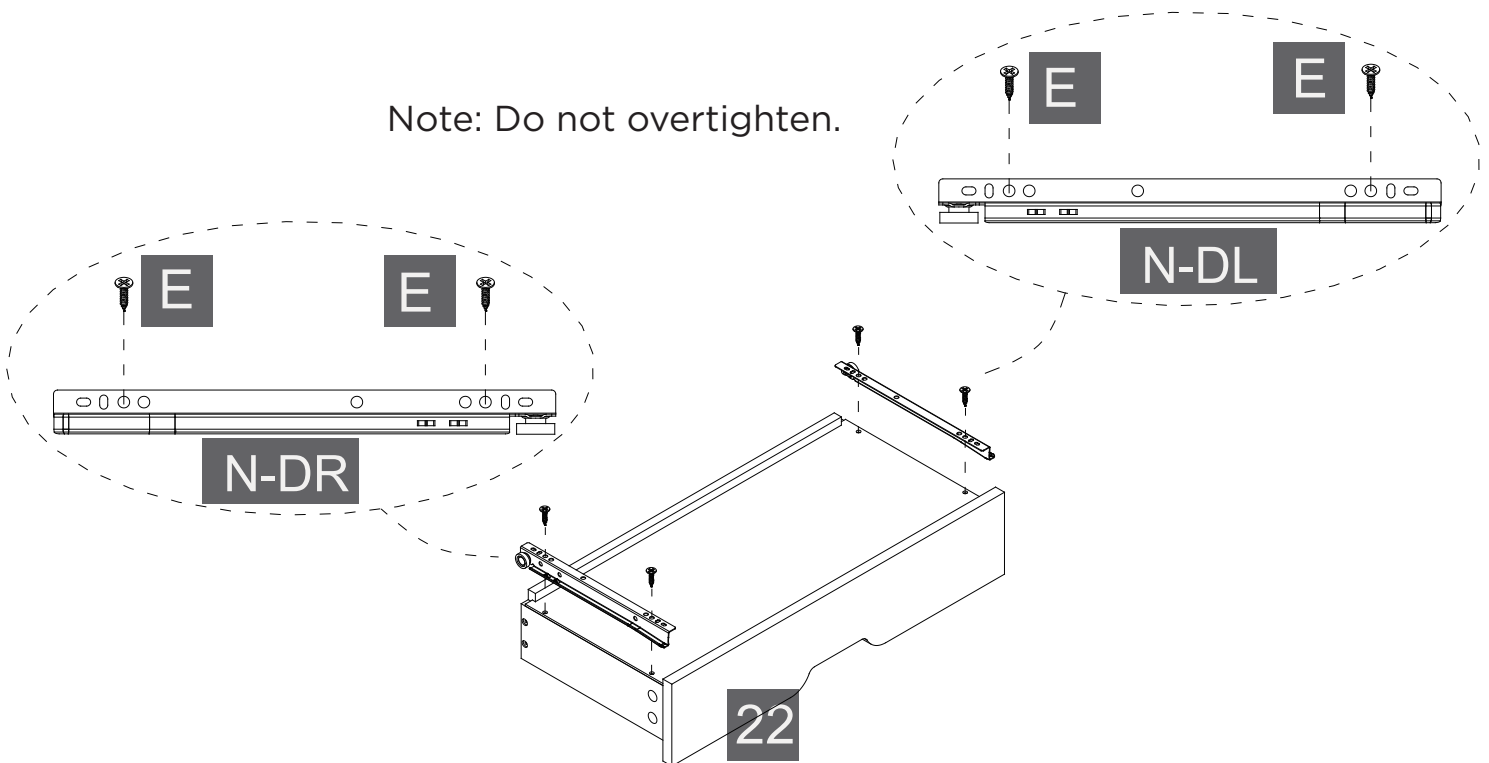

STEP-BY-STEP GUIDE





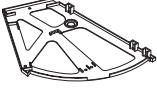
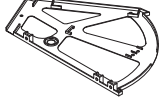


STEP 21

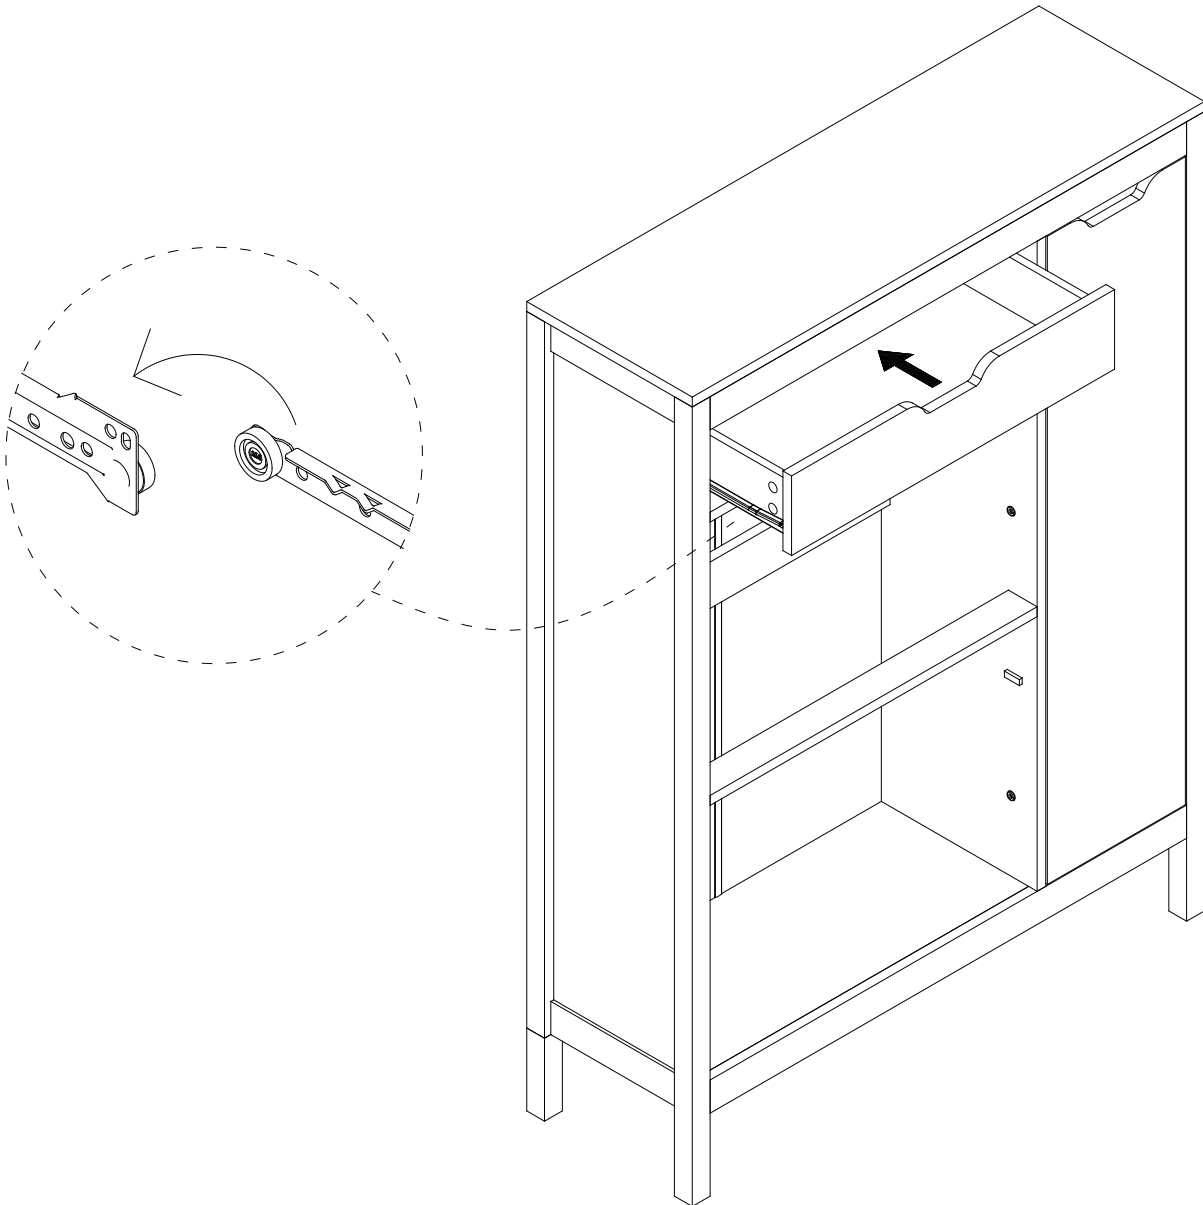Insert the drawers into the unit by lining up the slide track on the drawer with the slide runner on the unit.




STEP-BY-STEP GUIDE

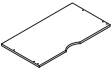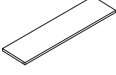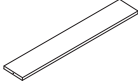STEP 22


10 x2	12 x2	13 x2	U x20	Q x2	R x2	P x4	T x2
							

Insert twelve screws **U** through the left flip frames **Q** and right flip frames **R** into the big drawer fronts **10** as shown.
 Insert four screws **P** through the metal plates **T** into the big drawer fronts **10**.
 Insert eight screws **U** through the left flip frames **Q** and right flip frames **R** into divider back **12** and big drawer bottom **13**.
 Tighten all screws.

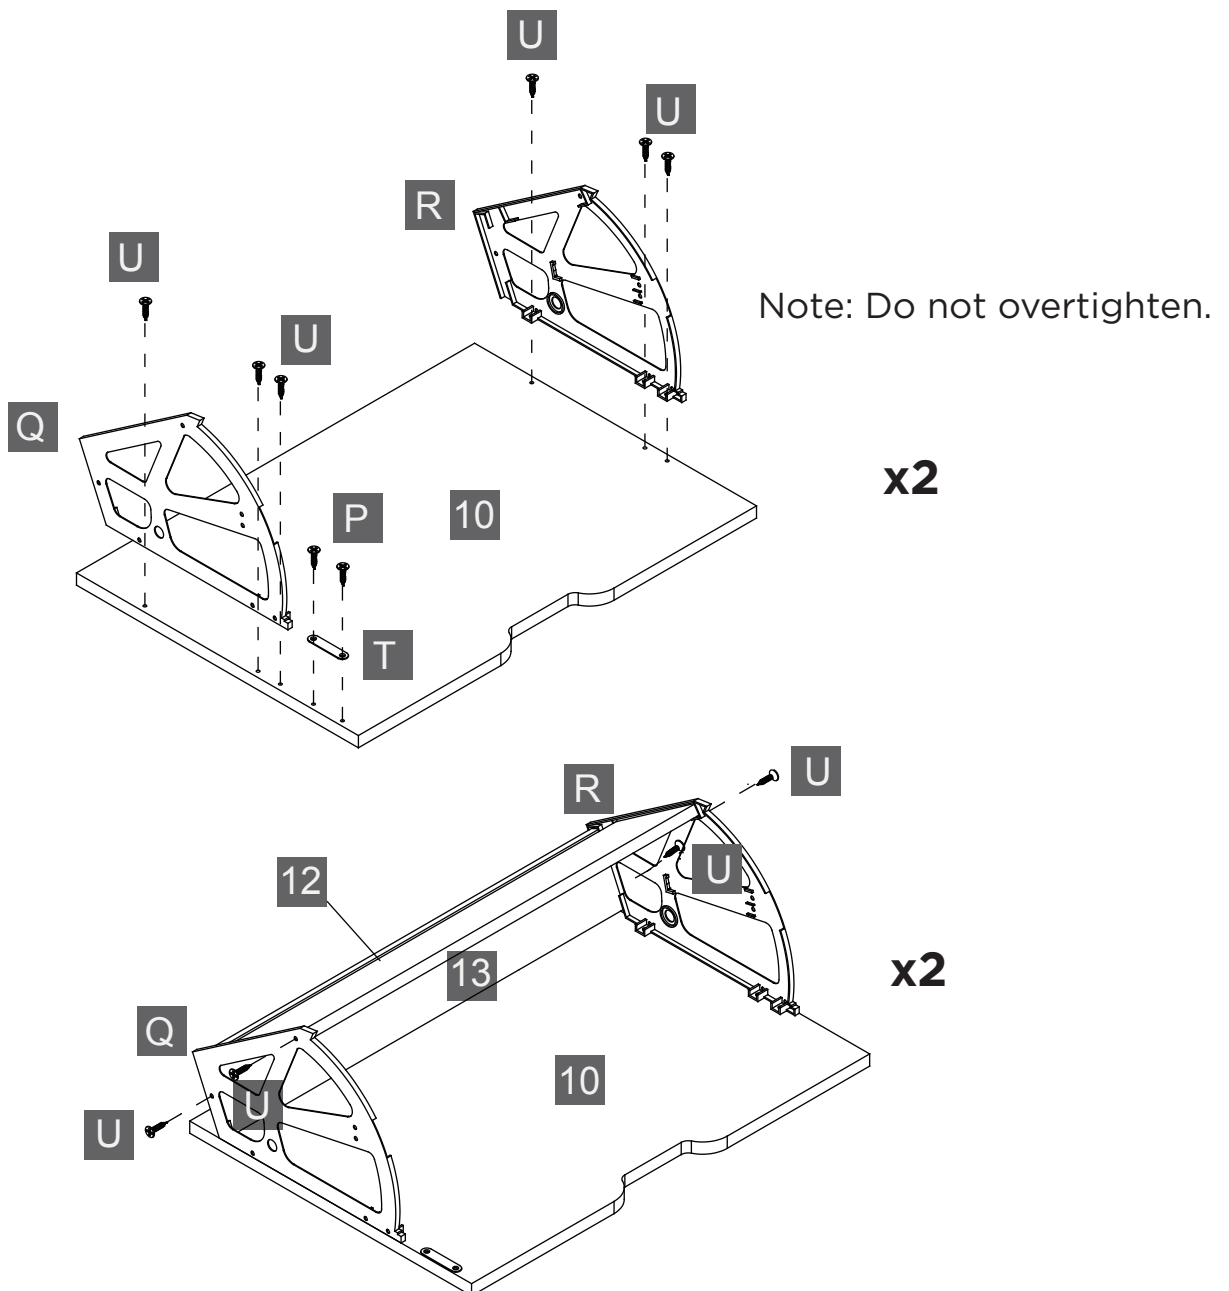



STEP-BY-STEP GUIDE

STEP 23

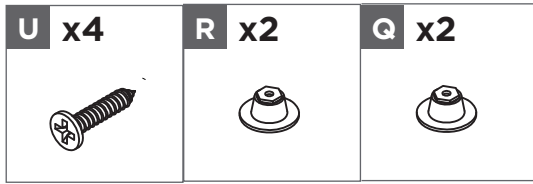

Insert four screws **U** into fasteners found with left flip frames **Q** and right flip frames **R**.

Tighten all screws.

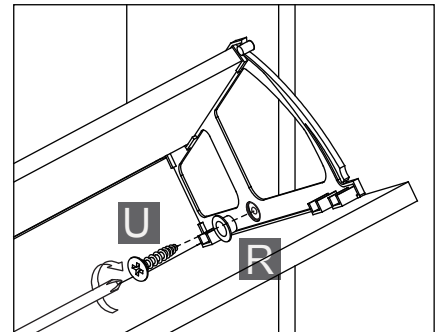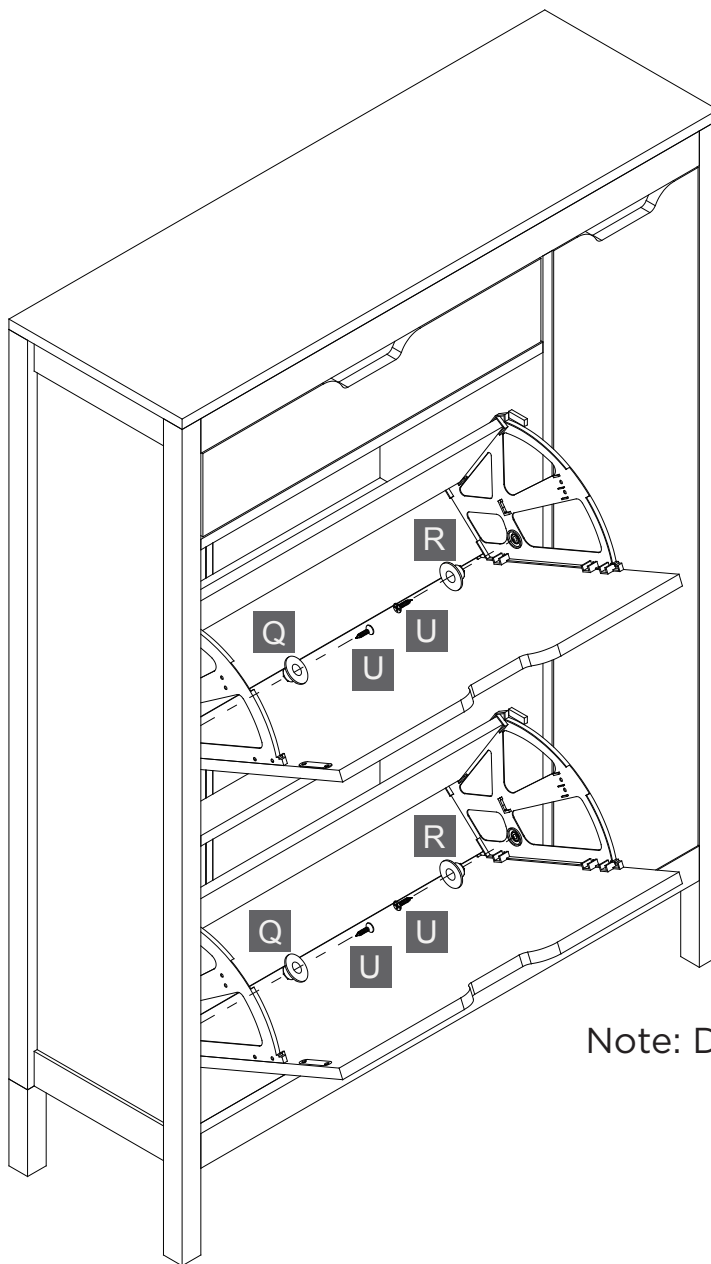


Note: Do not overtighten.

STEP-BY-STEP GUIDE

STEP 24


11 x2

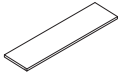


U x4



Insert four screws **U** through the left flip frames **Q** and right flip frames **R** into divider fronts **11**.
Tighten all screws.

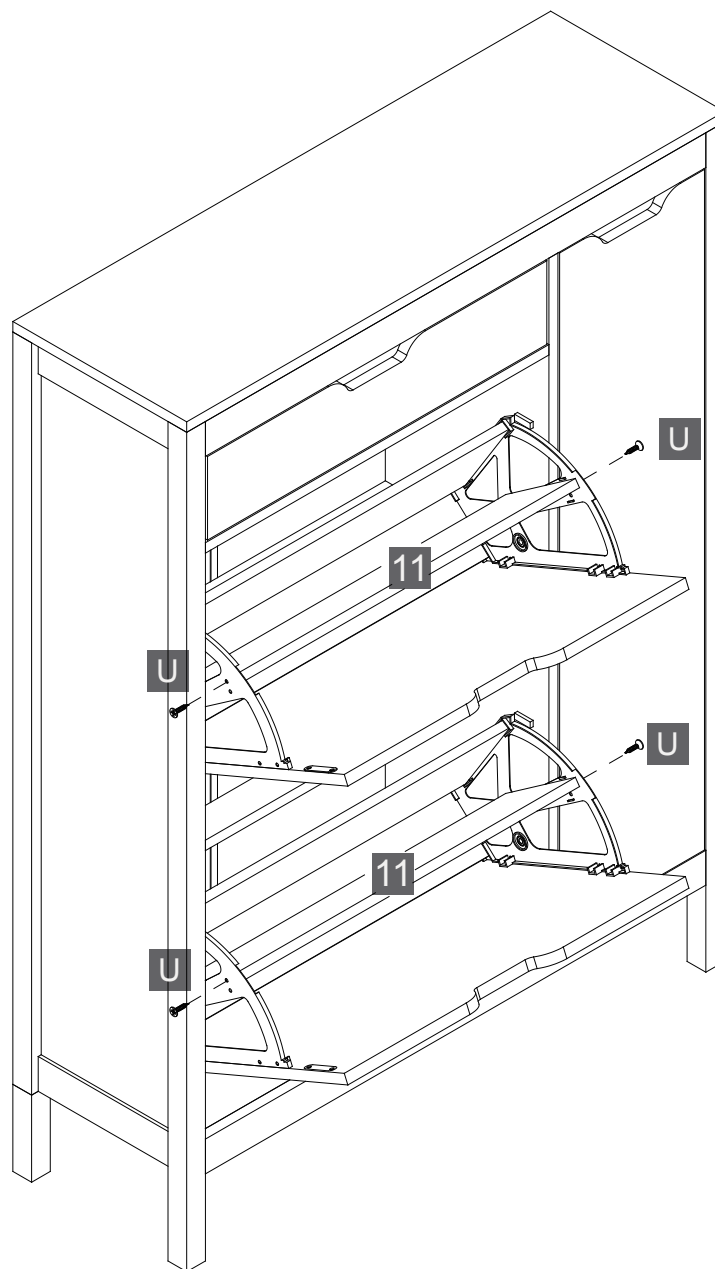

TECHNICAL DATA

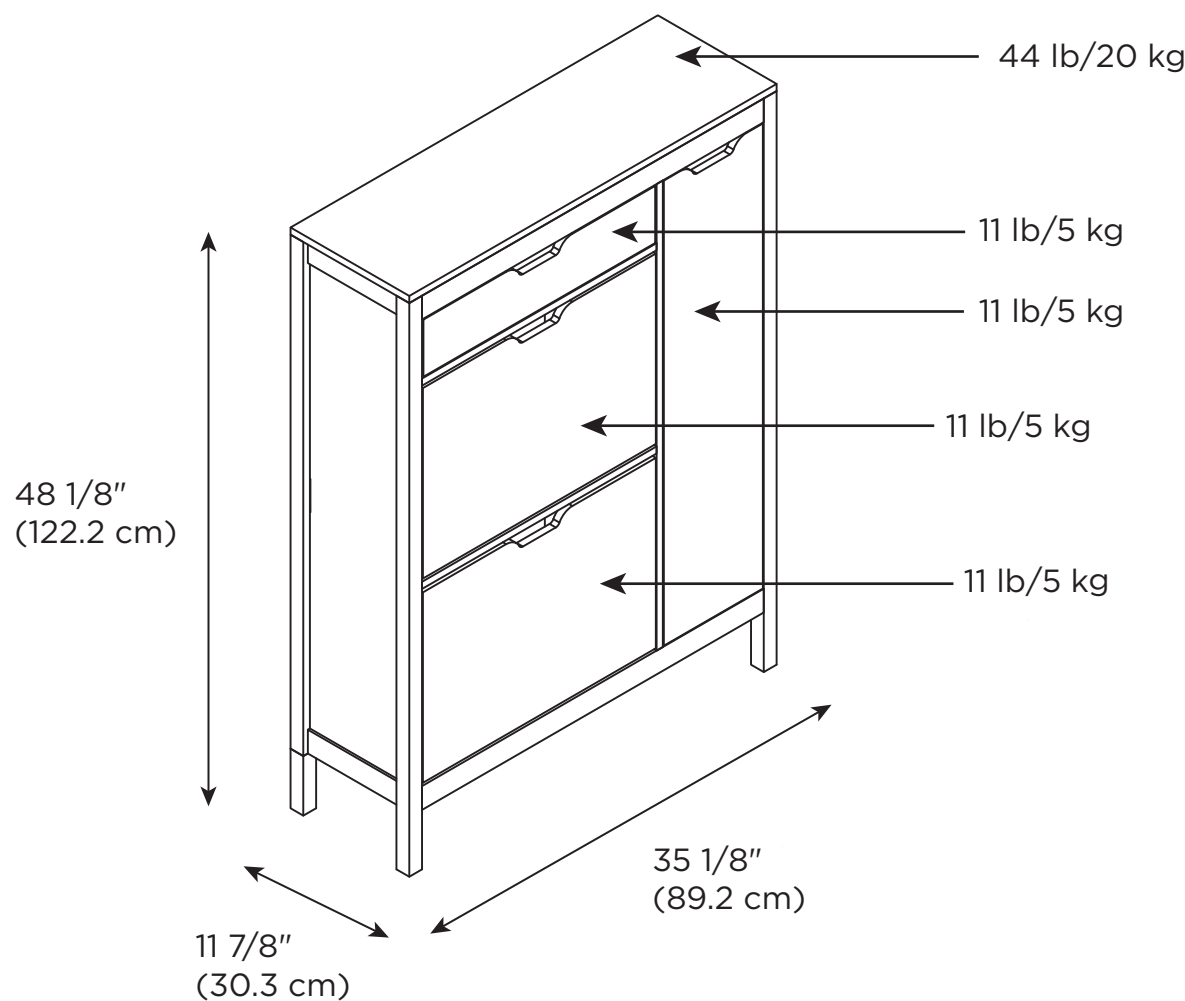

SPECIFICATIONS

ASSEMBLED DIMENSIONS (W x D x H)	35 1/8 x 11 7/8 x 48 1/8"
	89.2 x 30.3 x 122.2 cm
ASSEMBLED WEIGHT	85 lb
	38.6 kg
MAXIMUM WEIGHT CAPACITY (Top)	44 lb
	20 kg
MAXIMUM WEIGHT CAPACITY (Each shelf)	11 lb
	5 kg

ASSEMBLY TROUBLESHOOTING



**BEFORE RETURNING
YOUR PRODUCT**

**HAVING TROUBLE?
LET US HELP YOU!**

**TOLL-FREE:
1-888-670-6684**

If you have questions regarding your product or require warranty assistance, please call our customer service helpline.



**CALL US;
WE CAN HELP**

CARING FOR YOUR ITEM

1

Weight Capacity:

- Do not exceed maximum weight capacity of 44 lb (20 kg) on top.
- Do not exceed maximum weight capacity of 11 lb (5 kg) on each shelf.

2

Furniture tipping over can be dangerous. To reduce your risk:

- Do not stand on, sit on or climb this unit.
- Do not sit on top of unit.
- For indoor use only.
- Always place the unit on a flat, level surface.
- Regularly tighten all hardware to ensure unit is secure and stable.

3

Wipe clean with a damp cloth.

4

Avoid direct sunlight.

WARRANTY INFORMATION



1-YEAR LIMITED WARRANTY*

This CANVAS® product carries a one (1) year warranty against defects in workmanship and materials. Trileaf Distribution agrees to replace the defective product free of charge within the stated warranty period, when returned by the original purchaser with proof of purchase. This product is not guaranteed against wear or breakage due to misuse and/or abuse.

PRODUCT NO. 168-0147-4

Made in China

Imported by Trileaf Distribution Trifeuil Toronto, Canada M4S 2B8

CANVAS™

INSPIRED BY CANADA

