


CANVAS™

WILLOWGROVE STORAGE CABINET

PRODUCT NO. 168-0176-4

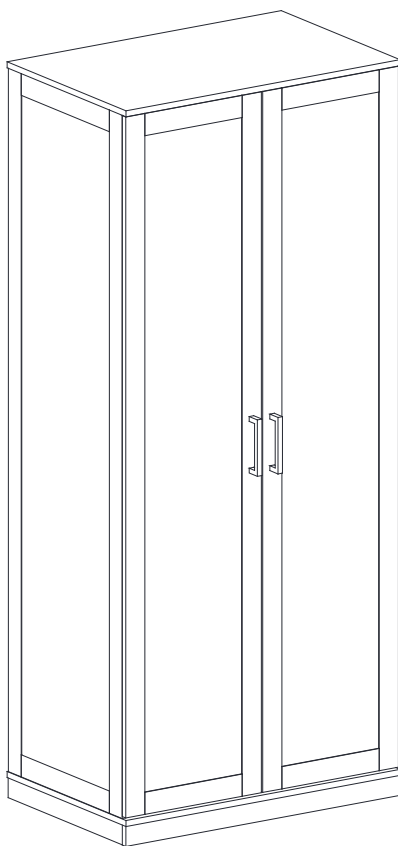

ASSEMBLY INSTRUCTIONS



HAVING TROUBLE?

TOLL-FREE:

1-888-670-6684

IMPORTANT: Please read this manual carefully before beginning assembly of this product. Keep this manual for future reference.

CANVAS™

INSPIRED BY CANADA



To the trend seekers and design mavens.
CANVAS™ is the furniture and décor brand
that helps you imagine and create a space
you can be proud of.

That's because **CANVAS™** offers style with
ease with products that are **made for real life
and Canadian inspired.**

We would love to hear from you and welcome
your thoughtful feedback. Visit our website
at **canadiantire.ca** to tell us about your
experience, and share your photos with us
using **#myCANVASstyle.**

Show us how you bring **CANVAS™** products
to life. We can't wait to see!

TABLE OF CONTENTS


Parts List	4
Before You Begin Assembly	9
Step-by-step Guide	10
Tip Restraint	35
Adjust Door	37
Adjust Levellers	38
Technical Data	39
Caring for Your Item	40
Warranty Information	41




WARNING! TO REDUCE THE RISK OF SERIOUS INJURY, READ THE FOLLOWING SAFETY INSTRUCTIONS BEFORE ASSEMBLING AND USING THE PRODUCT.

- Please read and understand this entire manual before attempting to assemble, operate, or install the product.
- Any assembly or maintenance of the product must be carried out by adults only.
- Some parts may contain sharp edges. Wear protective gloves if necessary.
- To prevent damage, place all parts on a level surface during assembly. Add a layer of protective surface if needed.
- Due to the nature of steel, surface oxidation (rusting) will occur if this protective coating is scratched. This is a natural process. To minimize this condition, it is recommended that care be taken when assembling and handling the product in order to prevent the paint from being scratched.


TOOLS REQUIRED

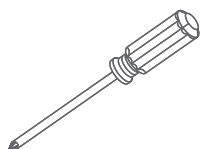

Screwdriver
(Not provided)

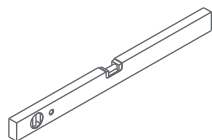


Level
(Not provided)




Mallet
(Not provided)



Power Drill
(Not provided)




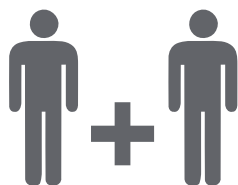











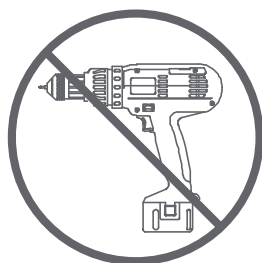2 people



NOTE: Do not over-drill.
Be aware of over-drilling.




PARTS LIST

ITEM	DESCRIPTION	THUMBNAIL	QUANTITY
1	Top panel		1
2	Bottom panel		1
3	Left panel		1
4	Right panel		1
5	Left back panel		1
6	Right back panel		1
7	Adjustable shelf		2
8	Fixed shelf		1
9	Fixed shelf		1
10	Adjustable shelf		2
11	Middle partition		1
12	Front apron		1
13	Left apron		1


PARTS LIST

ITEM	DESCRIPTION	THUMBNAIL	QUANTITY
14	Right apron		1
15	Back apron		1
16	Drawer front panel		1
17	Drawer left panel		1
18	Drawer right panel		1
19	Drawer back panel		1
20	Drawer bottom		1
21	Drawer bottom support		1
22	Drawer front panel		1
23	Drawer left panel		1
24	Drawer right panel		1
25	Drawer back panel		1
26	Drawer bottom		1

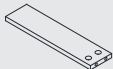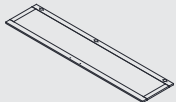









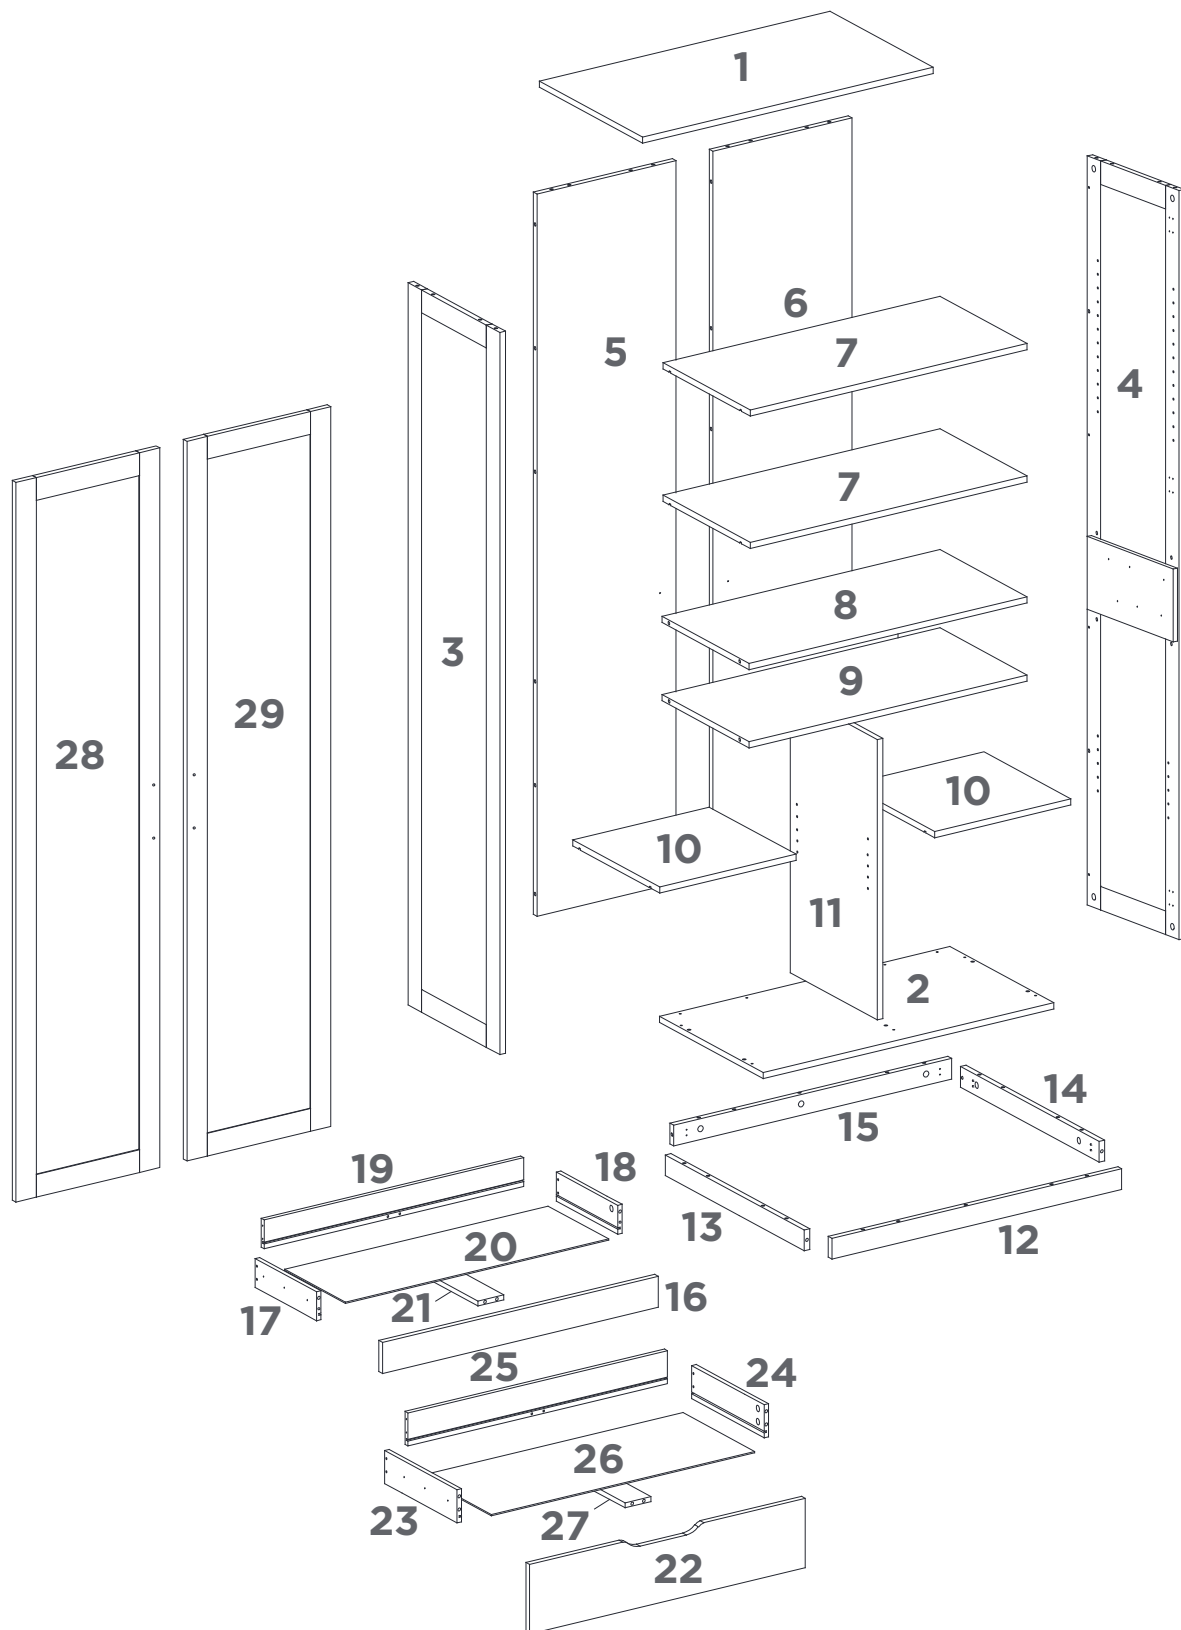


PARTS LIST

ITEM	DESCRIPTION	THUMBNAIL	QUANTITY
27	Drawer bottom support		1
28	Left door		1
29	Right door		1








EXPLODED VIEW



HARDWARE LIST

ITEM	DESCRIPTION	THUMBNAIL	QUANTITY
A	Cam lock		48
B	Cam bolt		56
C	Wood dowel		39
D	Hinge		6
E	Screw ø4 x 14 mm		36
F	Handie		2
G	Bolt ø4 x 22 mm		4
H	Door bumpers		4
I	10" slide		2
J	12" slide		2
K	Hex key		1
L	Screw ø3.5 x 12 mm		40
M	Cam lock		10


HARDWARE LIST

ITEM	DESCRIPTION	THUMBNAIL	QUANTITY
N	Screw ø4 x 38 mm		12
O	Wood dowel ø5.8 x 30 mm		2
P	Coated paper sticker		44
Q	Adjustable leveller		4
R	Shelf support		16
S	Screw ø4 x 55 mm		2
T	Screw ø4 x 18 mm		2
U	Metal bracket		4
V	Anchor		2
W	Nylon strap		2
X	Screw ø4 x 50 mm		2
Y	Cam bolts		1

BEFORE YOU BEGIN ASSEMBLY


MAKE SURE ALL PARTS ARE PRESENT

Compare all pieces to the parts and hardware lists, and make sure you have all tools required for assembly.

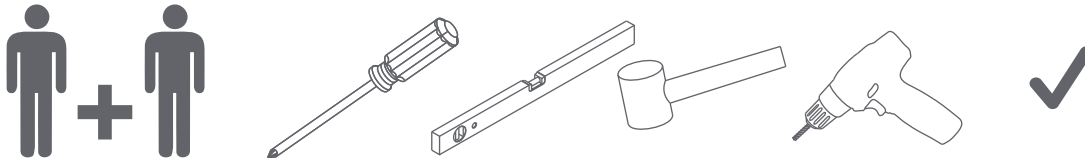


ASSEMBLE IN A CLEARED AREA

Place all parts from the box on the floor in front of you on a clean, dry, level surface to protect the product as it is being built.

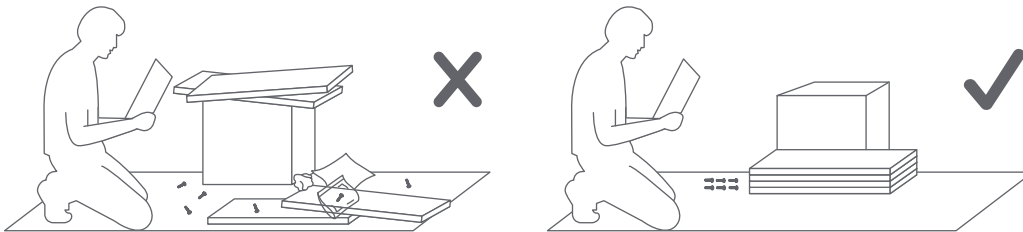


REMOVE PACKAGING MATERIALS

Place packing materials back in the box. Do not dispose of packaging materials until assembly is complete.

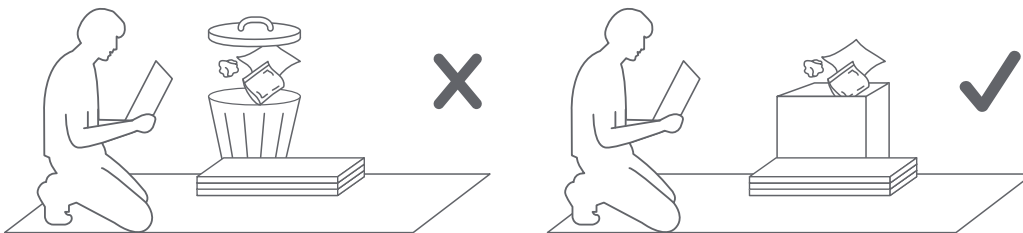


READ EACH STEP CAREFULLY

Make sure you understand each step. For any questions, contact CANVAS™ customer service at 1-888-670-6684 (toll-free).

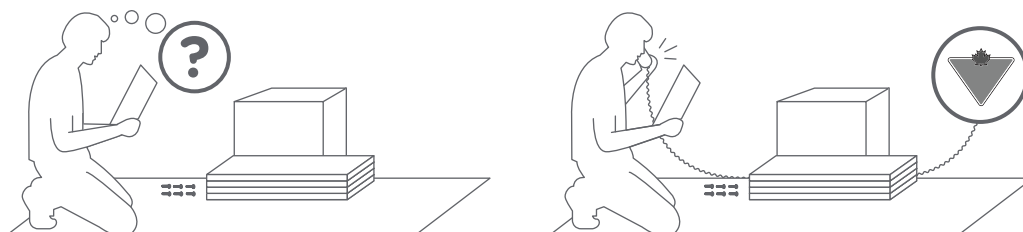


STEP-BY-STEP GUIDE

STEP 1

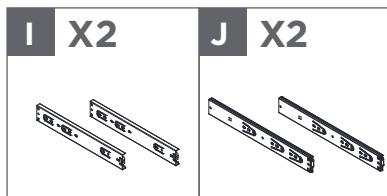







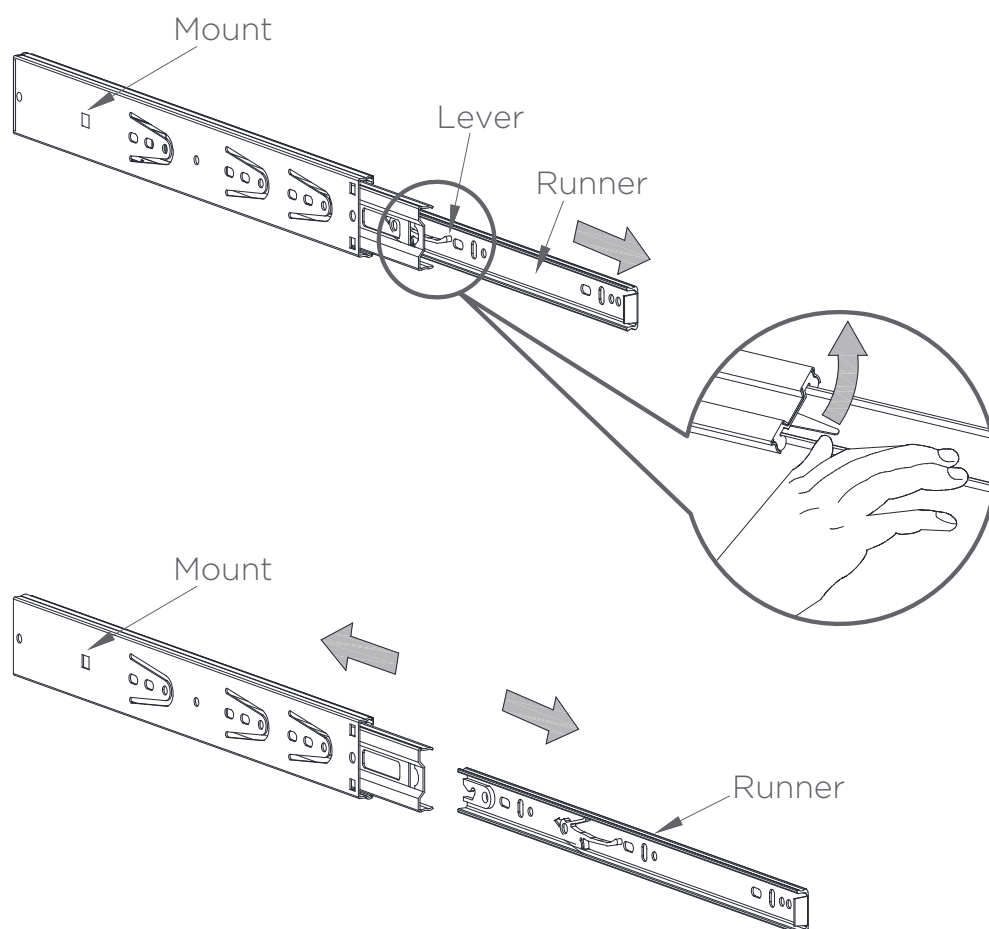


Slides must be separated before assembly.
After separated, set aside until needed for assembly.

Push lever up, then remove runner.



STEP-BY-STEP GUIDE


STEP 2

16 X1	17 X1	18 X1	20 X1	21 X1	B X4	M X4
						
O X2	P X2					
						

Attach four cam bolts **B** to drawer front panel **16**. Do not over-tighten. Insert two wood dowels **C** to drawer left panel **17** and drawer right panel **18**.





Attach drawer left panel **17**, drawer right panel **18** and drawer bottom support **21** to drawer front panel **16** using four cam locks **M**. Tighten cam locks **M**. Cover cam locks **M** using four coated paper stickers **P** on drawer left panel **17** and drawer right panel **18**.

Insert drawer bottom **20** as shown.

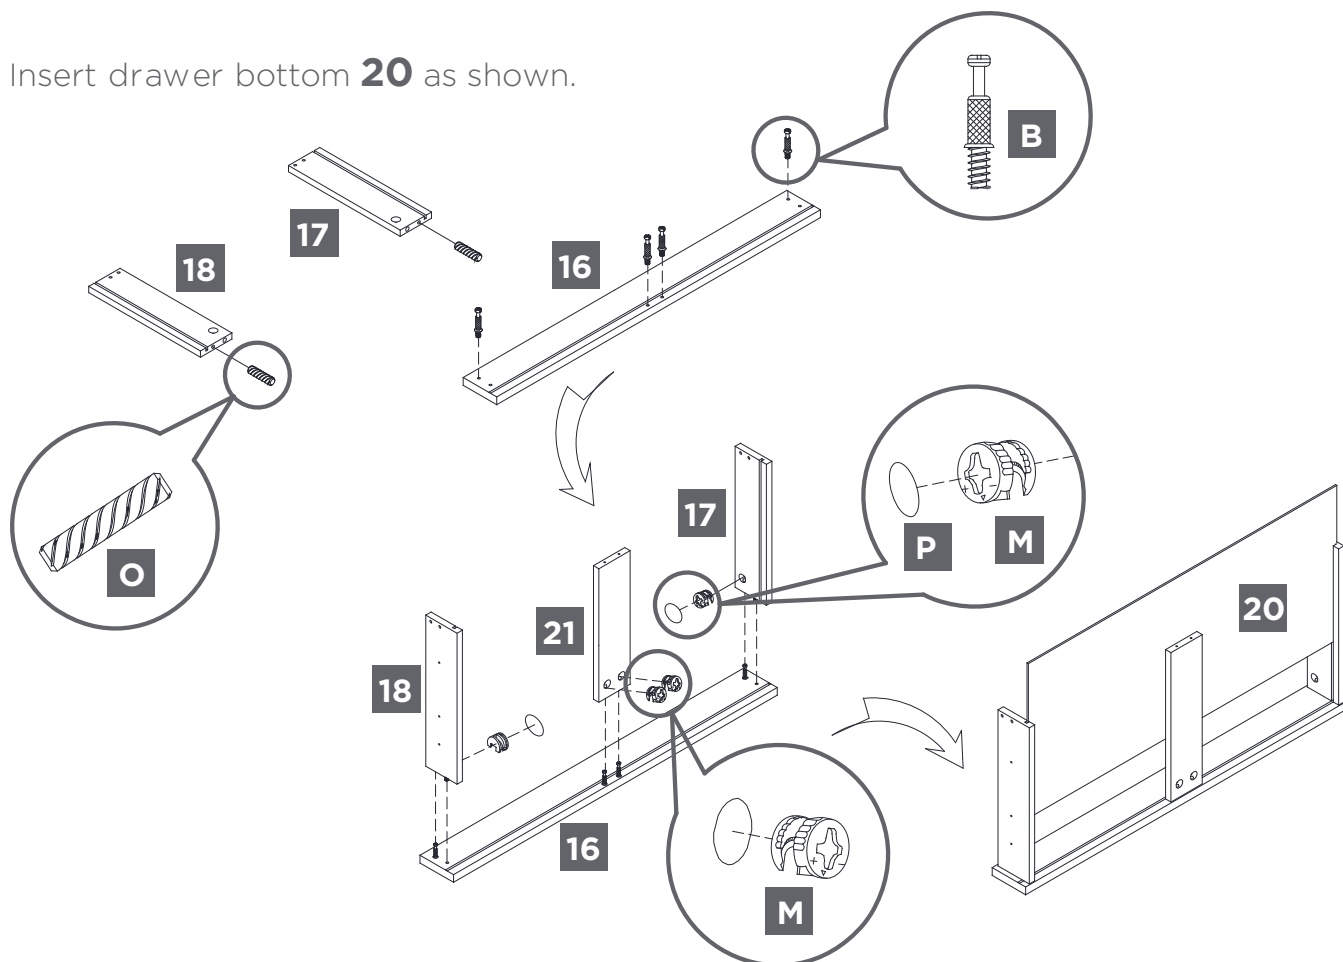


STEP-BY-STEP GUIDE

STEP 3

19 X1	I X2	L X6	N X6
			





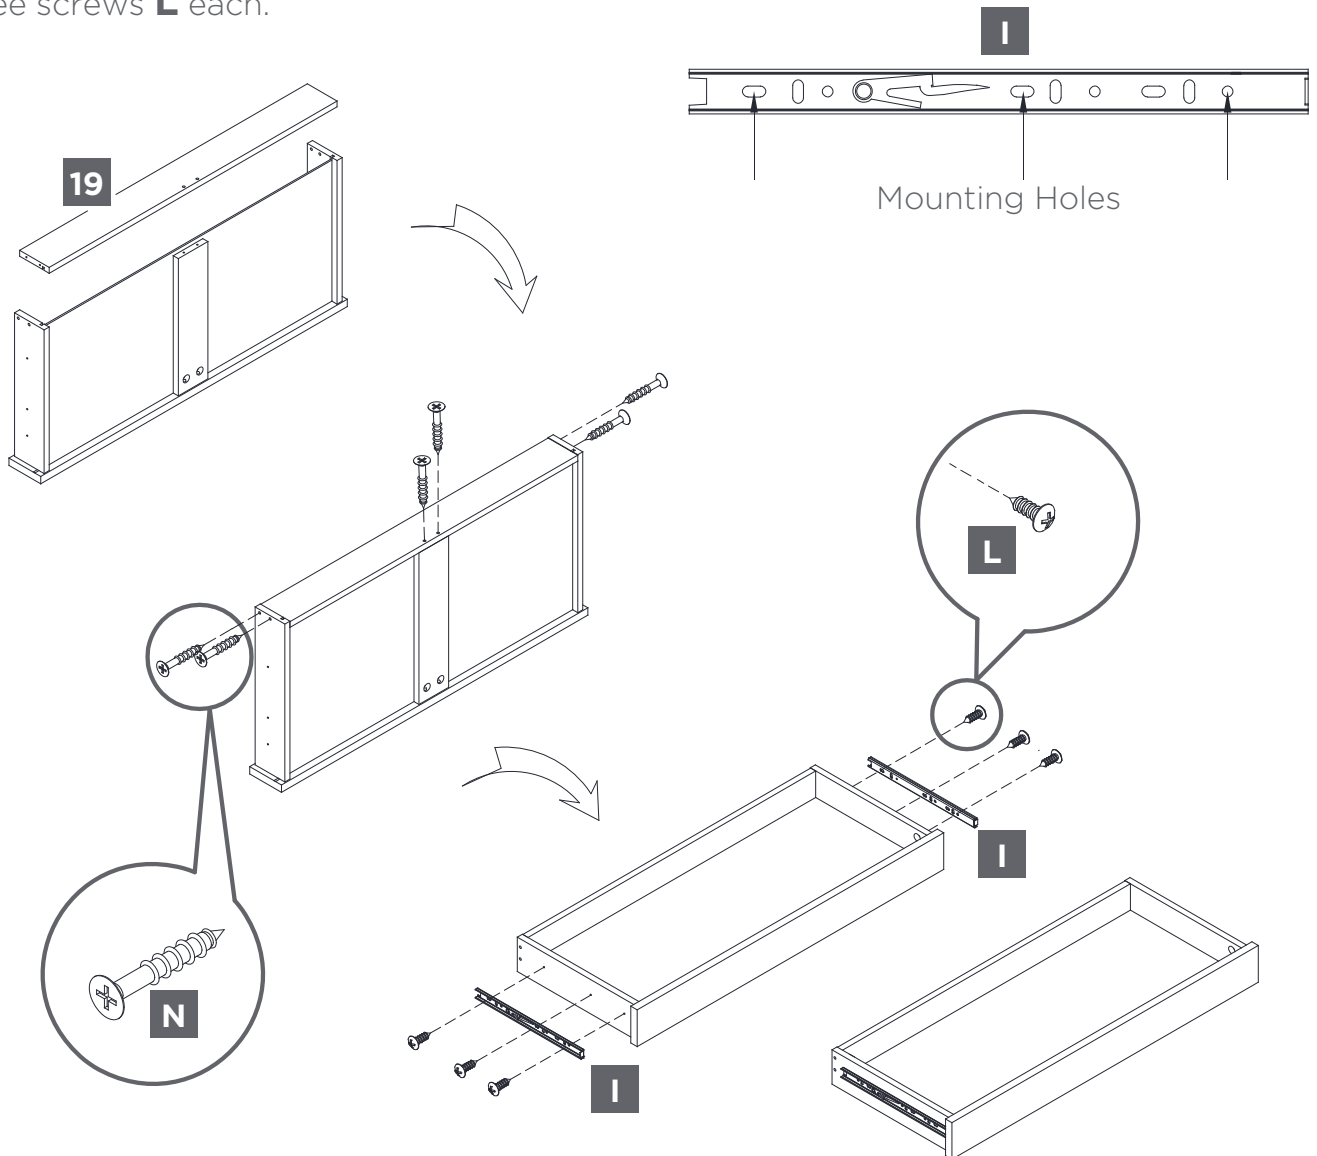



Attach drawer back panel **19** to drawer left panel **17**, drawer right panel **18** and drawer bottom support **21** using six screws **N**.

Attach two 10" slides **I** to drawer left panel **17**, drawer right panel **18** using three screws **L** each.



STEP-BY-STEP GUIDE


STEP 4

22 X1	23 X1	24 X1	26 X1	27 X1	B X6	M X6
						
P X4						
						

Attach six cam bolts **B** to drawer front panel **22**. Do not over-tighten.


Attach drawer left panel **23**, drawer right panel **24** and drawer bottom support **27** to drawer front panel **22** using six cam locks **M**. Tighten cam locks **M**. Cover cam locks **M** using four coated paper stickers **P** on drawer left panel **23** and drawer right panel **24**.

Insert drawer bottom **26** as shown.

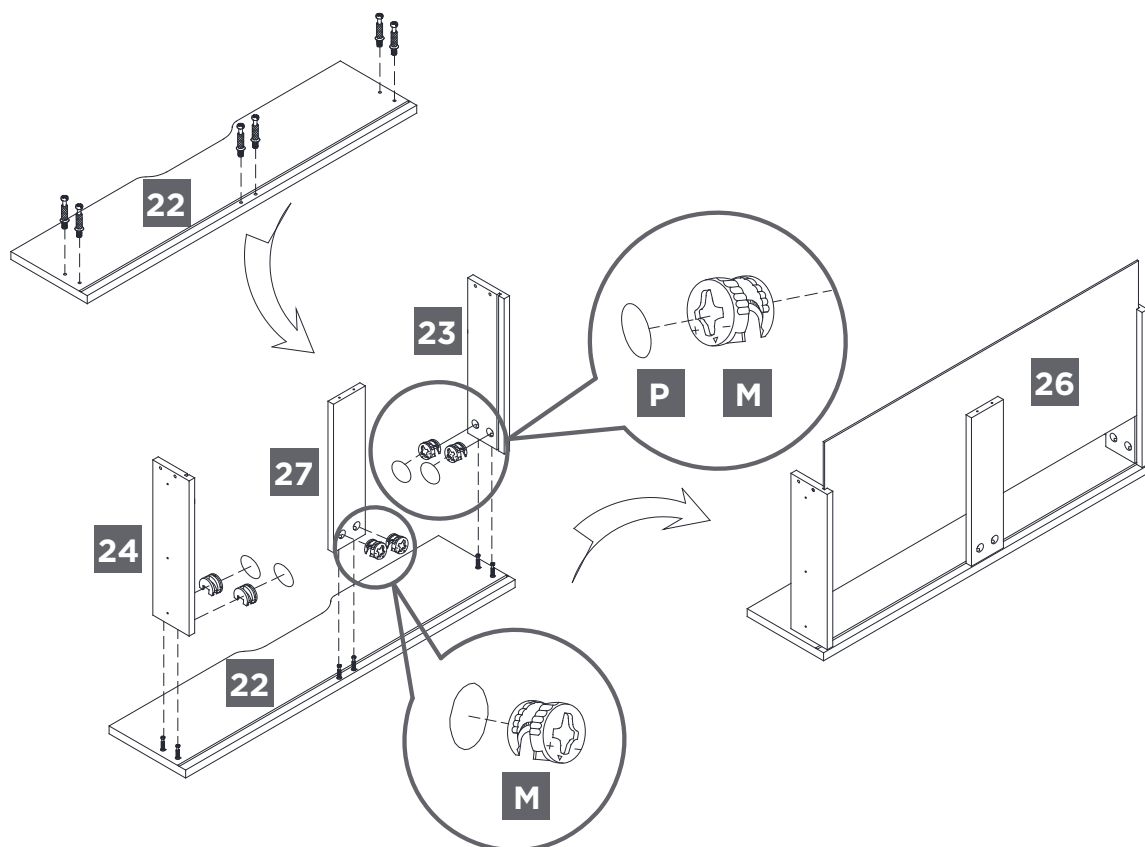


STEP-BY-STEP GUIDE

STEP 5

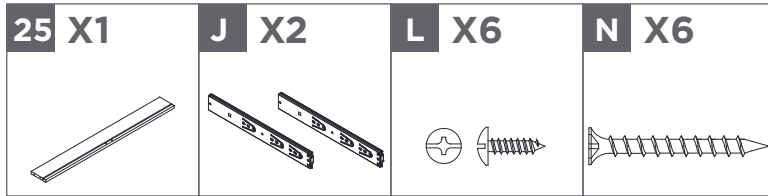


Attach drawer back panel **25** to drawer left panel **23**, drawer right panel **24** and drawer bottom support **27** using six screws **N**.

Attach two 12" slides **J** to drawer left panel **23** and drawer right panel **24** using three screws **L** each.

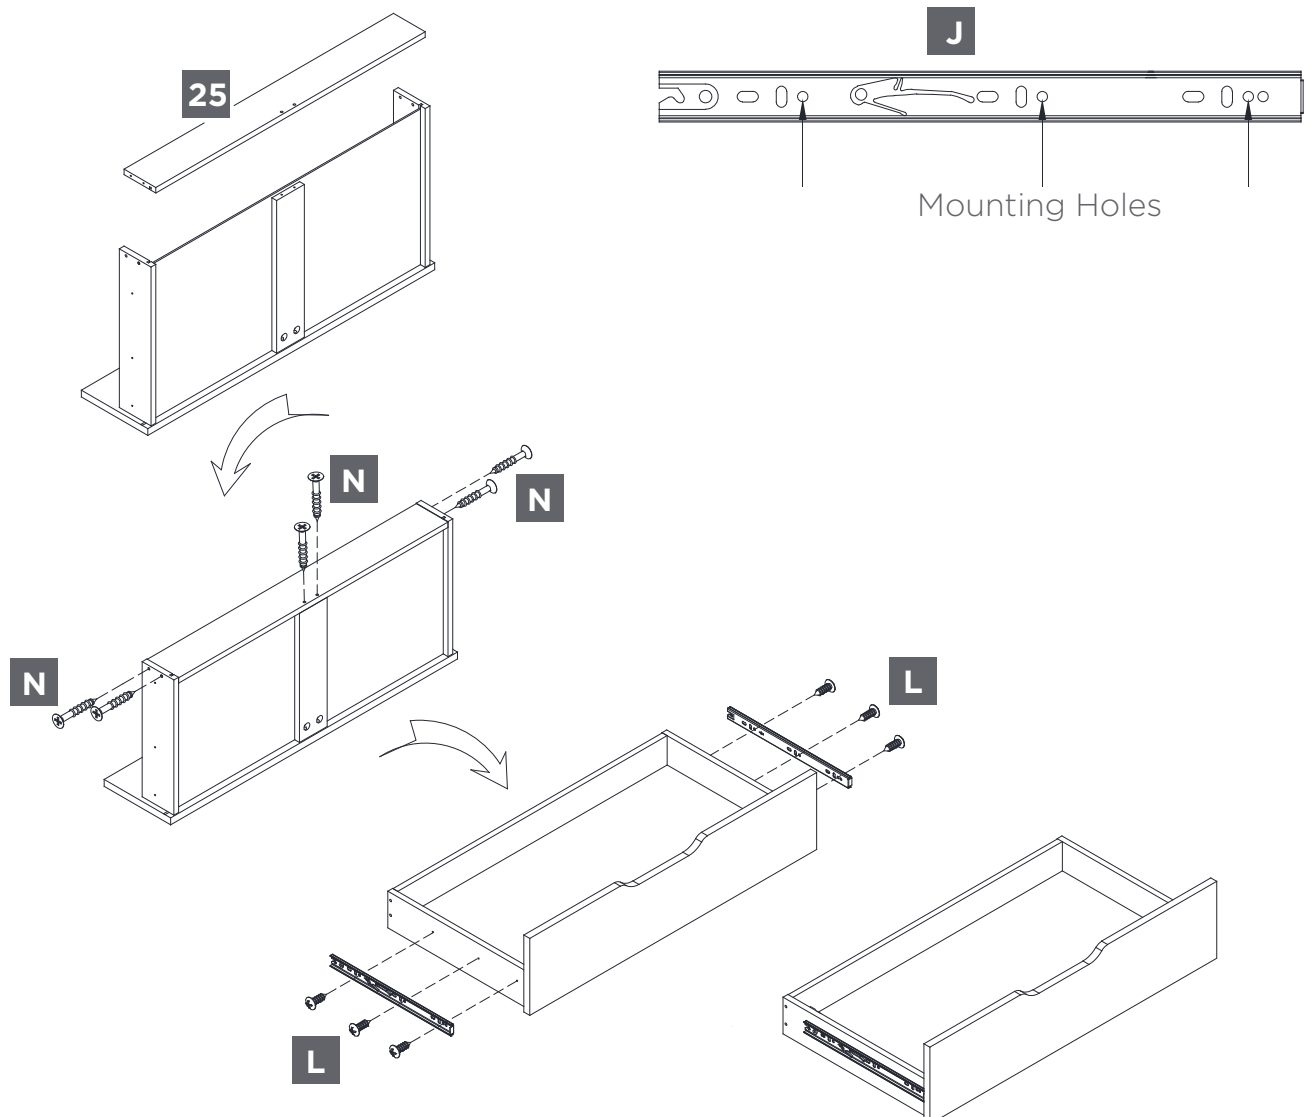


STEP-BY-STEP GUIDE

STEP 6

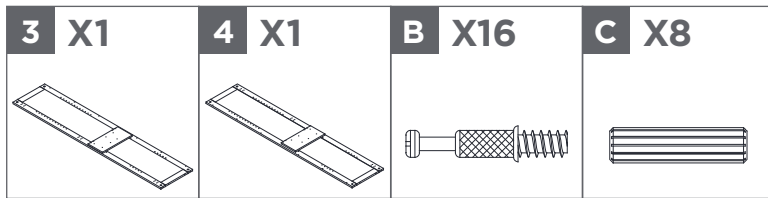


Attach 16 cam bolts **B** to left panel **3** and right panel **4**. Do not over-tighten.

Insert eight wood dowels **C** to left panel **3** and right panel **4**.

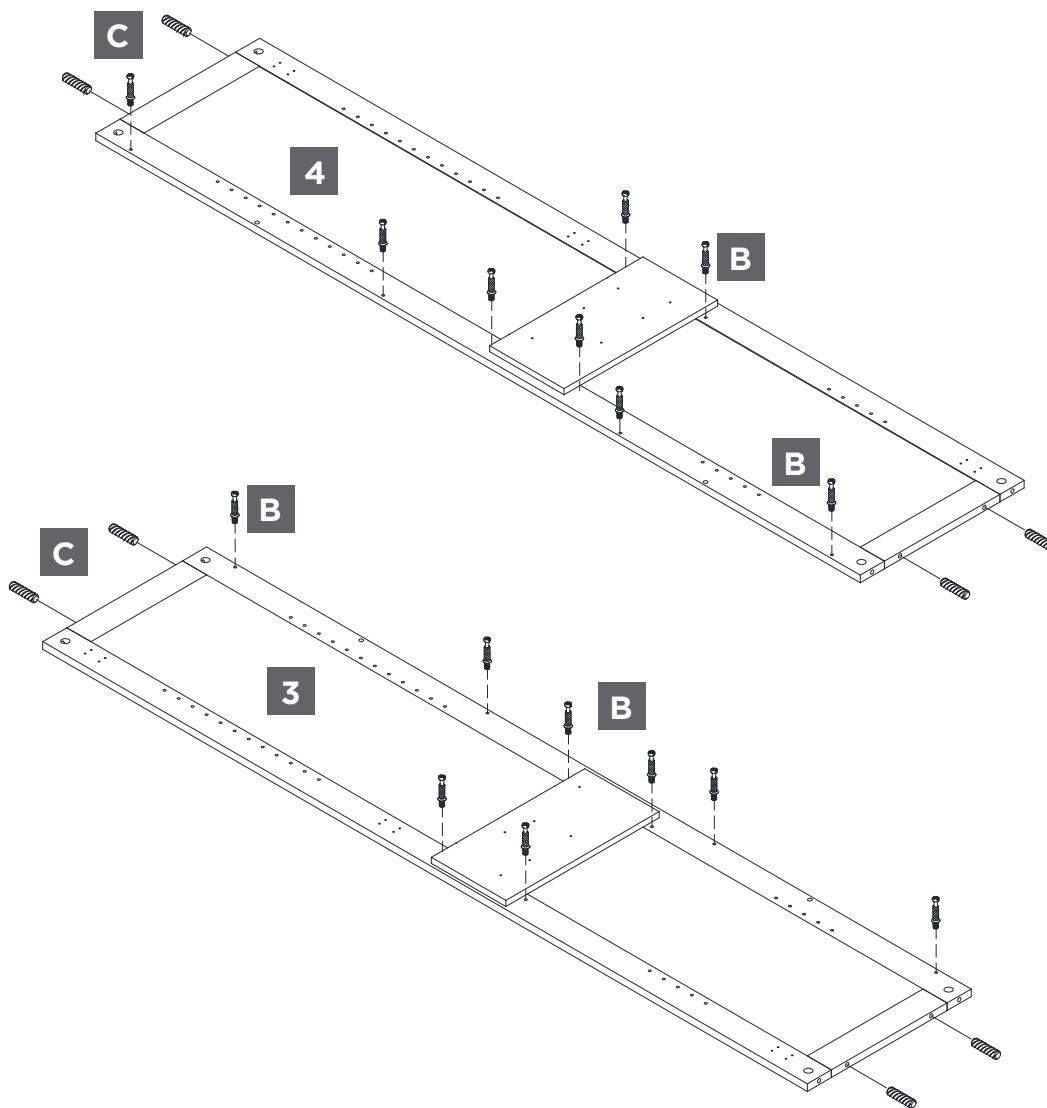



STEP-BY-STEP GUIDE

STEP 7

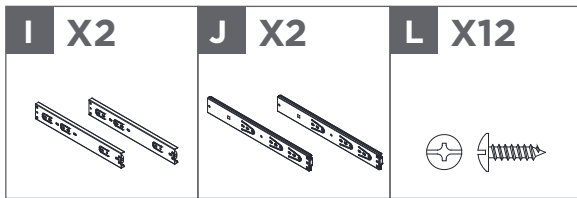



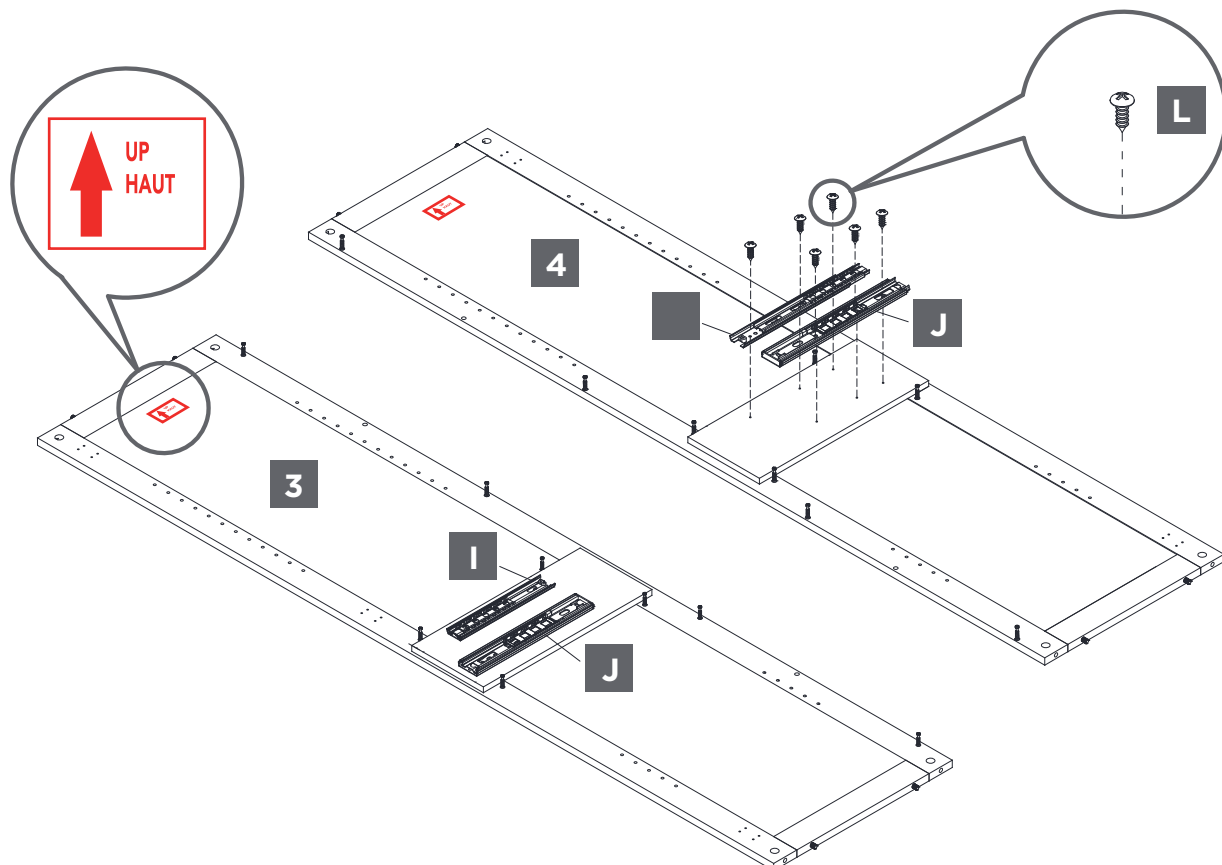
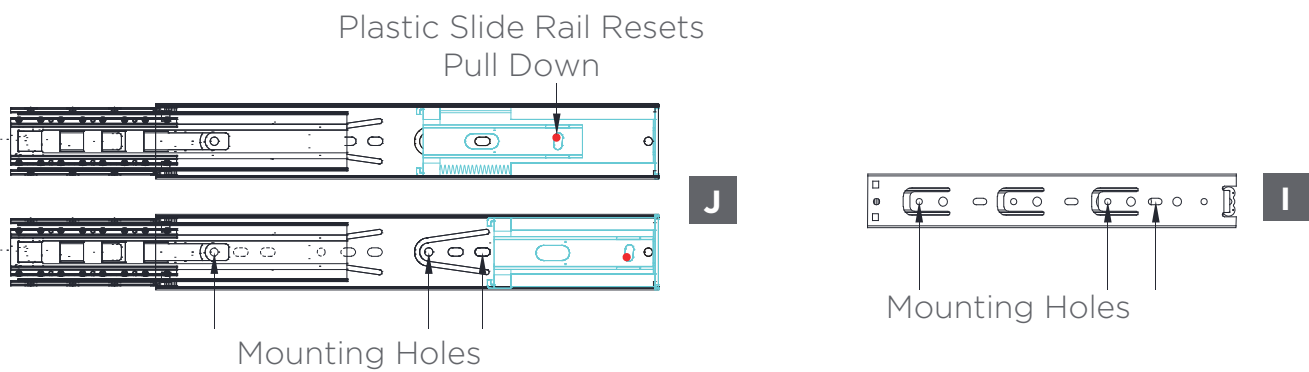


Attach two 10" slides **I** and two 12" slides **J** to left panel **3** and right panel **4** using three screws **L** each.

Make sure slide's open end and slide roller faces the same direction.




STEP-BY-STEP GUIDE

STEP 8

5 X1	6 X1	9 X1	11 X1	B X2	C X19
					





Attach two cam bolts **B** to fixed shelf **9**. Do not over-tighten.

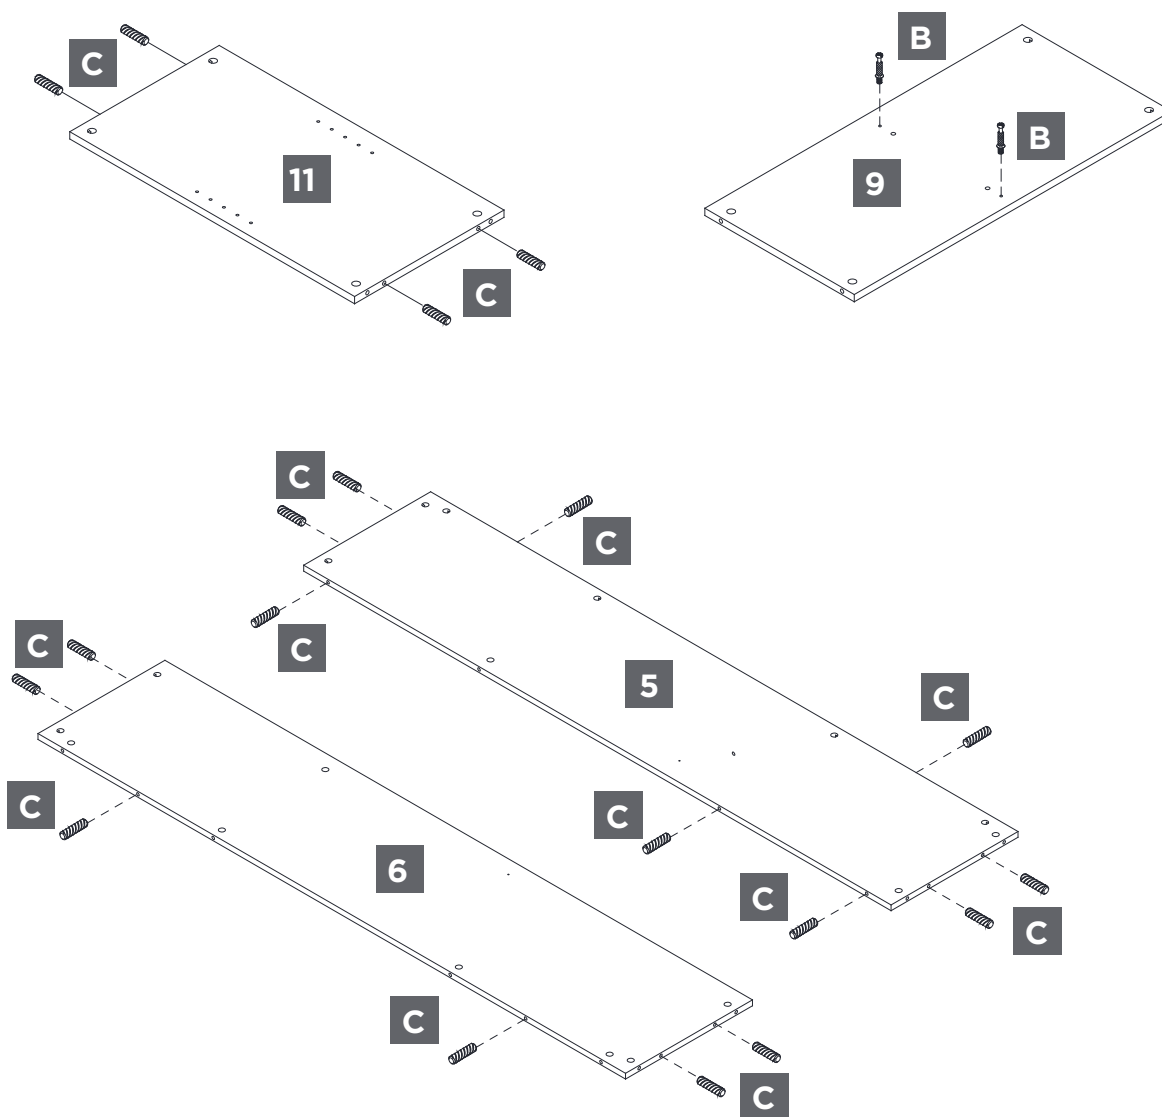Insert 19 wood dowels **C** to left back panel **5** and right back panel **6** and middle partition **11**.





STEP-BY-STEP GUIDE

STEP 9

8 X1	9 X1	A X4	P X2
			




Attach fixed shelf **8** to left panel **3** using two cam locks **A**. Tighten cam locks **A**.

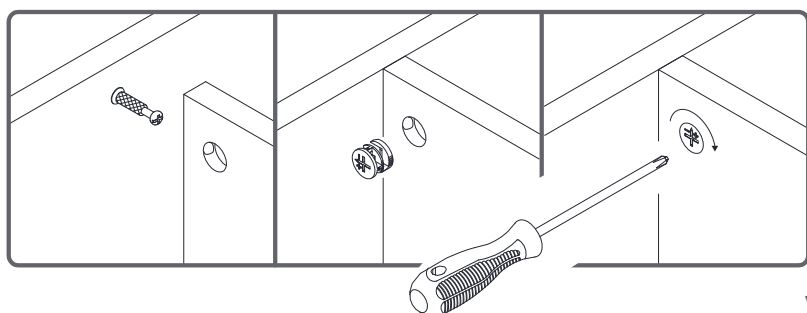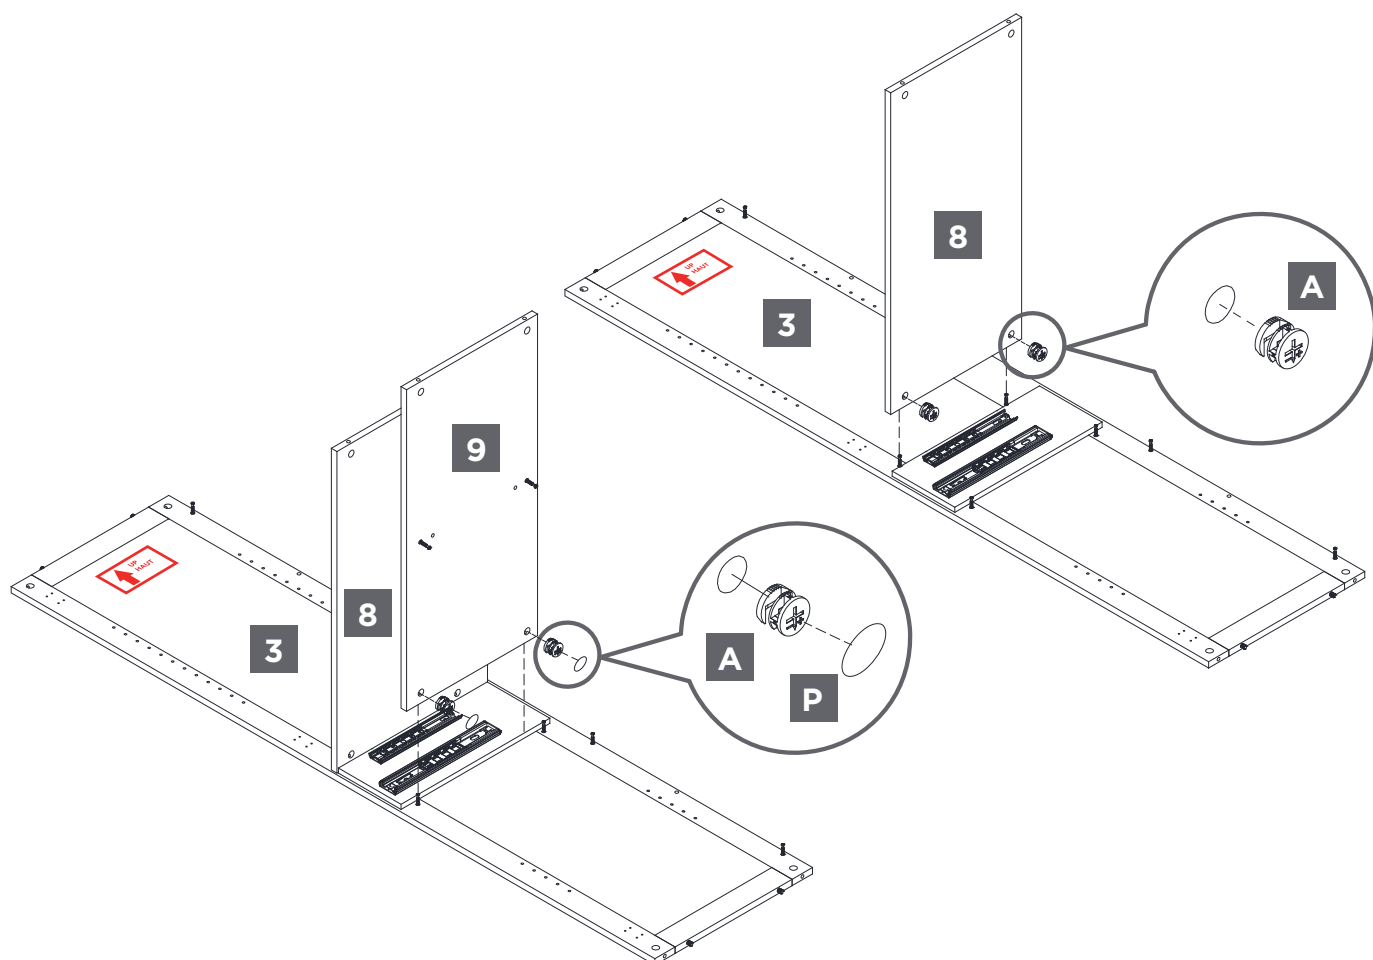Attach fixed shelf **9** to left panel **3** using two cam locks **A**. Tighten cam locks **A**, then cover cam locks **A** using two coated paper stickers **P** on fixed shelf **9**.



STEP-BY-STEP GUIDE


STEP 10

A X4	X X1	Y X1
		


Attach left back panel **5** to left panel **3** using four cam locks **A**. Tighten cam locks **A**.

Attach left back panel **5** to fixed shelf **9** using screw **X**.

Insert cam bolt **Y** to left back panel **5**.

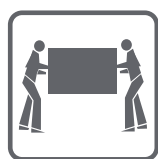


TEAM LIFT
DO NOT LIFT ALONE

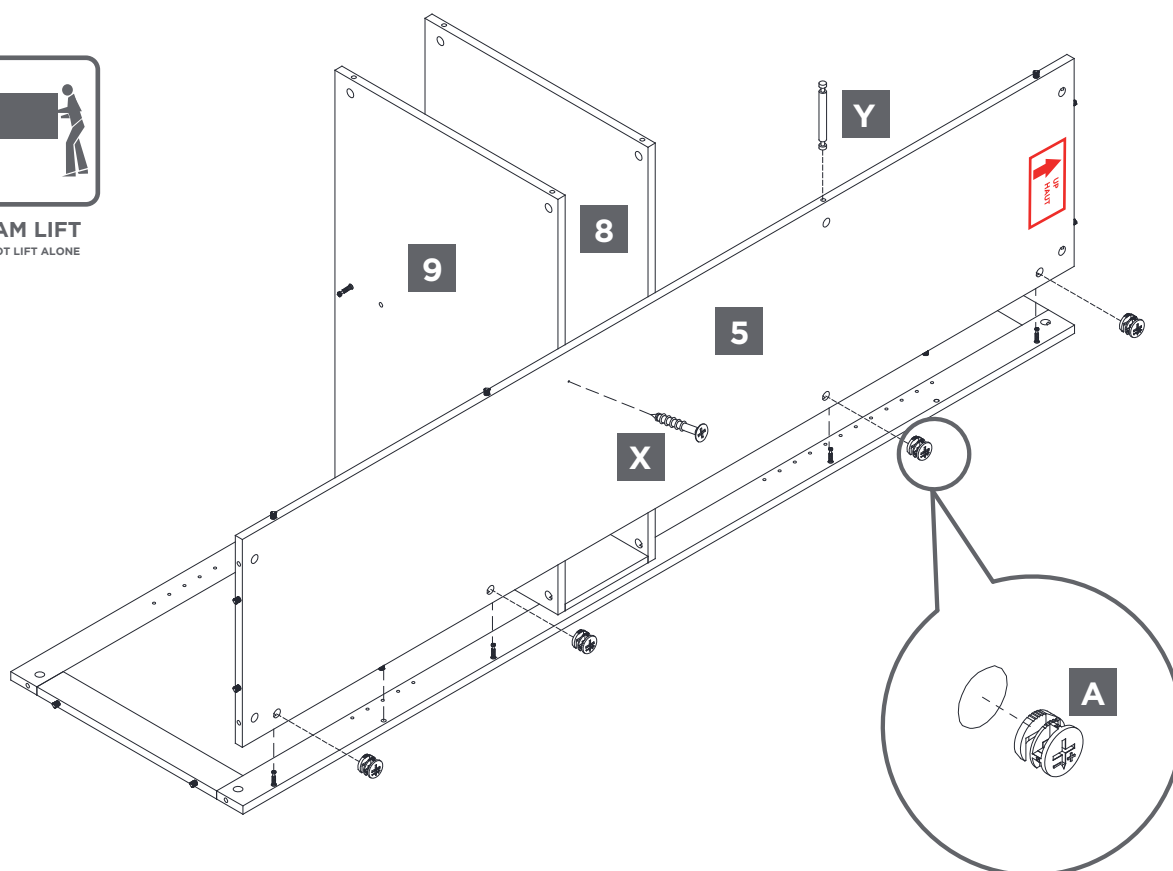

STEP-BY-STEP GUIDE

STEP 11

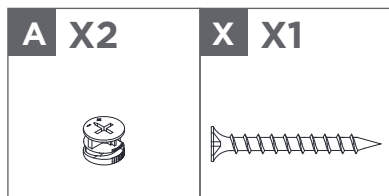


Attach right back panel **6** to left back panel **5** using two cam locks **A**. Tighten cam locks **A**.

Attach right back panel **6** to fixed shelf **9** using screw **X**.



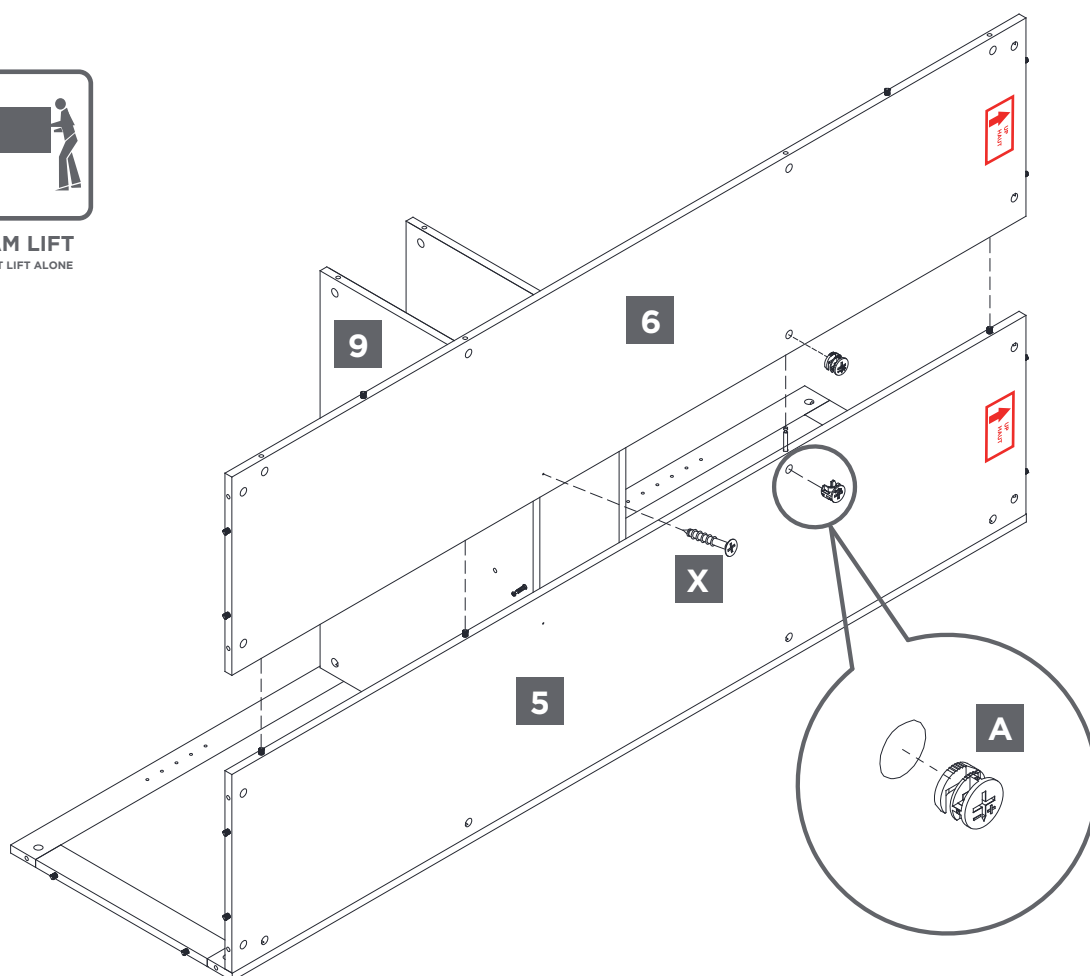


TEAM LIFT
DO NOT LIFT ALONE



STEP-BY-STEP GUIDE

STEP 12


A X4	P X2	K X1
		

Attach right panel **4** to fixed shelf **8** and fixed shelf **9** using four cam locks **A**. Tighten cam locks **A**. (If there is not enough space to use screwdriver, you can use hex key **K** to tighten cam locks **A**.)

Cover cam locks **A** using two coated paper stickers **P** on fixed shelf **9**.



TEAM LIFT
DO NOT LIFT ALONE

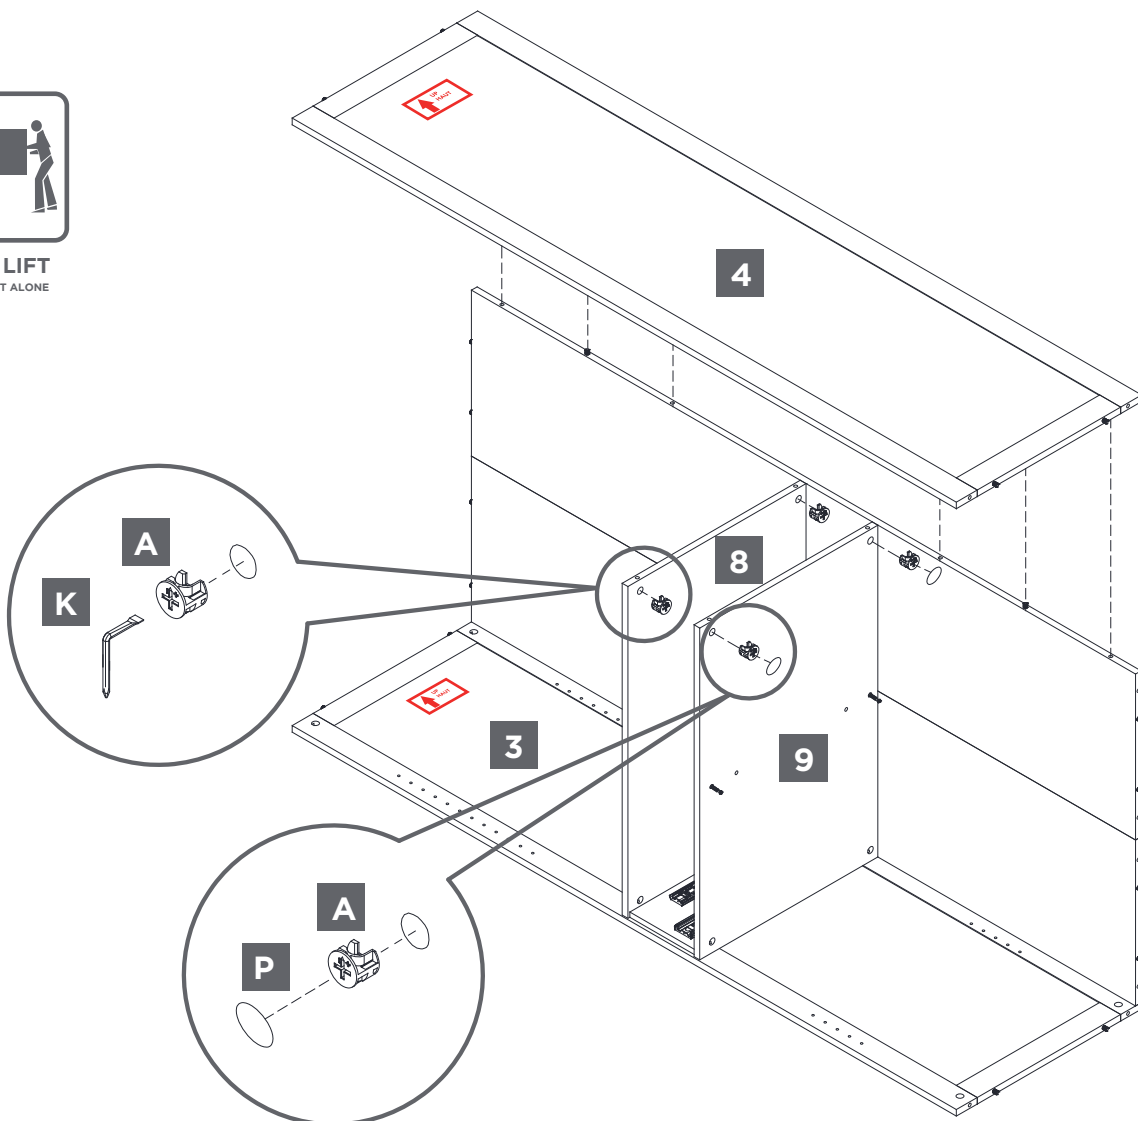


STEP-BY-STEP GUIDE

STEP 13

A X4




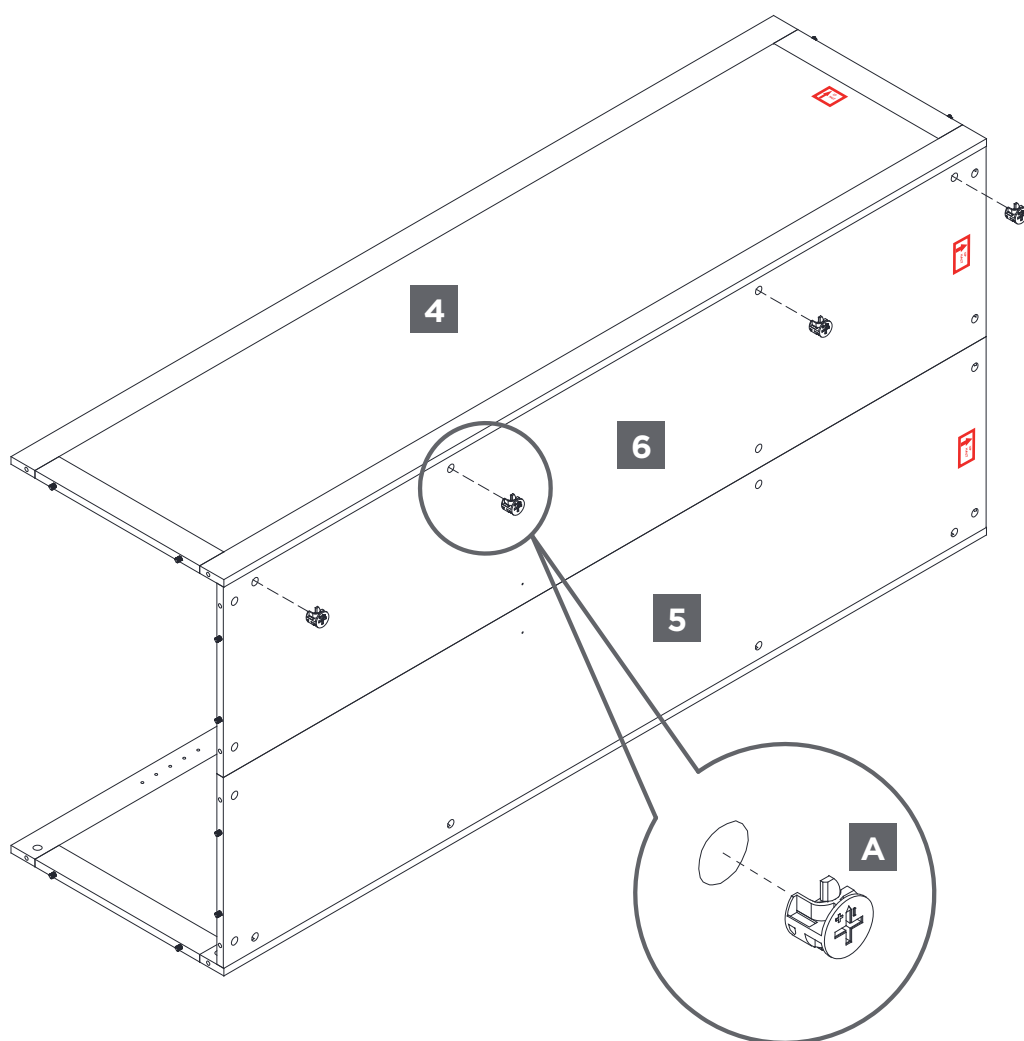


Attach right panel **4** to right back panel **6** using four cam locks **A**. Tighten cam locks **A**.



STEP-BY-STEP GUIDE


STEP 14

1 X1	A X4	B X8	P X4
			

Attach eight cam bolts **B** to top panel **1**. Do not over-tighten.

Attach top panel **1** to left panel **3** and right panel **4** using four cam locks **A**.
Tighten cam locks **A**.

Cover cam locks **A** using four coated paper stickers **P**.

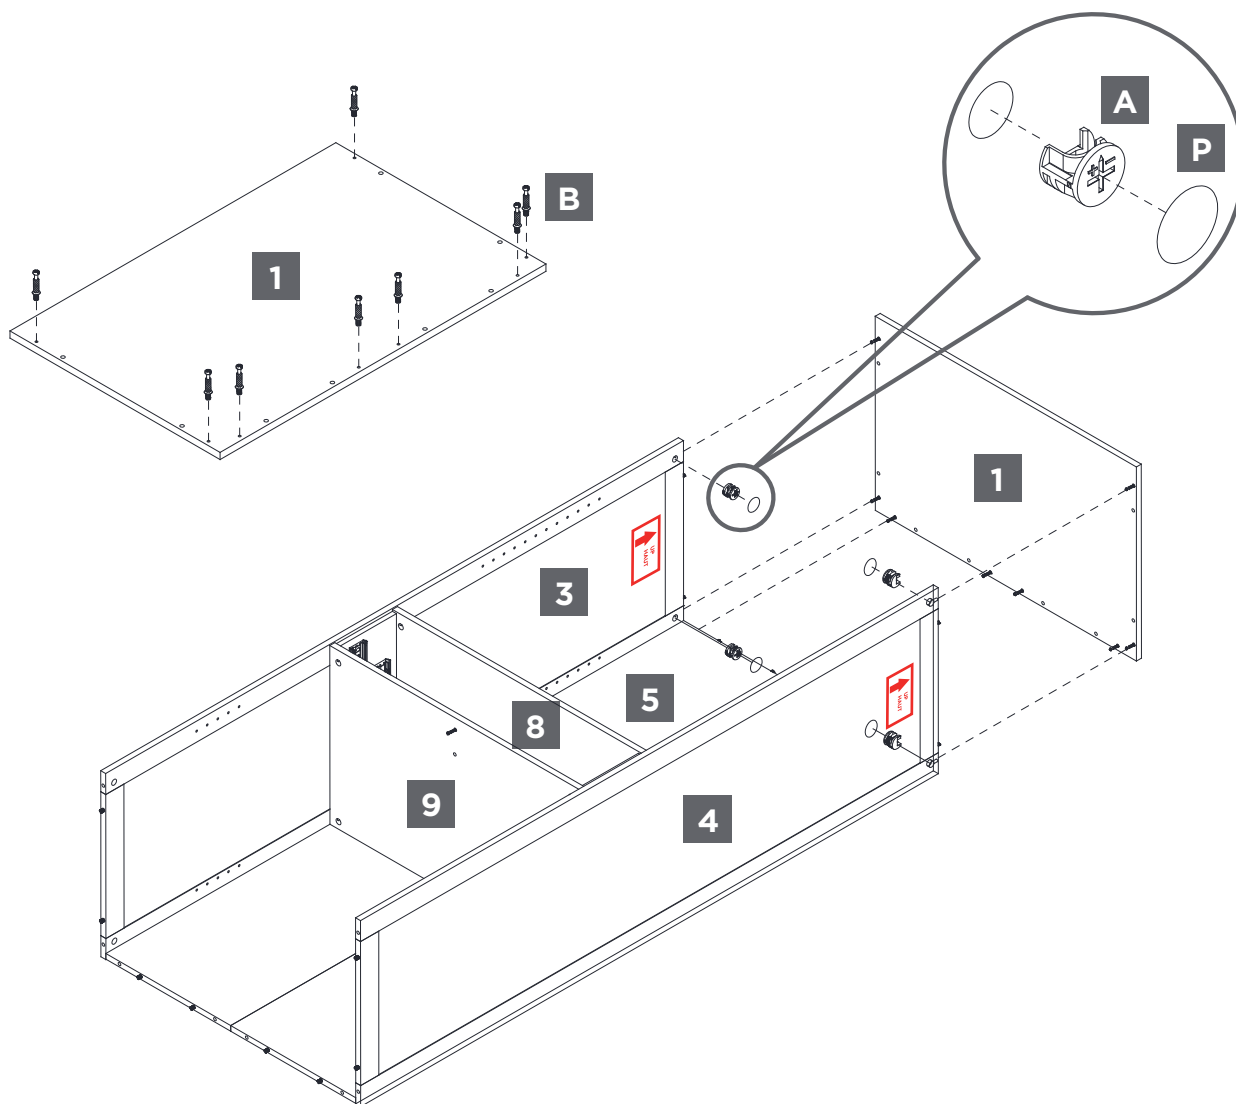


STEP-BY-STEP GUIDE

STEP 15

A X4








Attach top panel **1** to left back panel **5** and right back panel **6** using four cam locks **A**. Tighten cam locks **A**.

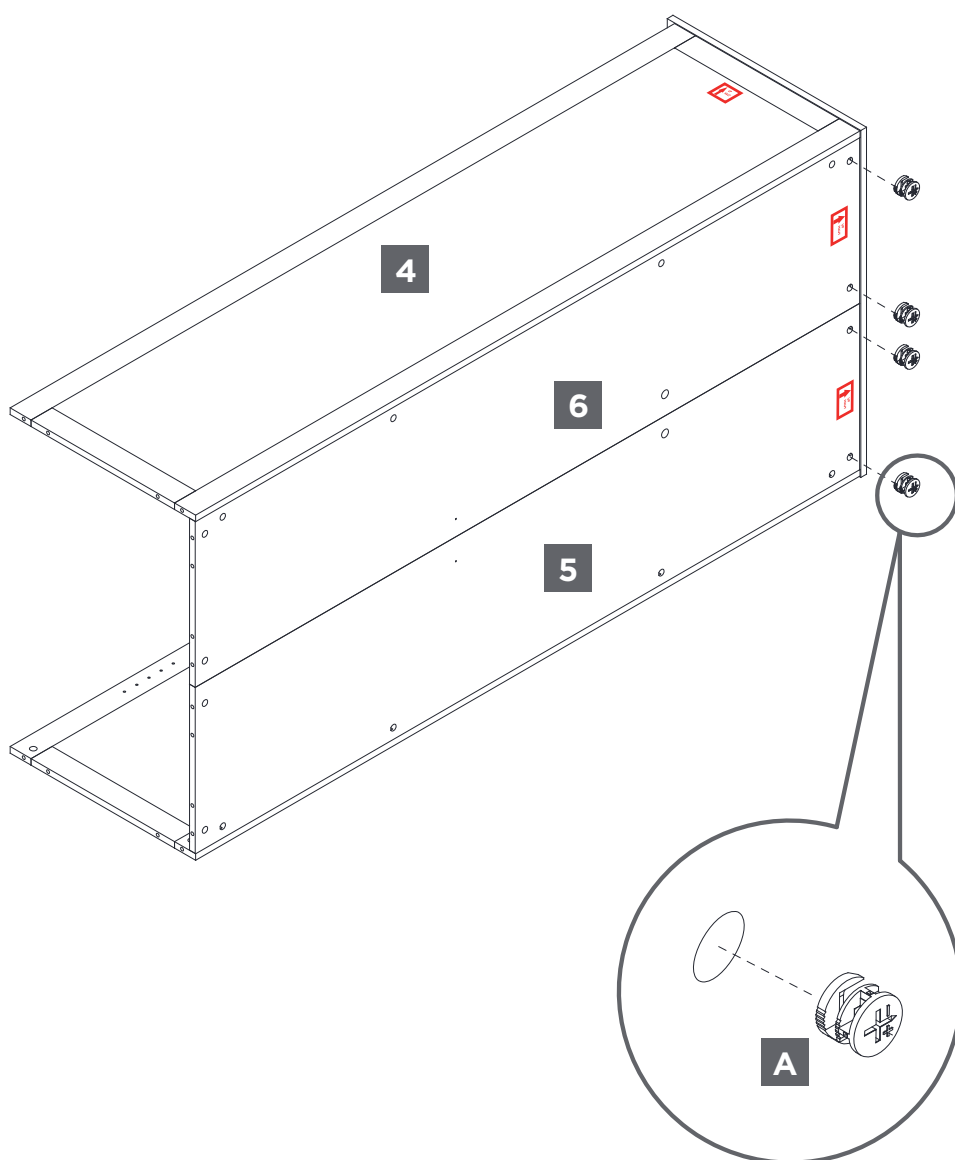


STEP-BY-STEP GUIDE

STEP 16



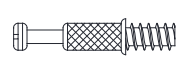
12 X1	13 X1	14 X1	15 X1	C X12
				

Insert 12 wood dowels **C** to front apron **12**, left apron **13**, right apron **14** and back apron **15**, then attach front apron **12**, left apron **13**, right apron **14** and back apron **15** together as shown.

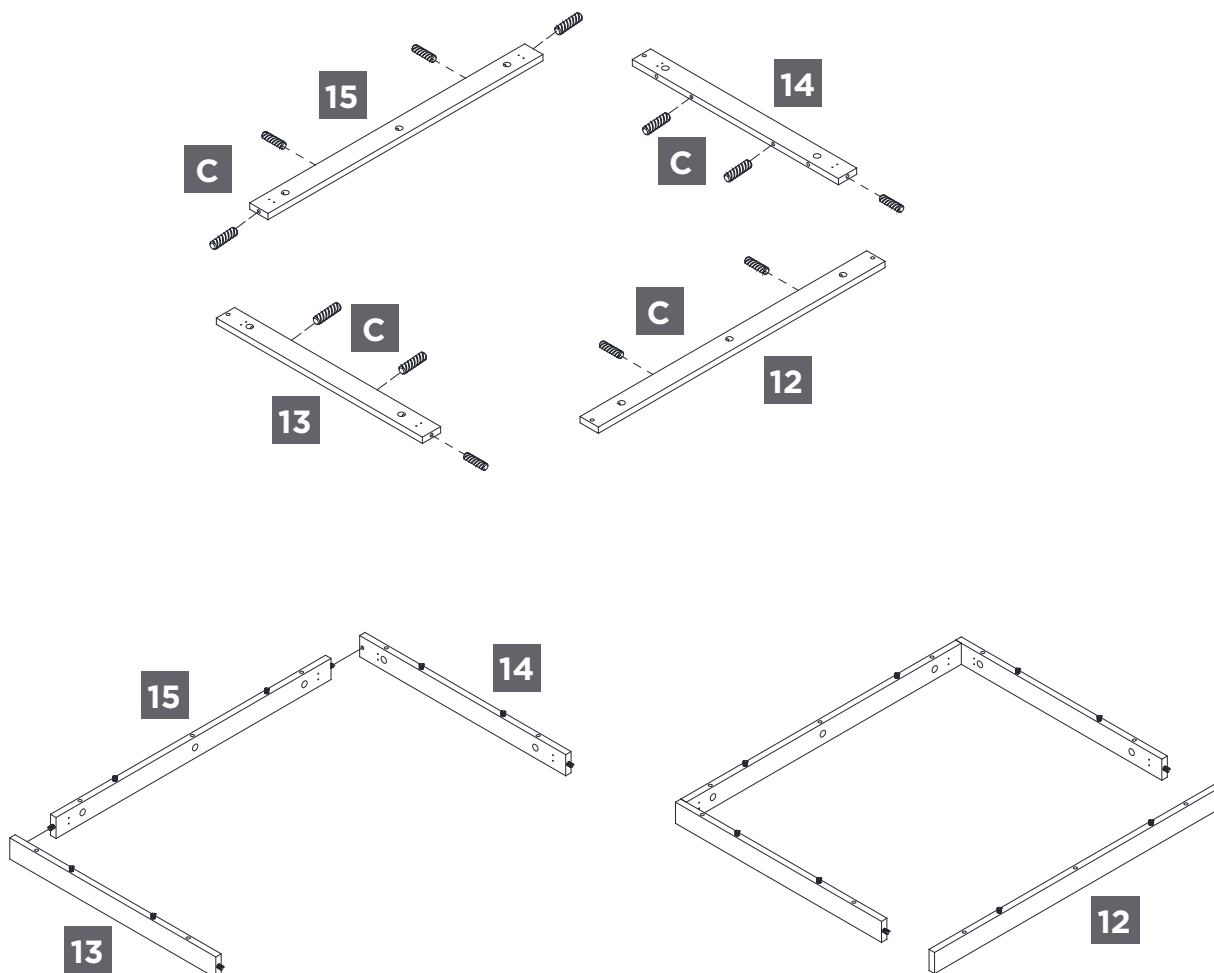


STEP-BY-STEP GUIDE

STEP 17

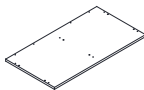2 X1	A X10	B X10
		


Attach 10 cam bolts **B** to bottom panel **2**. Do not over-tighten.

Attach front apron **12**, left apron **13**, right apron **14** and back apron **15** to bottom panel **2** using 10 cam locks **A**. Tighten cam locks **A**.

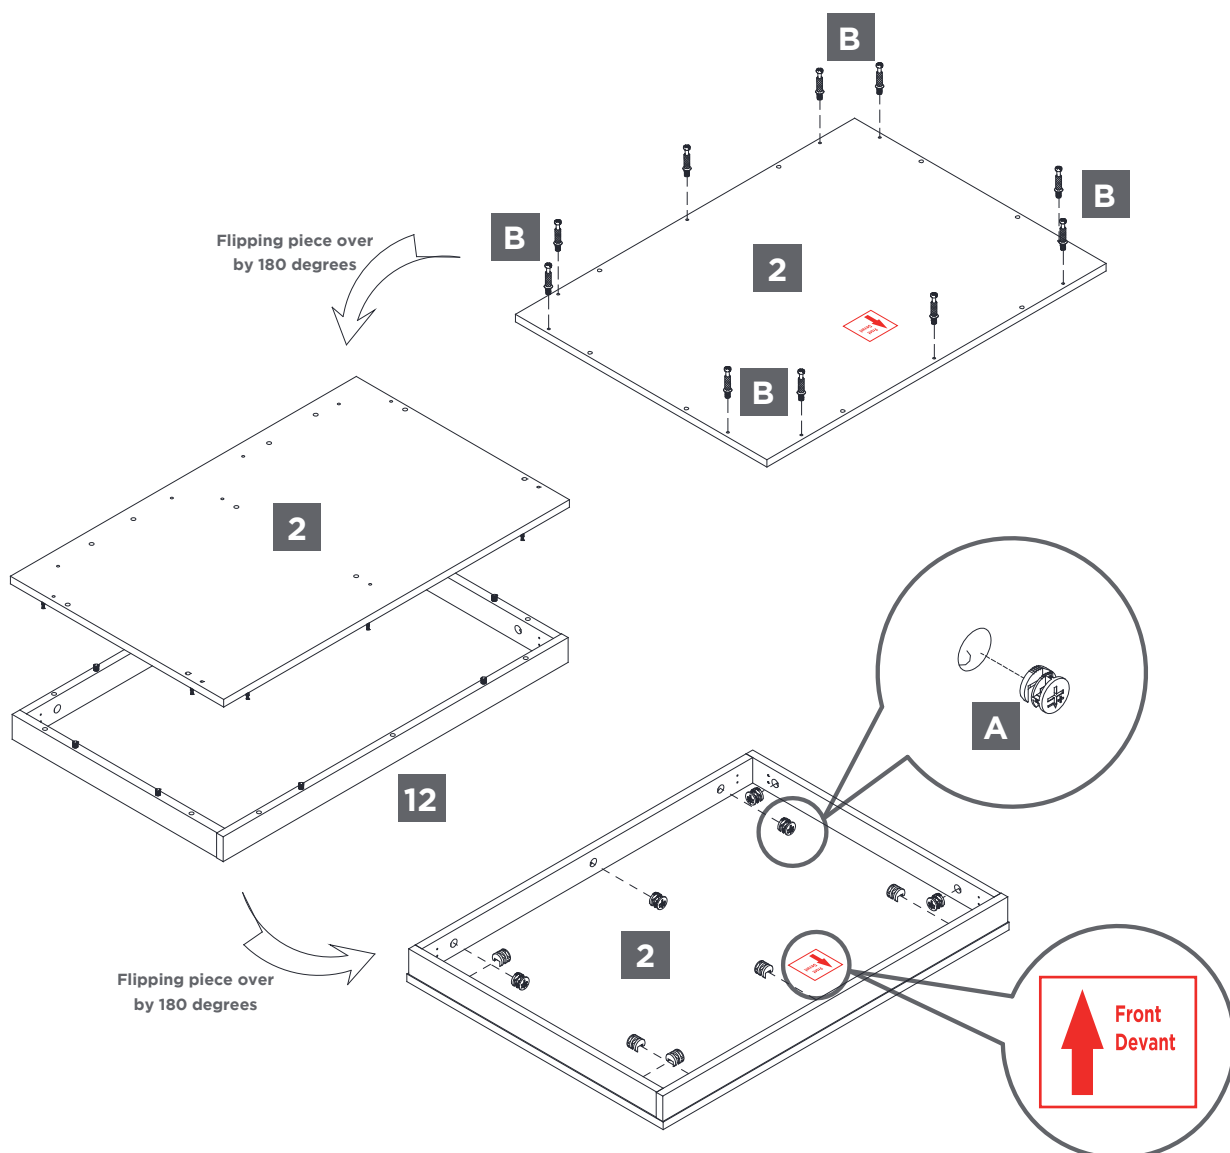


STEP-BY-STEP GUIDE

STEP 18

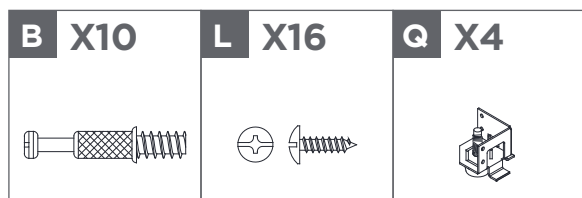


Attach four adjustable levellers **Q** using four screws **L** each.

Attach 10 cam bolts **B** to bottom panel **2**. Do not over-tighten.

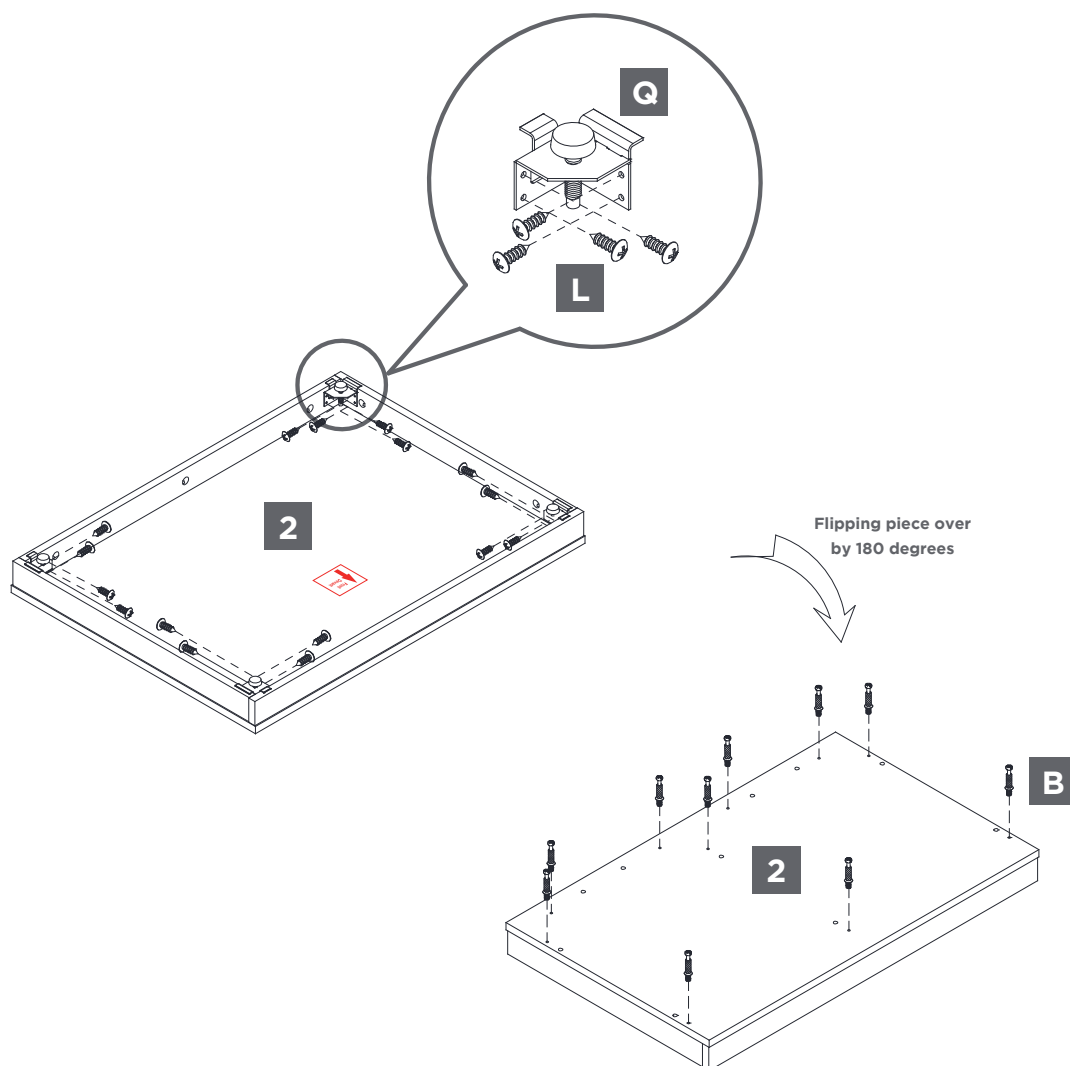

STEP-BY-STEP GUIDE


STEP 19

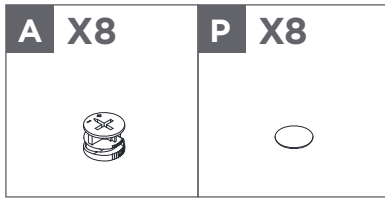

Attach middle partition **11** to fixed shelf **9** using two cam locks **A**. Tighten cam locks **A**.

Attach bottom panel **2** to middle partition **11**, left panel **3** and right panel **4** using six cam locks **A**. Tighten cam locks **A**.

Cover cam locks **A** using eight coated paper stickers **P**.

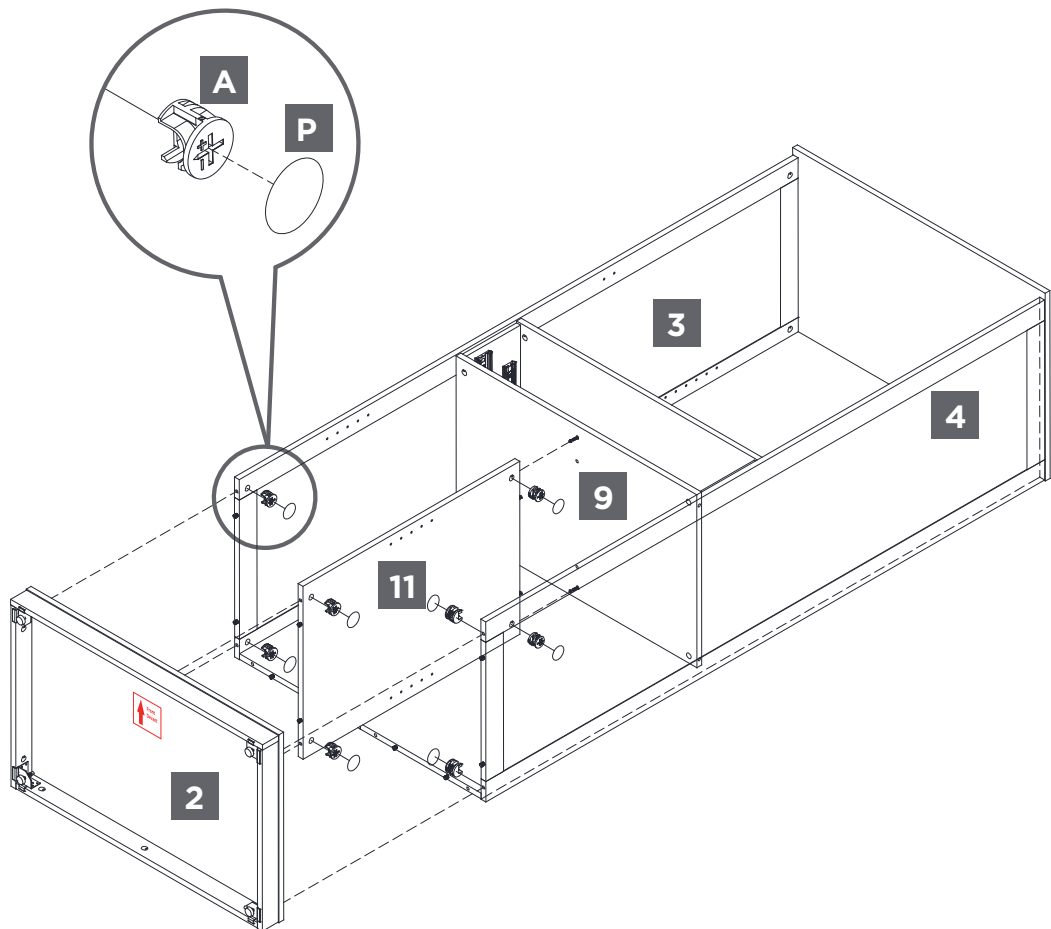


STEP-BY-STEP GUIDE

STEP 20

A X4



Attach bottom panel **2** to left back panel **5** and right back panel **6** using four cam locks **A**. Tighten cam locks **A**.


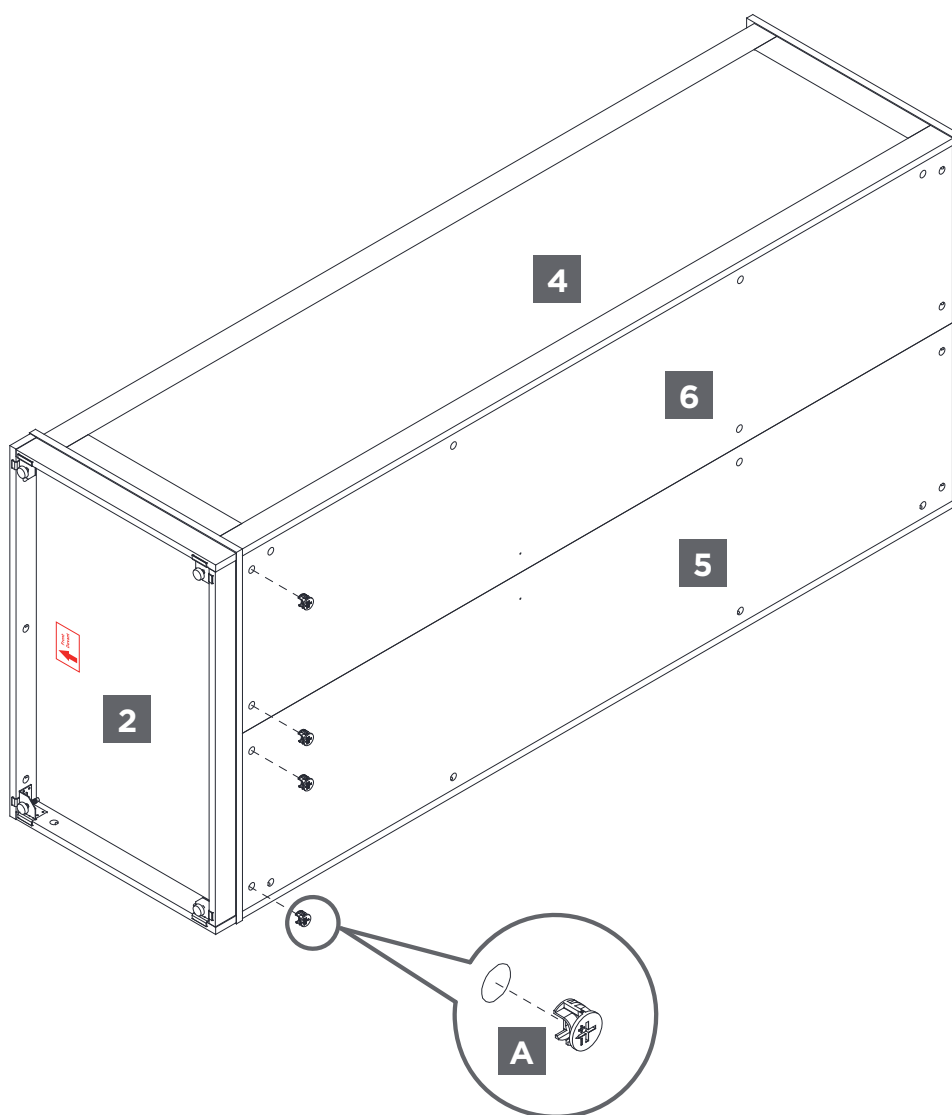


STEP-BY-STEP GUIDE

STEP 21







Pull the inner ball bearing slide on each side all the way out till it stops (may be slightly greasy).

Insert drawers as shown.

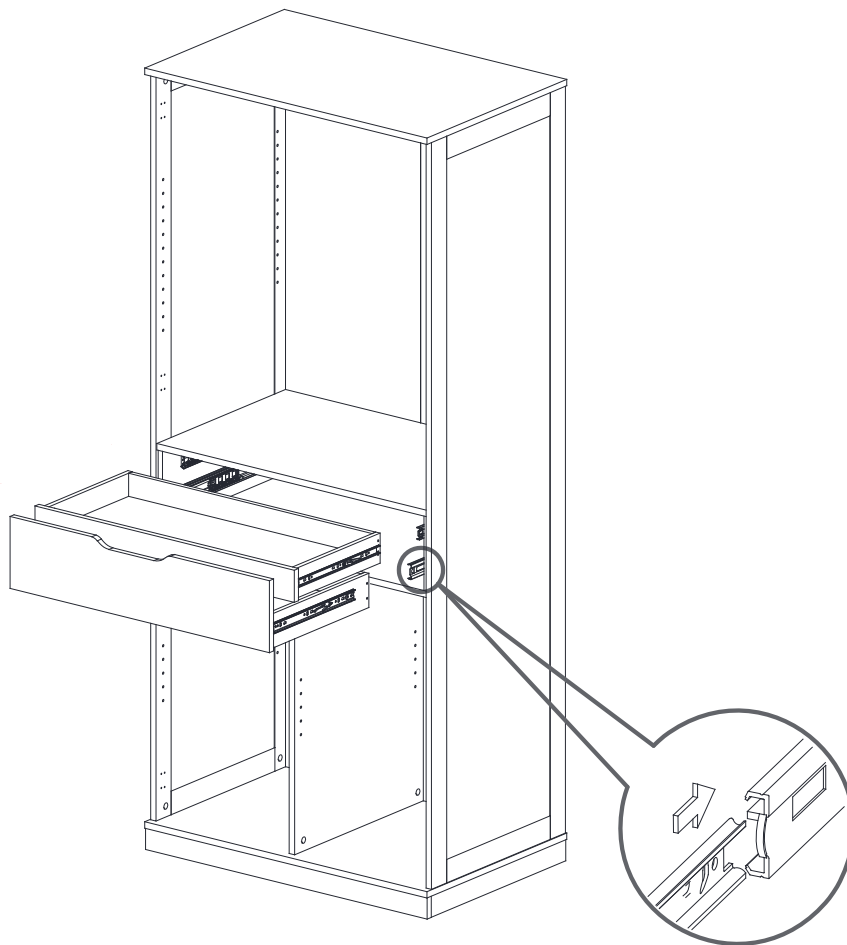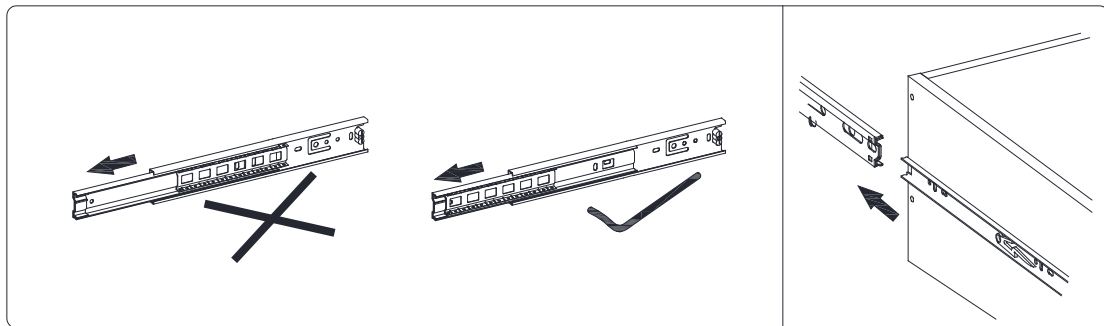


STEP-BY-STEP GUIDE

STEP 22

28 X1	29 X1	D X6	E X12	F X2	G X4
					

Attach six hinges **D** to left door **28** and right door **29** using two screws **E** each.

Attach two handle **F** to left door **28** and right door **29** using two bolts **G** each.

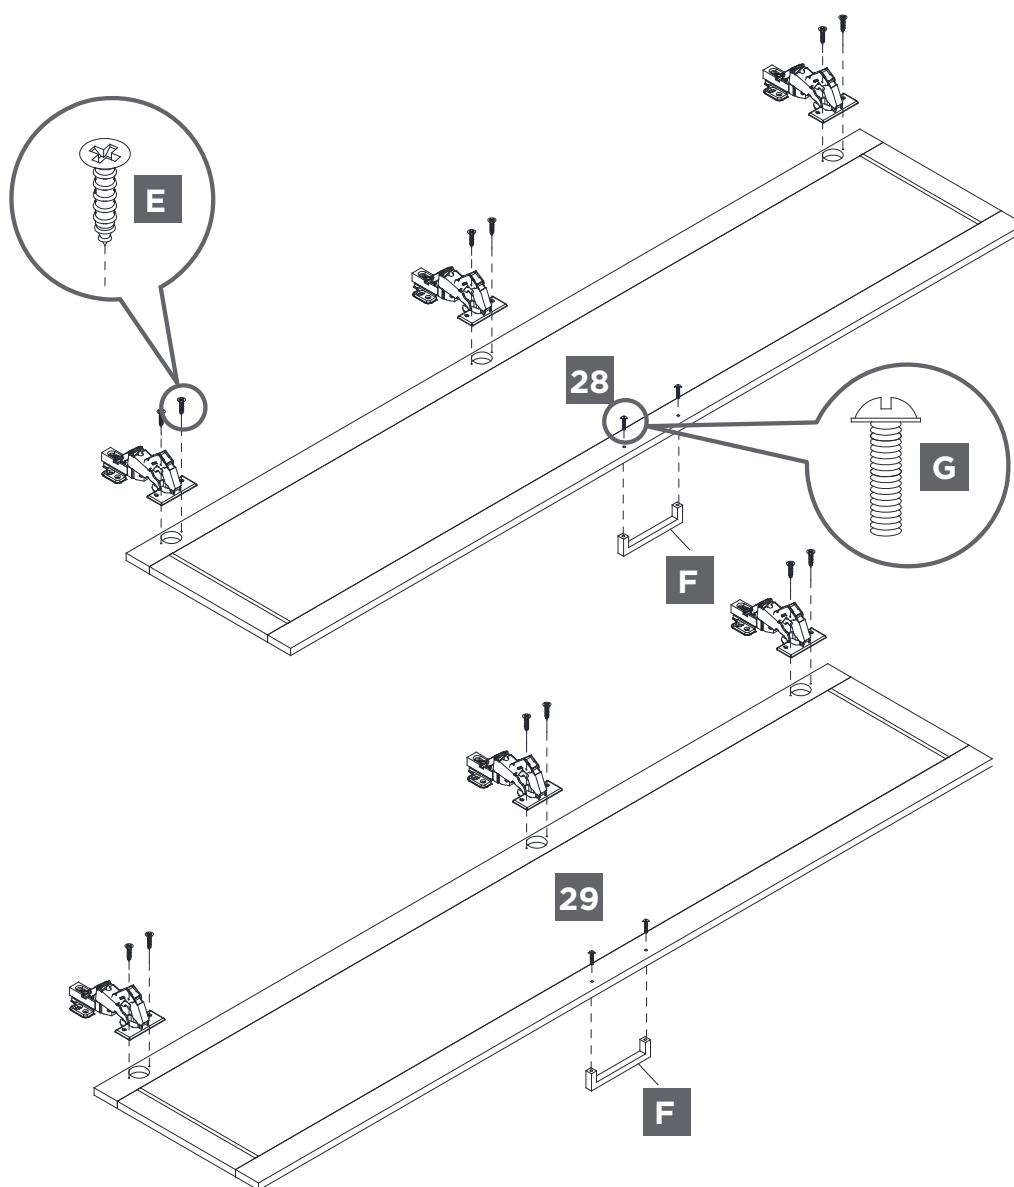

STEP-BY-STEP GUIDE

STEP 23

E X24



Attach left door **28** to left panel **3** using 12 screws **E**.

Attach right door **29** to right panel **4** using 12 screws **E**.







TEAM LIFT
DO NOT LIFT ALONE




STEP-BY-STEP GUIDE

STEP 24

7 X2	10 X2	H X4	R X16
			



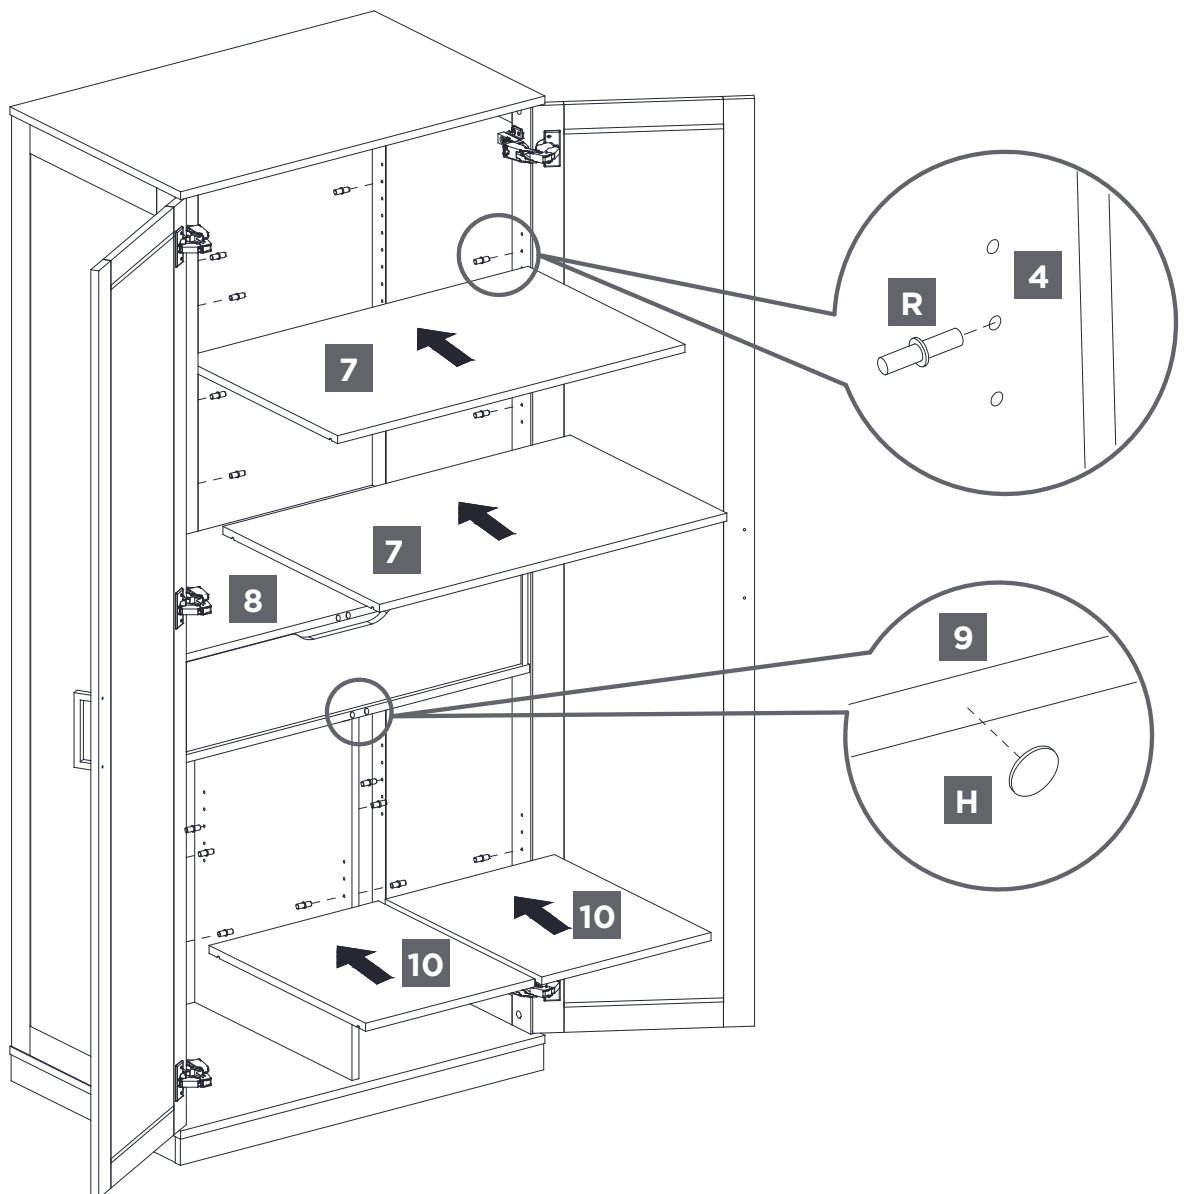

Insert 16 shelf supports **R** into corresponding holes in left panel **3** and right panel **4**, then place two adjustable shelves **7** and two adjustable shelves **10** as shown.

Place four door bumpers **H** to fixed shelf **8** and fixed shelf **9** as shown.



TIP RESTRAINT


STEP 25

S X2	T X2	U X4	V X2
			

Pick your desired area of placement. Drill two small holes approximately 3/8" (9.5 mm) in diameter and approximately 2" (5 cm) deep. Use a level to make sure the two holes you drill are level. After you drill the holes, insert wall anchors **V** into wall.

Attach metal brackets **U** to wall using screws **S**.

Attach metal brackets **U** to top panel **1** using screws **T**.

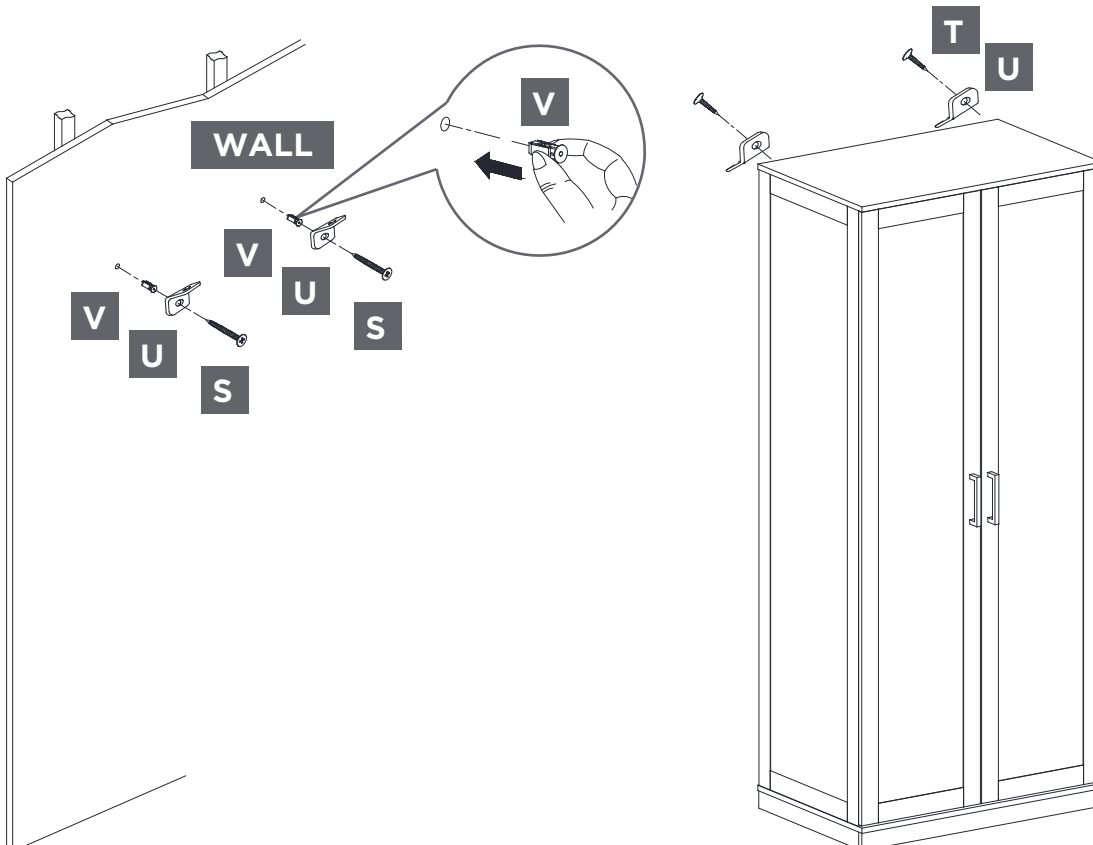

Caution! If installing the unit on drywall or other hollow wall applications, the metal bracket must be fastened to studs, headers, or other structural wall supports. The included anchors are intended for use with solid wall applications only (tile or concrete).

DO NOT USE WITH DRYWALL OR OTHER HOLLOW WALL APPLICATIONS.

TIP RESTRAINT

STEP 26


W X2





Attach cabinet to wall using two nylon straps **W** as shown.



WARNING! TO REDUCE THE RISK OF SERIOUS INJURY AND AVOID THE POTENTIAL FOR FURNITURE TIPPING OVER, INSTALL THE TIP-OVER RESTRAINT HARDWARE.

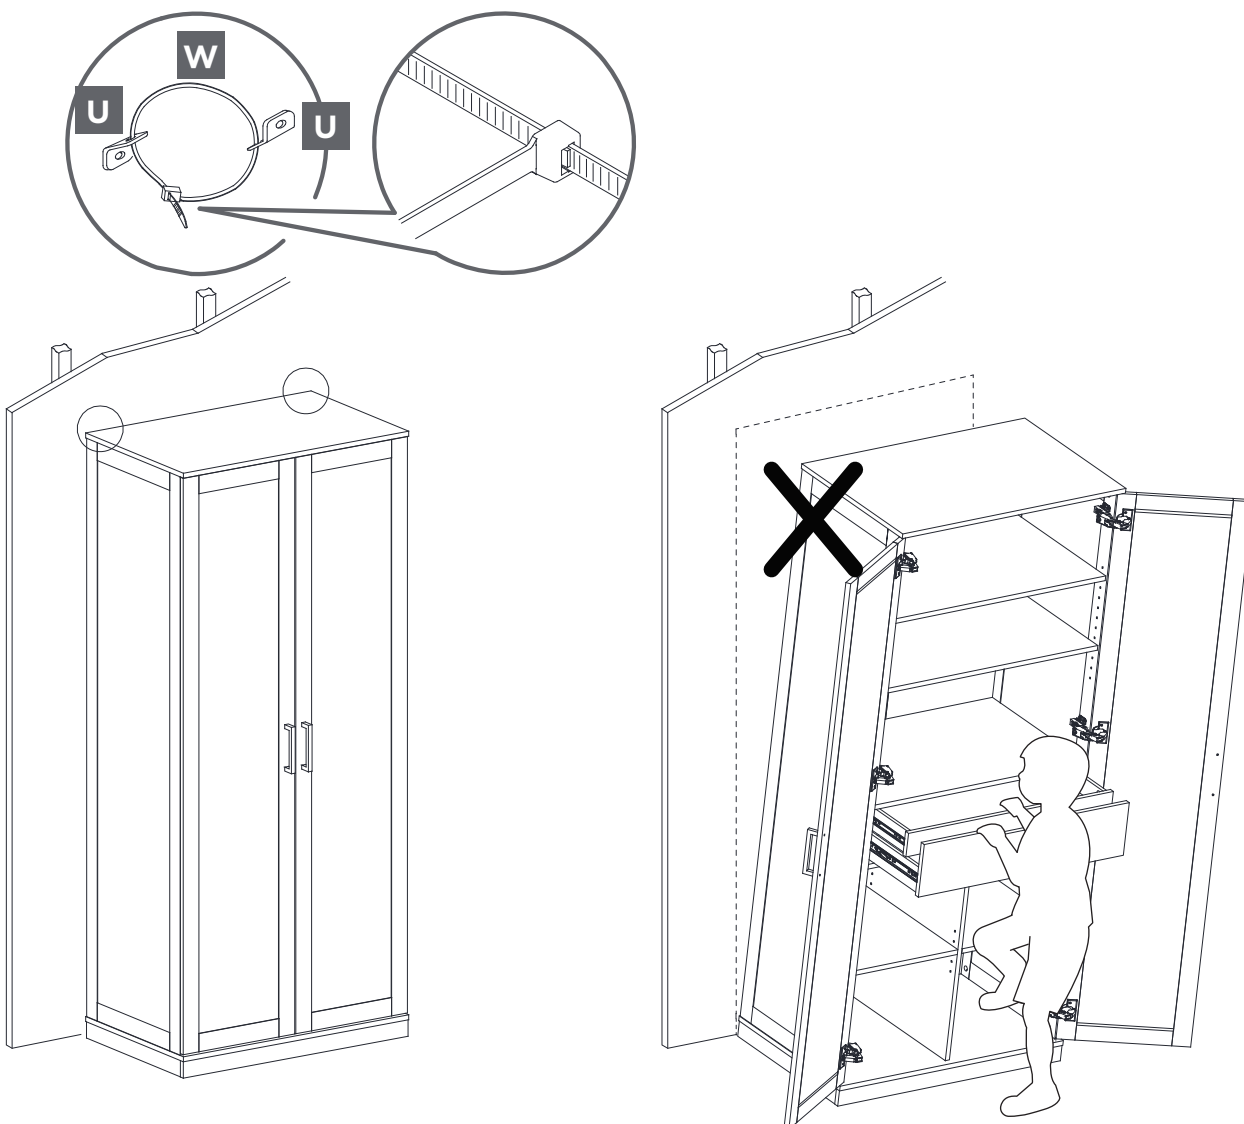

ADJUST DOOR

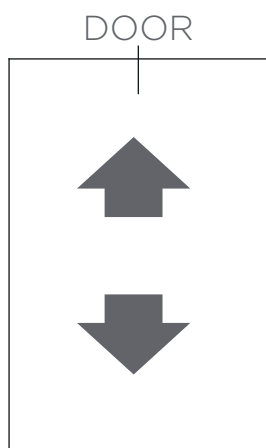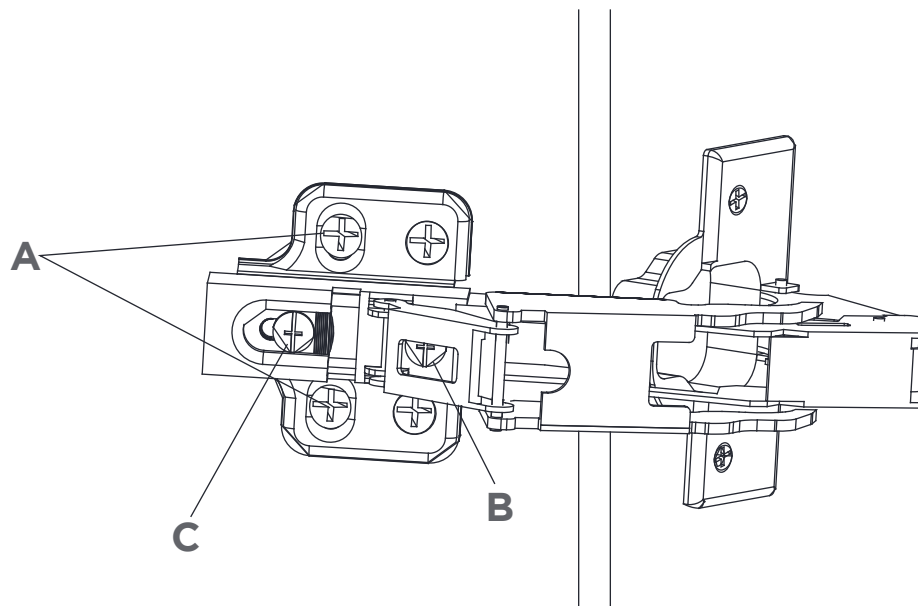


(front view)

If doors are not aligned:

Loosen "A" screws.

Adjust door.

Tighten "A" screws.

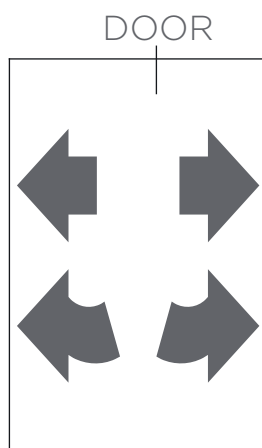


(front view)

If there is a gap between doors:

Loosen "C" screw.

Turn "B" to move door.

Tighten "C" screw.

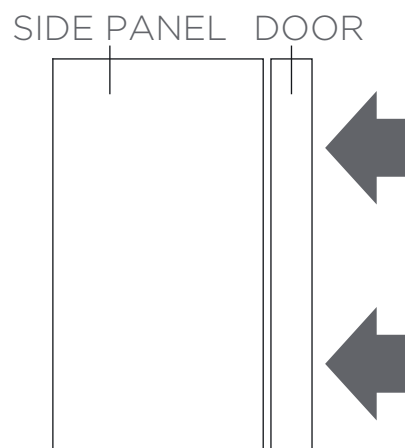

(side view)

If there is a gap between door and panel:


Loosen "B" and "C" screw.

Adjust door.


Tighten "B" and "C" screw.

ADJUST LEVELLERS

Note: If your item is not level, put it on a hard surface, then adjust the levellers.

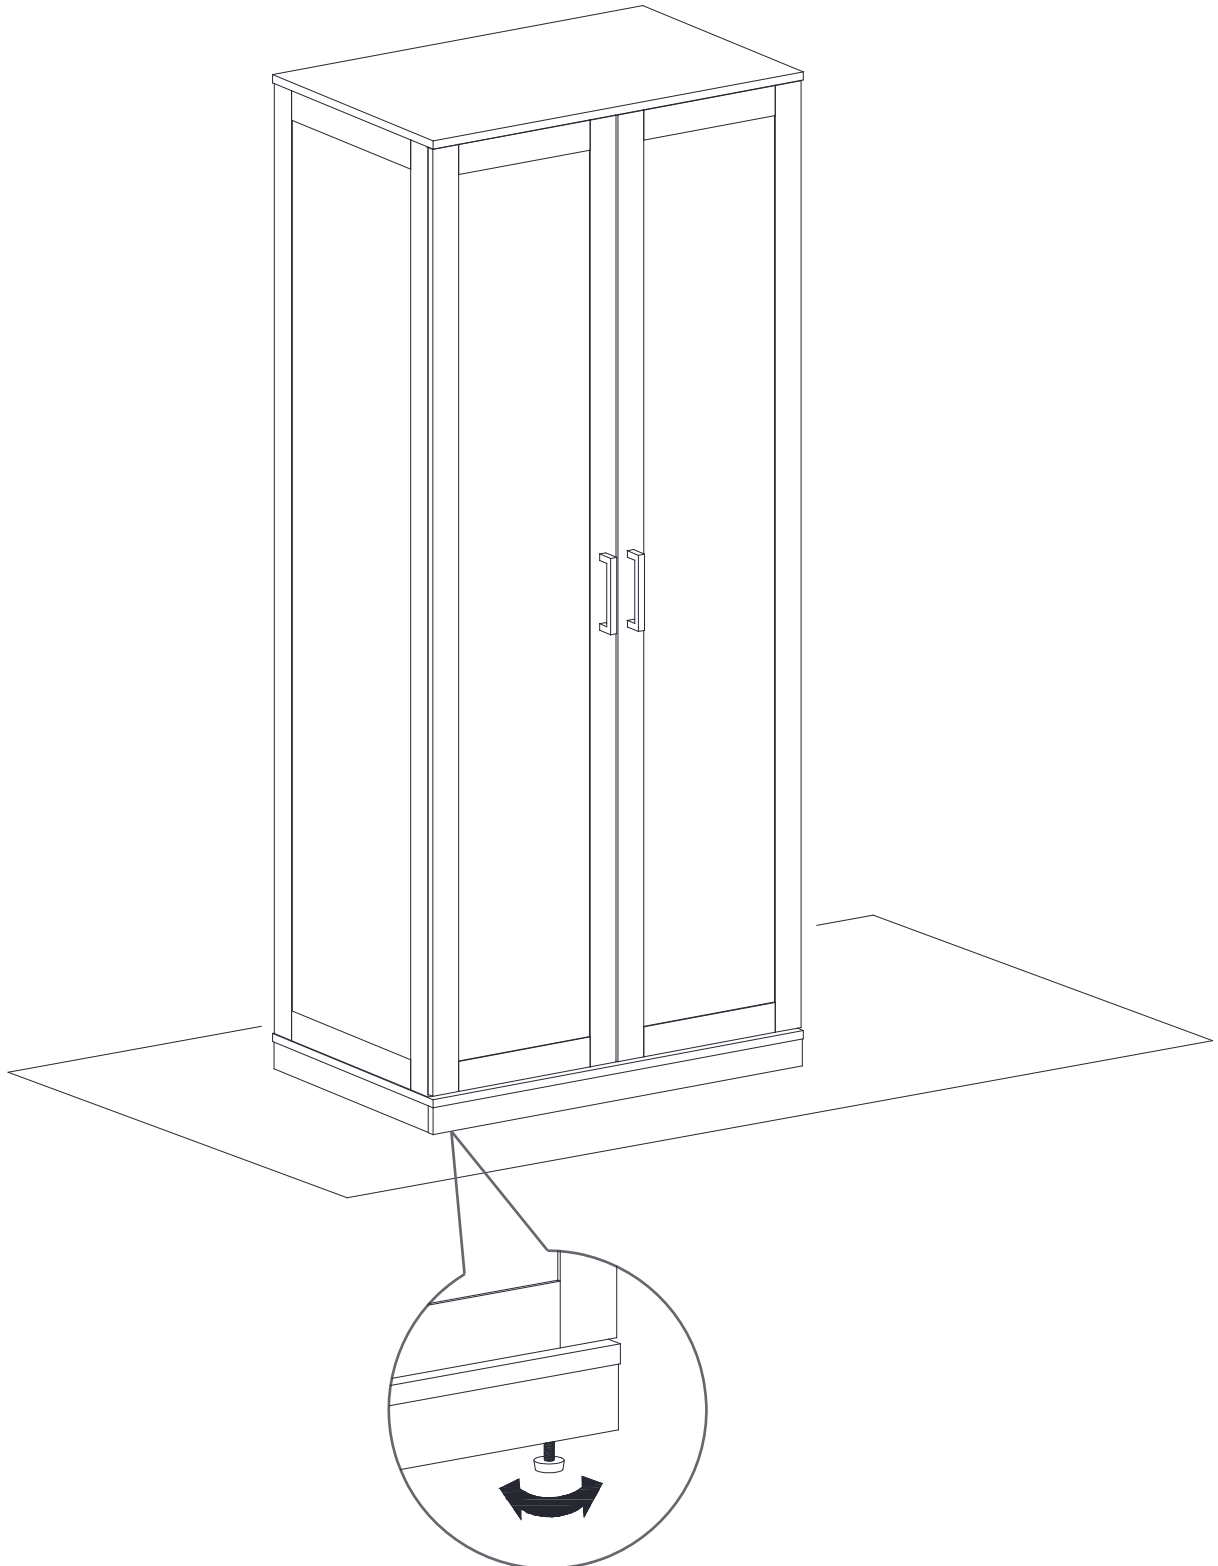

TECHNICAL DATA

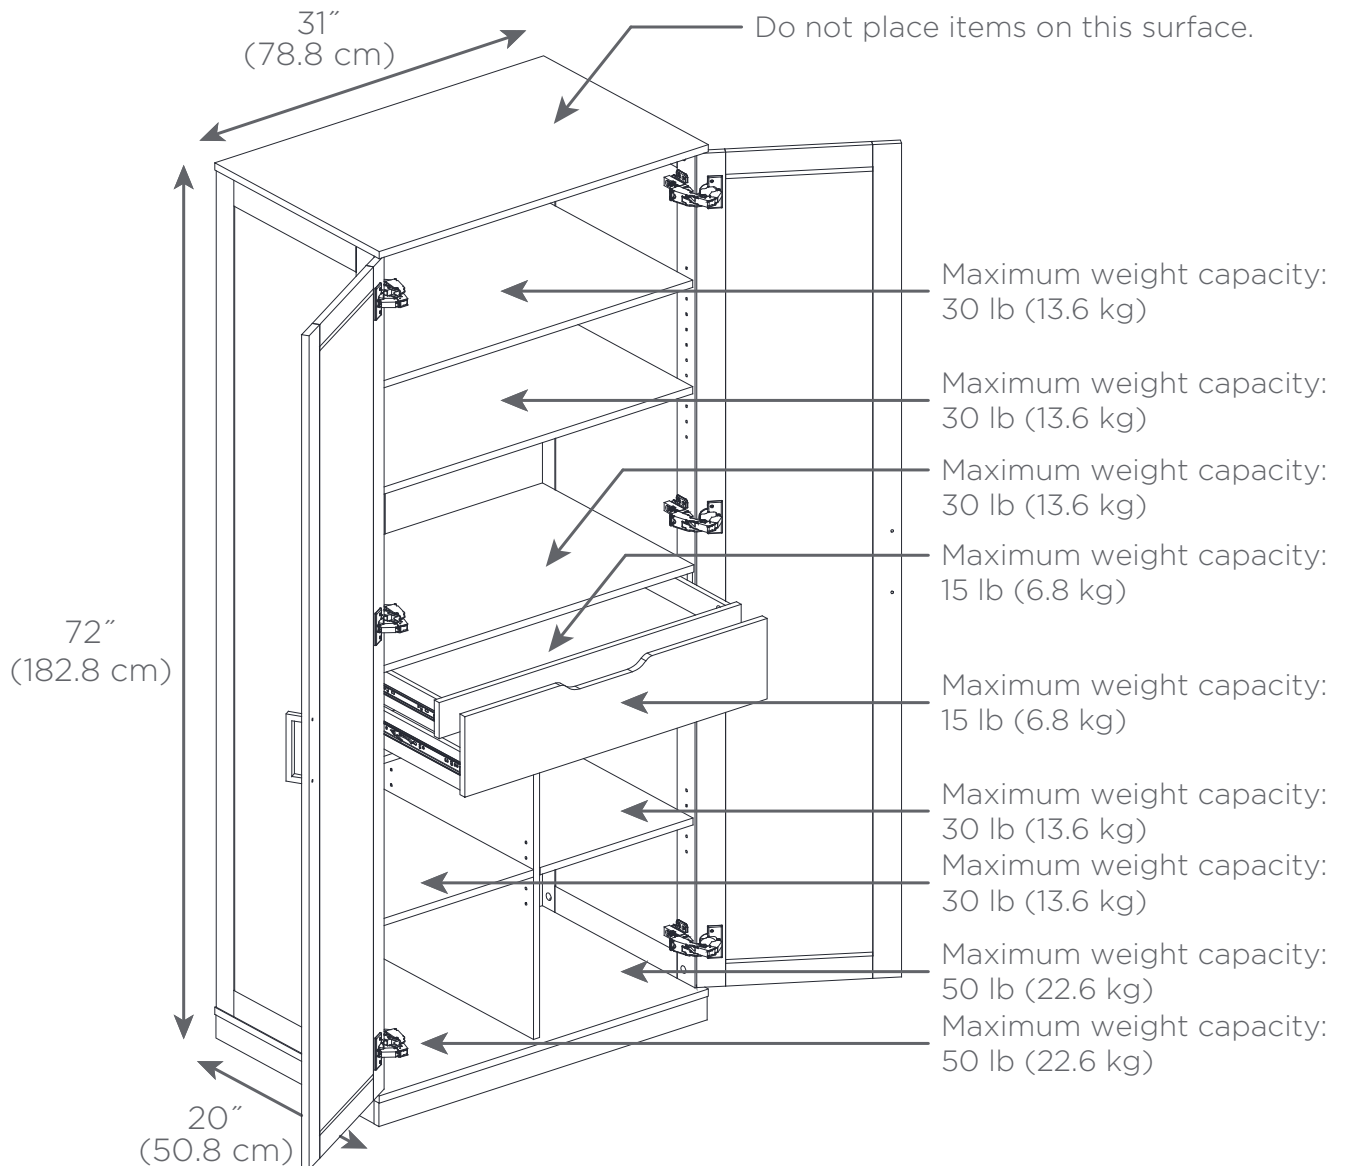

SPECIFICATIONS

ASSEMBLED DIMENSIONS (W x D x H)

31 x 20 x 72"

78.8 x 50.8 x 182.8 cm

ASSEMBLED WEIGHT

189 lb 13 oz

86.1 kg

MAXIMUM WEIGHT CAPACITY

Drawer: 15 lb; Shelf: 30 lb; Bottom: 50 lb

Drawer: 6.8 kg; Shelf: 13.6 kg; Bottom: 22.6 kg

ASSEMBLY TROUBLESHOOTING



**BEFORE RETURNING
YOUR PRODUCT**

**HAVING TROUBLE?
LET US HELP YOU!**

TOLL-FREE:
1-888-670-6684

If you have questions regarding your product or require warranty assistance, please call our customer service helpline.



**CALL US,
WE CAN HELP**

CARING FOR YOUR ITEM

1

Check all screws and bolts periodically for tightness. When required, tighten them again.

2

Always keep children under close supervision while they are using or around this product. Never leave children unattended.

3

For household use only.

4

Wipe clean with damp cloth.

WARRANTY INFORMATION



1-YEAR LIMITED WARRANTY

This CANVAS™ product carries a one (1) year warranty against defects in workmanship and materials. Trileaf Distribution agrees to replace the defective product free of charge within the stated warranty period, when returned by the original purchaser with proof of purchase. This product is not guaranteed against wear or breakage due to misuse and/or abuse.

PRODUCT NO. 168-0176-4

Made in China

Imported by Trileaf Distribution Trifeuil Toronto, Canada M4S 2B8

CANVAS™

INSPIRED BY CANADA

