




## 6-Bin Organizer

---

Product No. 168-0223-2

## Assembly Instructions

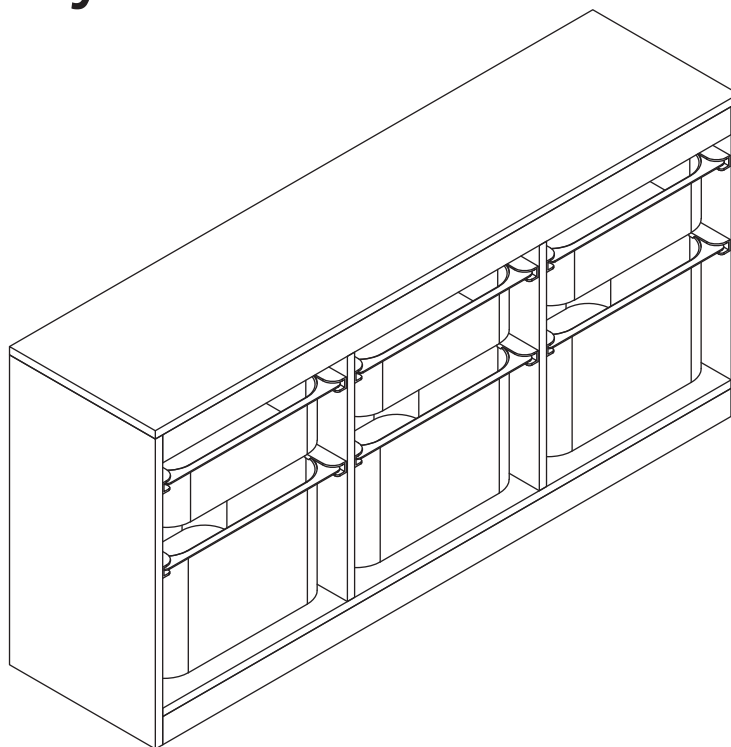

**NEED HELP? GIVE US A CALL!**  
**WE'RE HERE FOR YOU.**

TOLL-FREE:  
**1-877-483-6759**

**IMPORTANT:** Please read this manual carefully  
before beginning assembly of this product.  
Keep this manual for future reference.



From your first apartment to  
downsizing your family home,  
**For LIVING®** is a great place to start.

Uncomplicate your life with timeless  
style and reliable quality that delivers  
everyday solutions for your home.

Let us know how our products  
work for you. Rate and review at  
[canadiantire.ca](https://canadiantire.ca).

# Table of Contents





Parts List	4	Troubleshooting	23
Before You Begin Assembly	7	Caring for Your Item	23
Step-by-step Guide	8	Warranty	24
Technical Data	22		




Warning! Please use your furniture correctly and safely. Improper use can cause safety hazards, or damage to your furniture or household items. Carefully read the following safety information.

- Please read and understand this entire manual before attempting to assemble, operate, or install the product.
- Any assembly or maintenance of the product must be carried out by adults only.
- Some parts may contain sharp edges. Wear protective gloves if necessary.
- To prevent damage, place all parts on a level surface during assembly. Add a layer of protective surface if needed.
- Due to the nature of steel, surface oxidation (rusting) will occur if the protective coating is scratched. This is a natural process. To minimize this condition, it is recommended that care be taken when assembling and handling the product in order to prevent the paint from being scratched.

## Needed for Assembly:

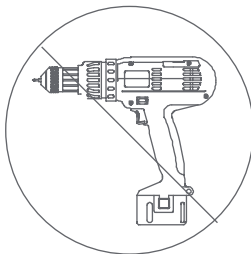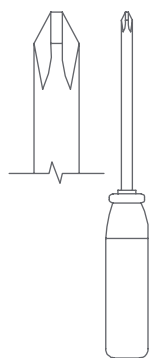







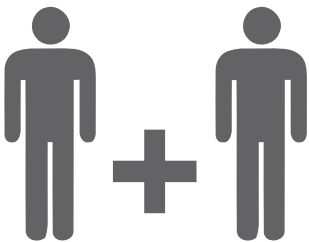



**NOTE:** Do not over-drill.  
Be aware of over-drilling.




No. 2 Cross-head Screwdriver  
Tip Shown Actual Size

2 people








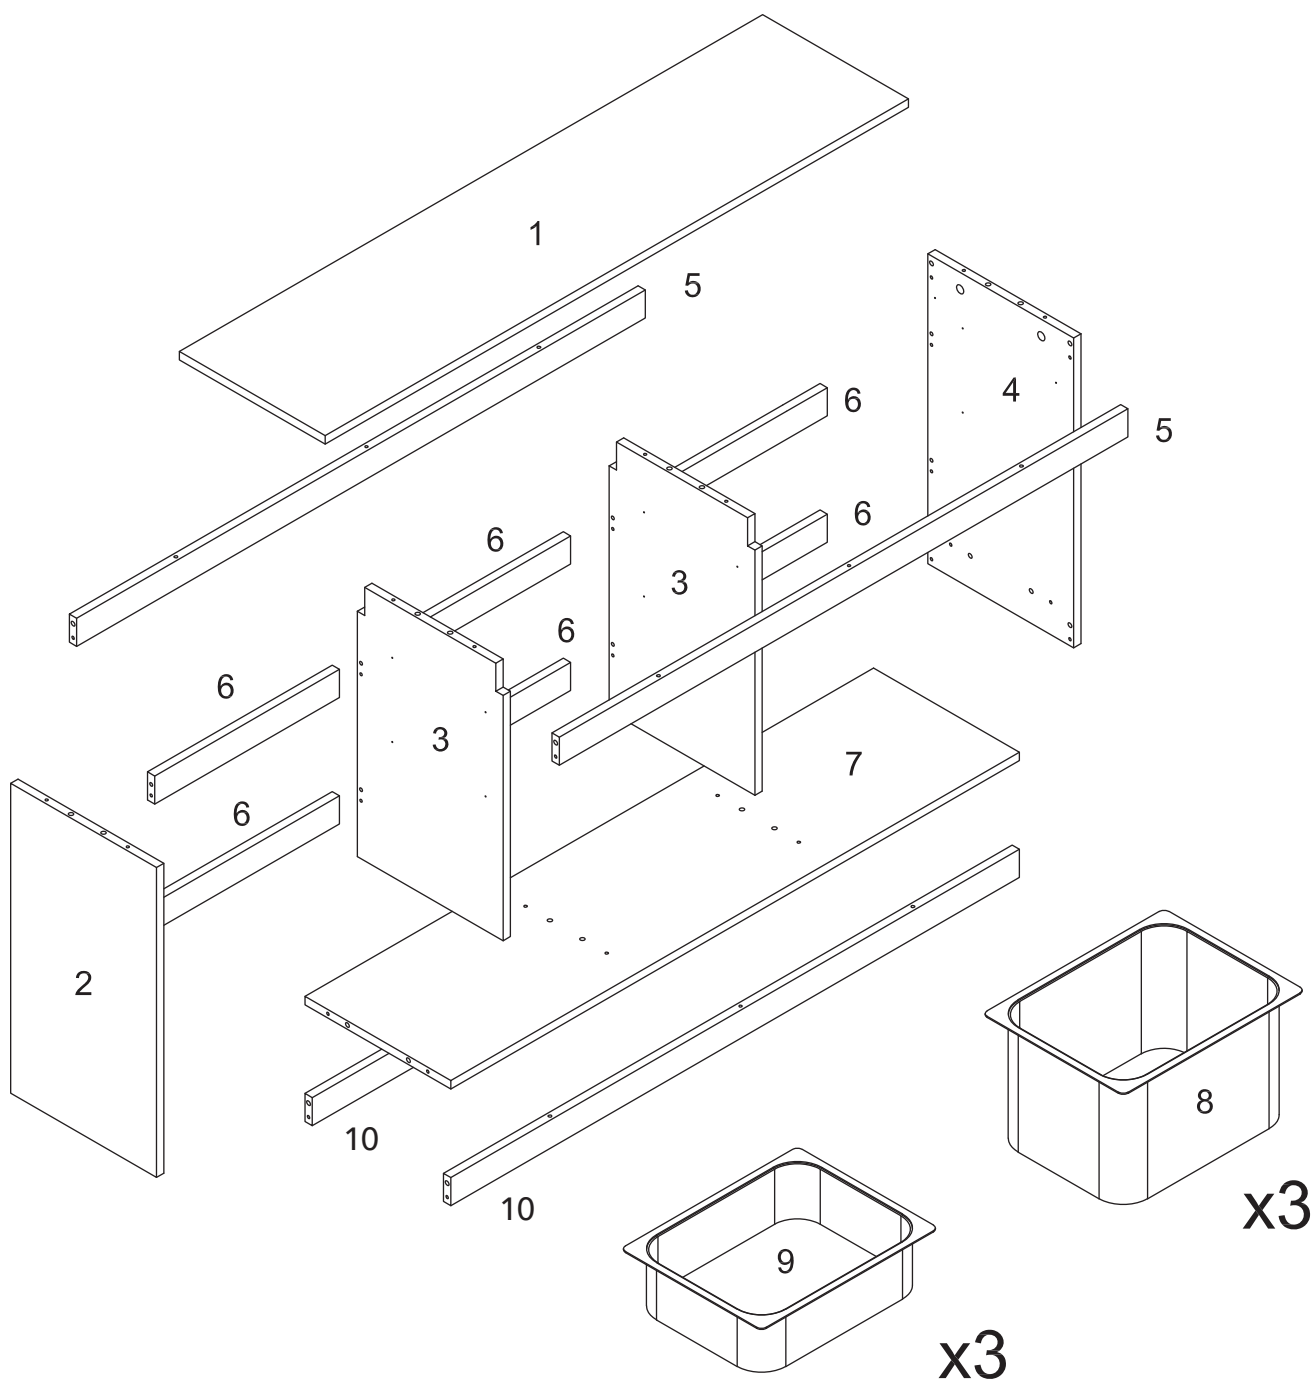





# Parts List

Item	Description	Thumbnail	Quantity
1	Top panel		1
2	Left panel		1
3	Partition		2
4	Right panel		1
5	Upper apron		2
6	Back slat		6
7	Bottom panel		1
8	Large bin		3
9	Small bin		3
10	Bottom apron		2

# Exploded Parts



# Hardware List


Item	Description	Thumbnail	Quantity
A	Cam bolt		36
B	Cam lock		36
C	Wood dowel 6x30		36
D	Left slide rail		6
E	Right slide rail		6
F	Screw M3x14		24
G	Anti-tip bracket		2
H	Screw M4x12		2
I	Screw M4x35		2
J	Wall anchor		2
K	Paper sticker		8
L	Wood dowel 6x50		4
M	Screw M5x45		4

# Before You Begin Assembly



## Make Sure All Parts Are Present

Compare all pieces to the parts and hardware lists, and make sure you have all tools required for assembly.

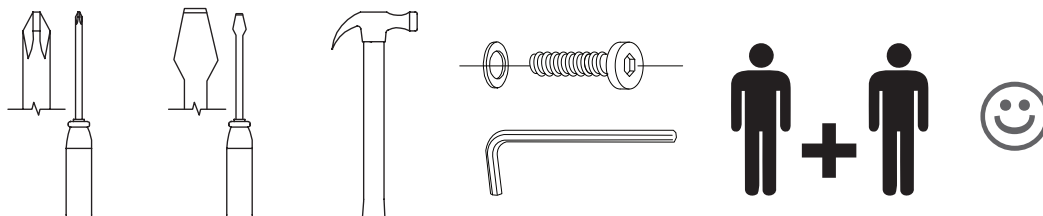

## Assemble in a Cleared Area

Place all parts from the box on the floor in front of you on a clean, dry, level surface to protect the product as it is being built.




## Remove Packaging Materials

Place packing materials back in the box. Do not dispose of packaging materials until assembly is complete.






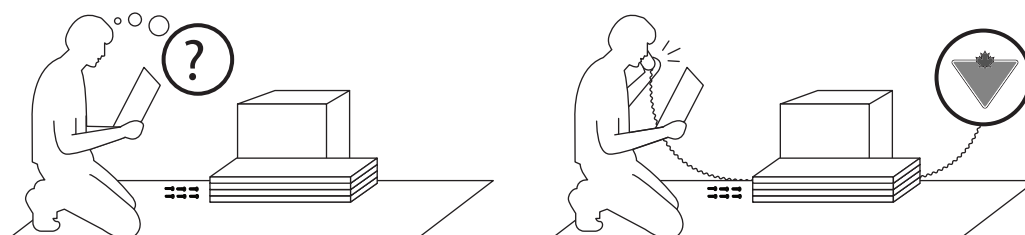


## Read Each Step Carefully

Make sure you understand each step. For any questions, contact For LIVING® customer service centre at 1-877-483-6759 (toll free).



# Step-by-step Guide

## Step 1


<b>2</b> X1	<b>A</b> X8	<b>D</b> X2	<b>F</b> X4	<b>H</b> X1	<b>G</b> X1
					

Insert eight cam bolts **(A)** into left panel **(2)**.

Insert one screw M4x12 **(H)** through anti-tip bracket **(G)** into left panel **(2)**.

Insert four screws M3x14 **(F)** through two left slide rails **(D)** into left panel **(2)**.

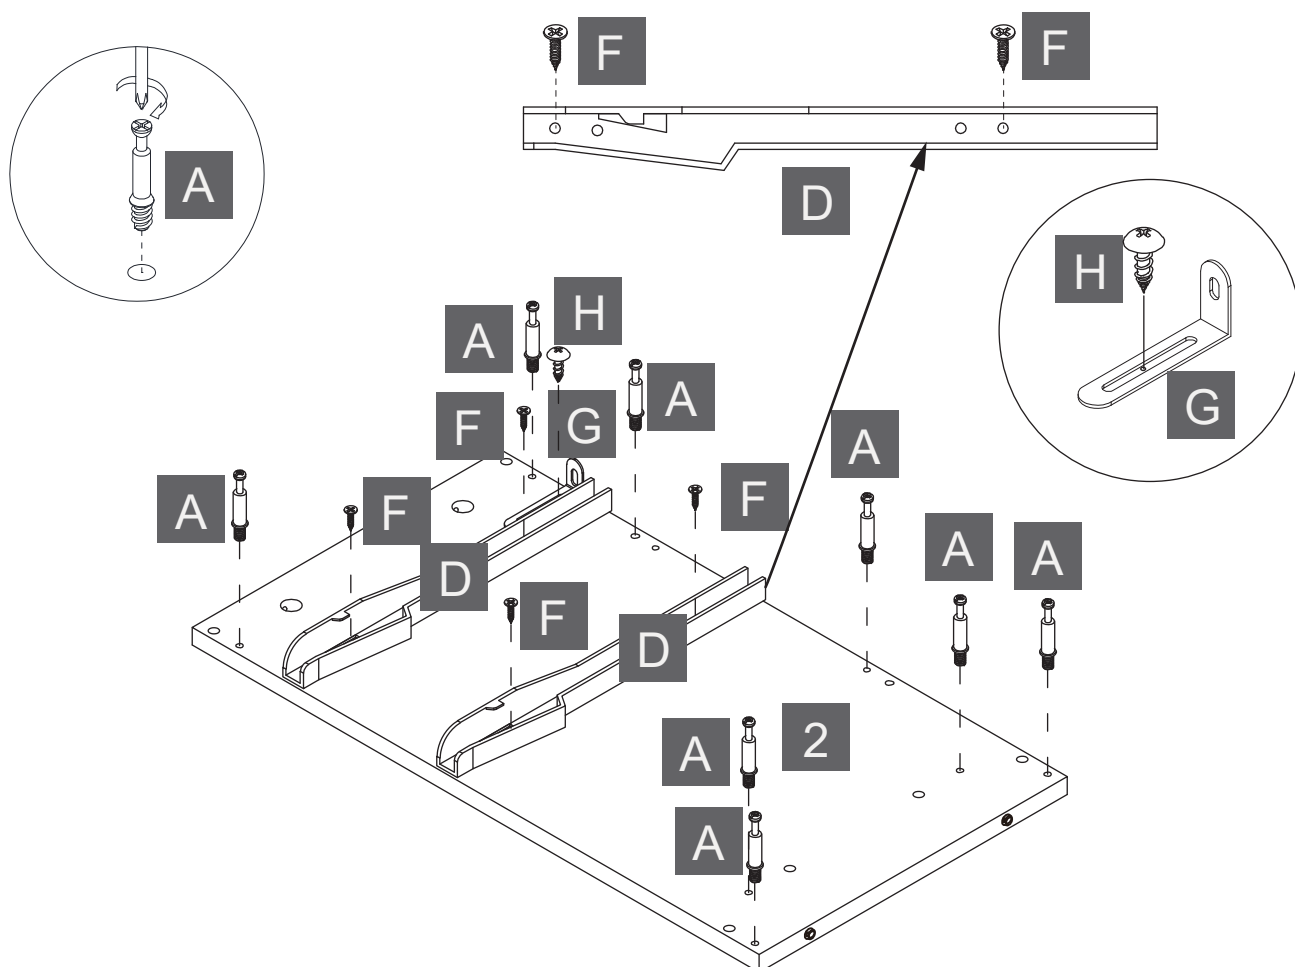





Tighten all cam bolts and screws.





# Step-by-step Guide

## Step 2


<b>4</b> X1	<b>D</b> X8	<b>E</b> X2	<b>F</b> X4	<b>H</b> X1	<b>G</b> X1
					

Insert eight cam bolts **(A)** into right panel **(4)**.

Insert one screw M4x12 **(H)** through anti-tip bracket **(G)** into right panel **(4)**.


Insert four screws M3x14 **(F)** through two right slide rails **(E)** into right panel **(4)**.

Tighten all cam bolts and screws.

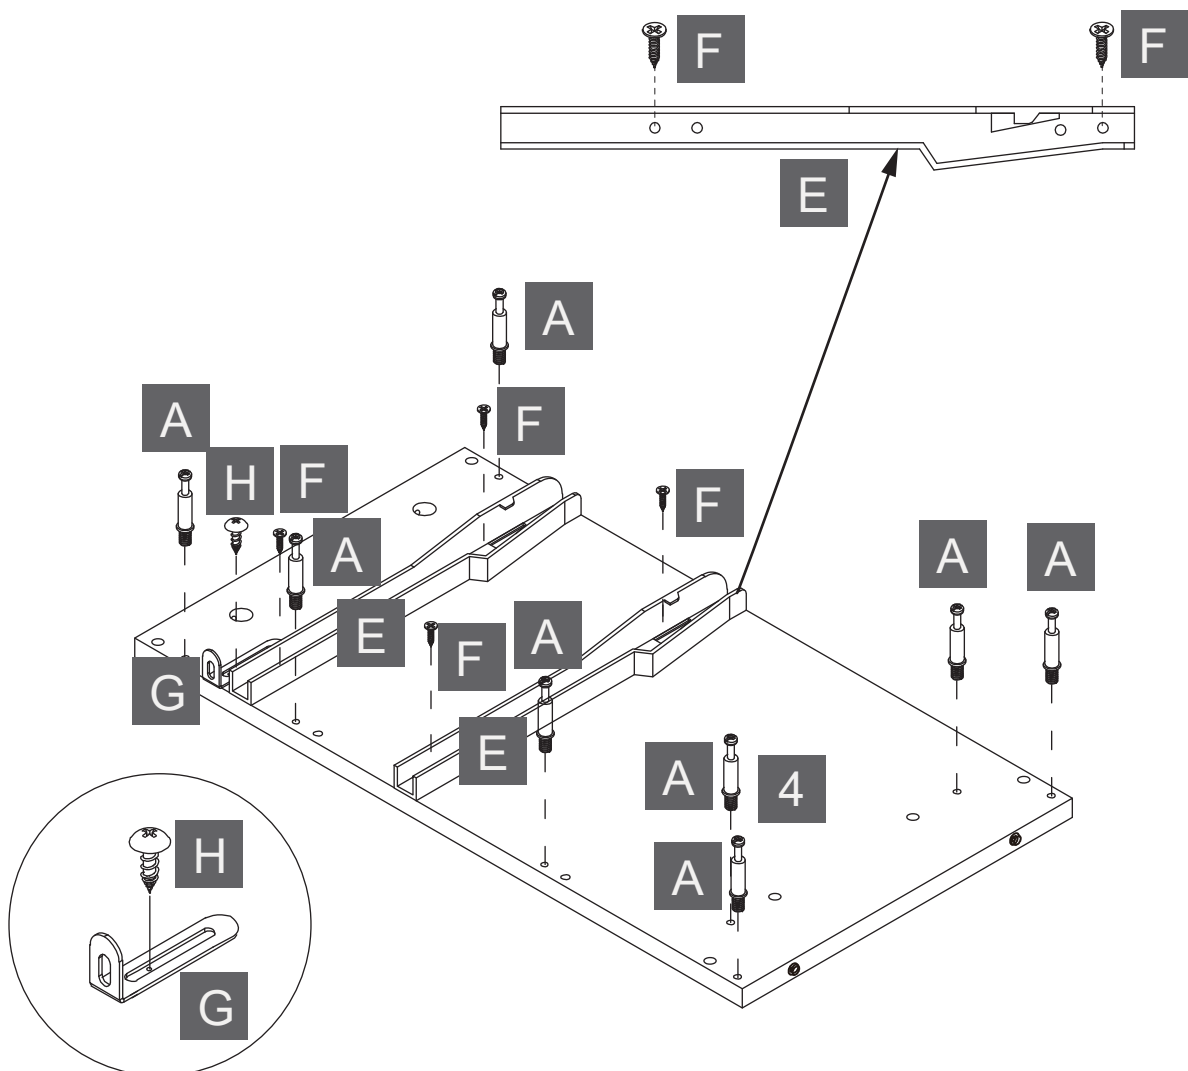

# Step-by-step Guide

## Step 3

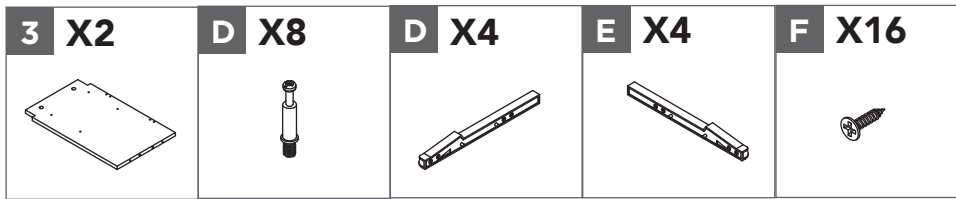


Insert four cam bolts **(A)** into two partitions **(3)** as shown.

Insert eight screws M3x14 **(F)** through four left slide rails **(D)** into the right side of partitions **(3)**.


Insert eight screws M3x14 **(F)** through four right slide rails **(E)** into the left side of partitions **(3)**.

Tighten all cam bolts and screws.

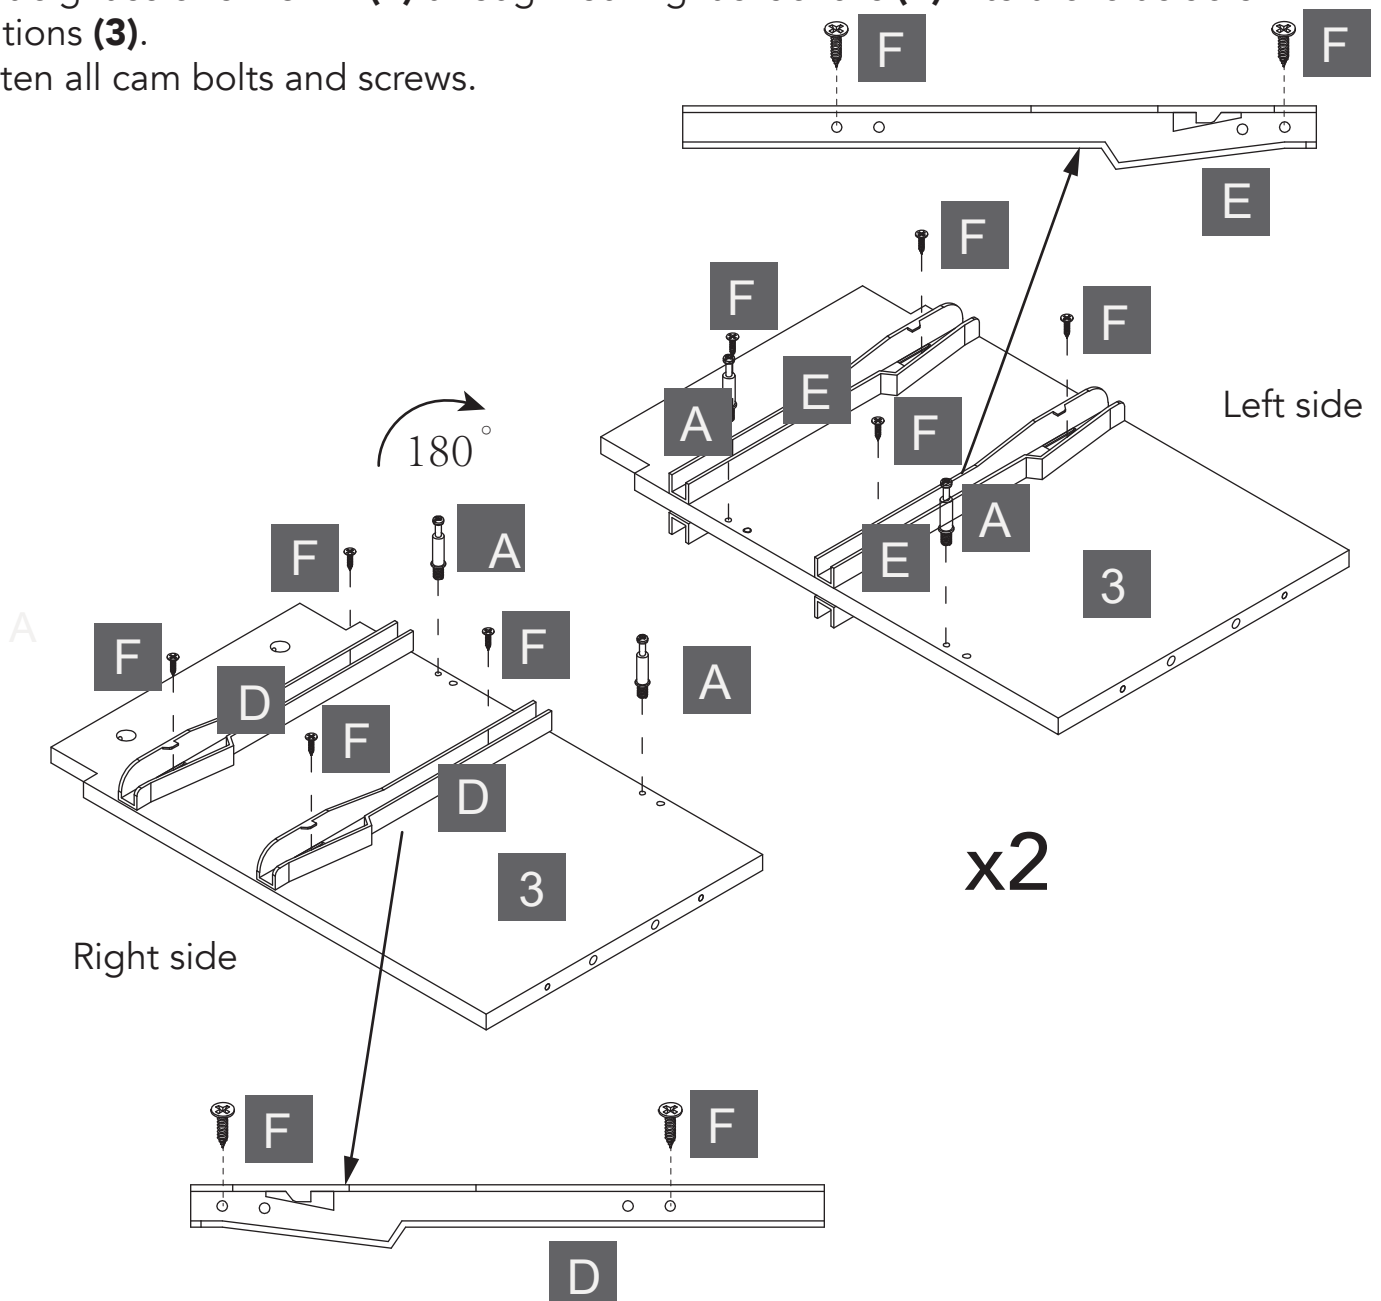

# Step-by-step Guide

## Step 4

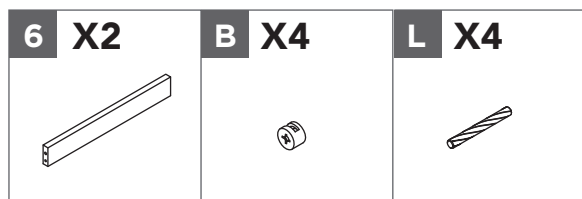


Insert four wood dowels **6x50 (L)** into the partitions **(3)**.

Attach two back slats **(6)** to partitions **(3)**.






Insert four cam locks **(B)** into back slats **(6)**.

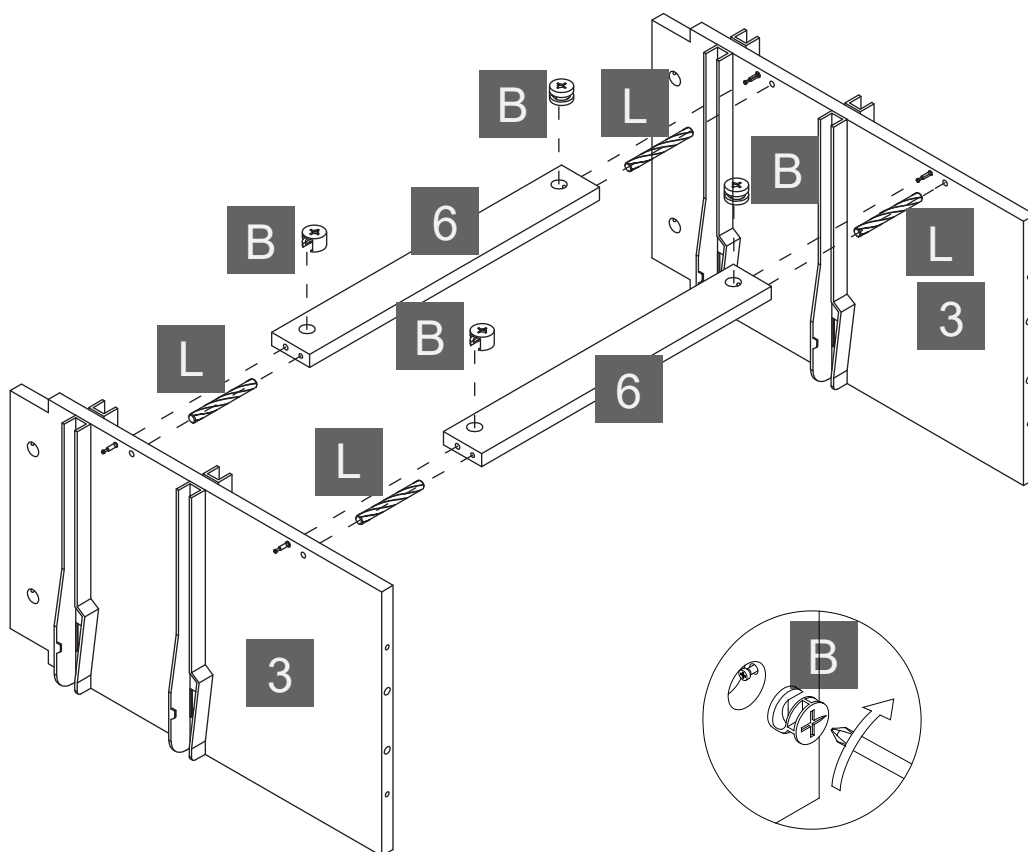Tighten all cam locks.




# Step-by-step Guide

## Step 5


7 X1	10 X2	A X2	B X2	C X4
				

Insert two cam bolts **(A)** and four wood dowels **(C)** into bottom panel **(7)**.  
Attach two bottom aprons **(10)** to the bottom panel **(7)**.  
Insert two cam locks **(B)** into the bottom aprons **(10)**.  
Tighten all cam locks.

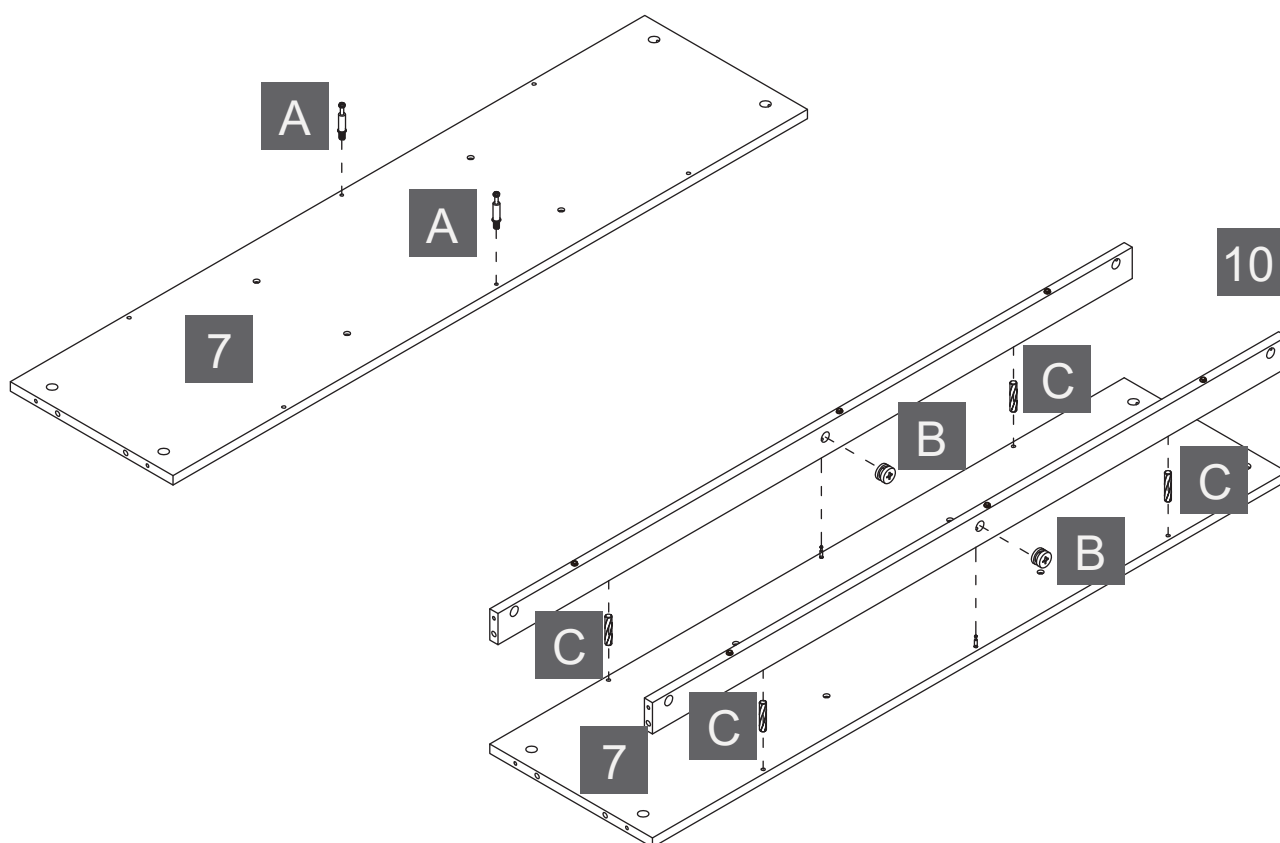

# Step-by-step Guide

## Step 6

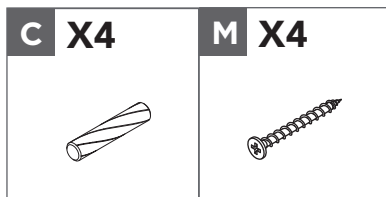


Insert four wood dowels (**C**) into the partitions (**3**).

Attach bottom panel (**7**) to the partitions (**3**).


Insert four screws (**M**) through bottom panel (**7**) into partition (**3**).

Tighten all screws.

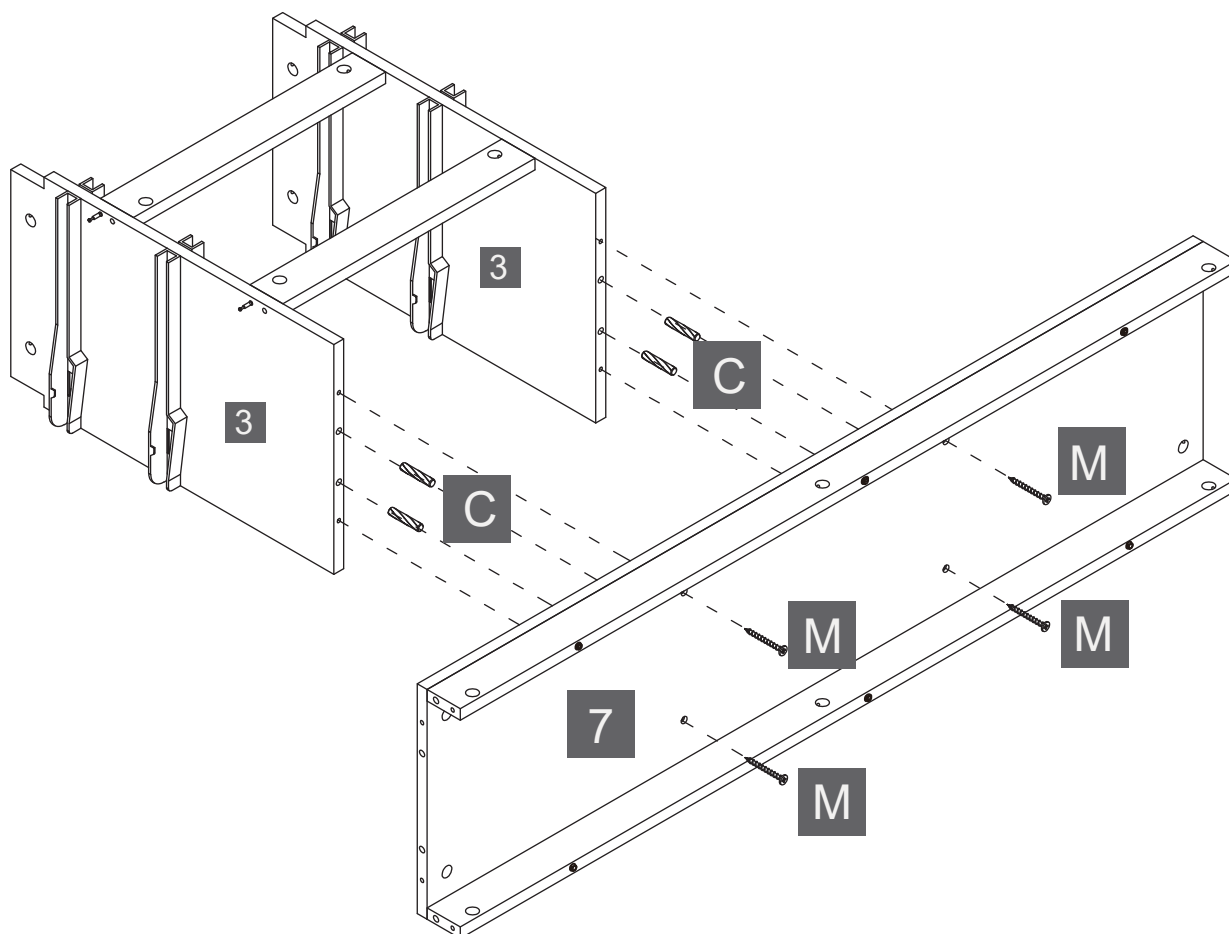


# Step-by-step Guide

## Step 7

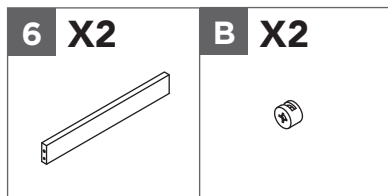


Attach two back slats **(6)** to the partitions **(3)**.  
Insert four cam locks **(B)** into back slats **(6)**.  
Tighten all cam locks.

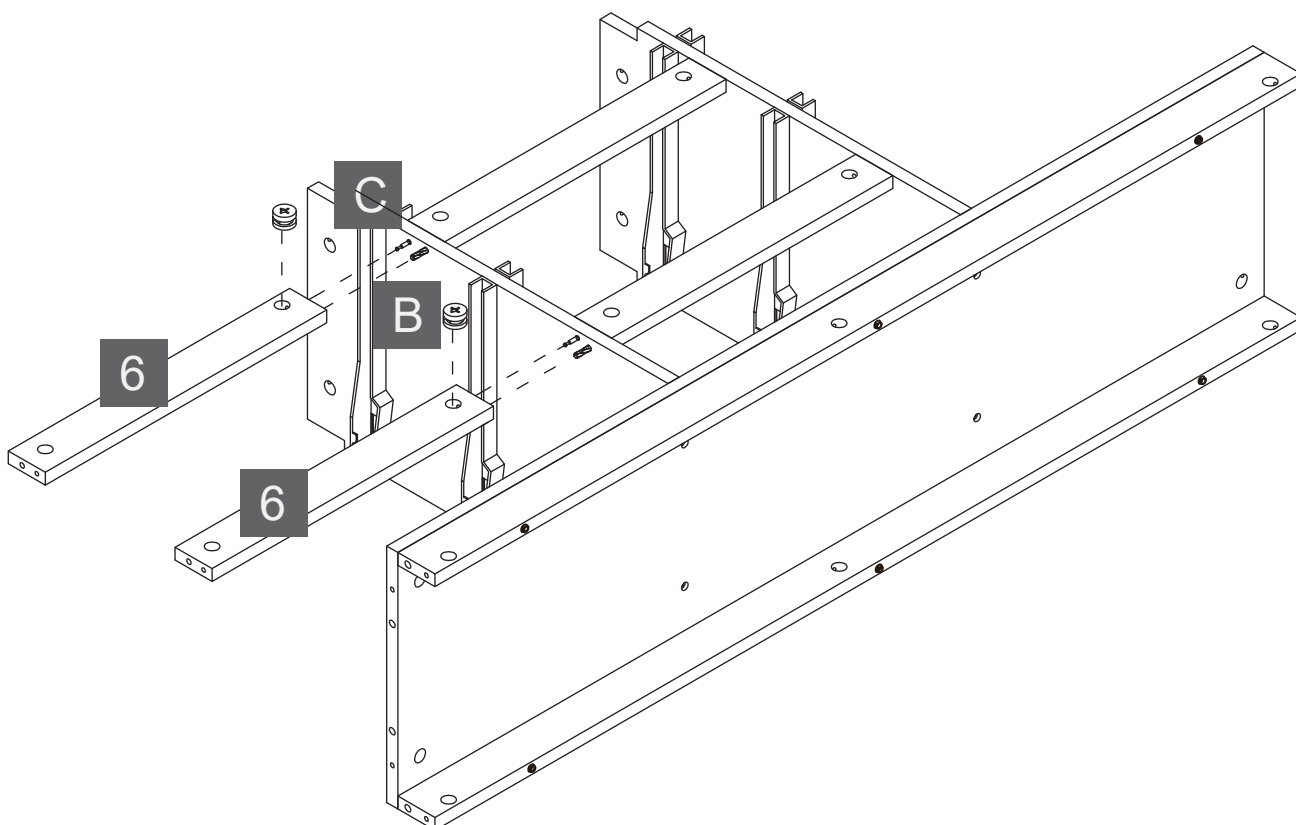

# Step-by-step Guide

## Step 8

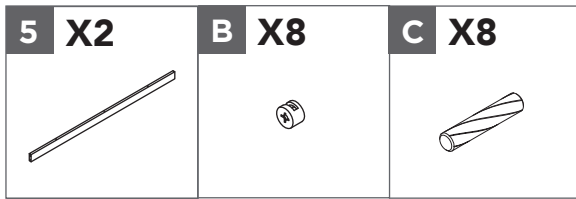


Insert eight wood dowels **(C)** into the upper aprons **(5)**, back slats **(6)**, bottom panel **(7)** and bottom aprons **(10)**.

Attach right panel **(4)** to the the upper aprons **(5)**, back slats **(6)**, bottom panel **(7)** and bottom aprons **(10)**.


Insert eight cam locks **(B)** into the upper aprons **(5)**, back slats **(6)**, bottom panel **(7)** and bottom aprons **(10)**.

Tighten all cam locks.

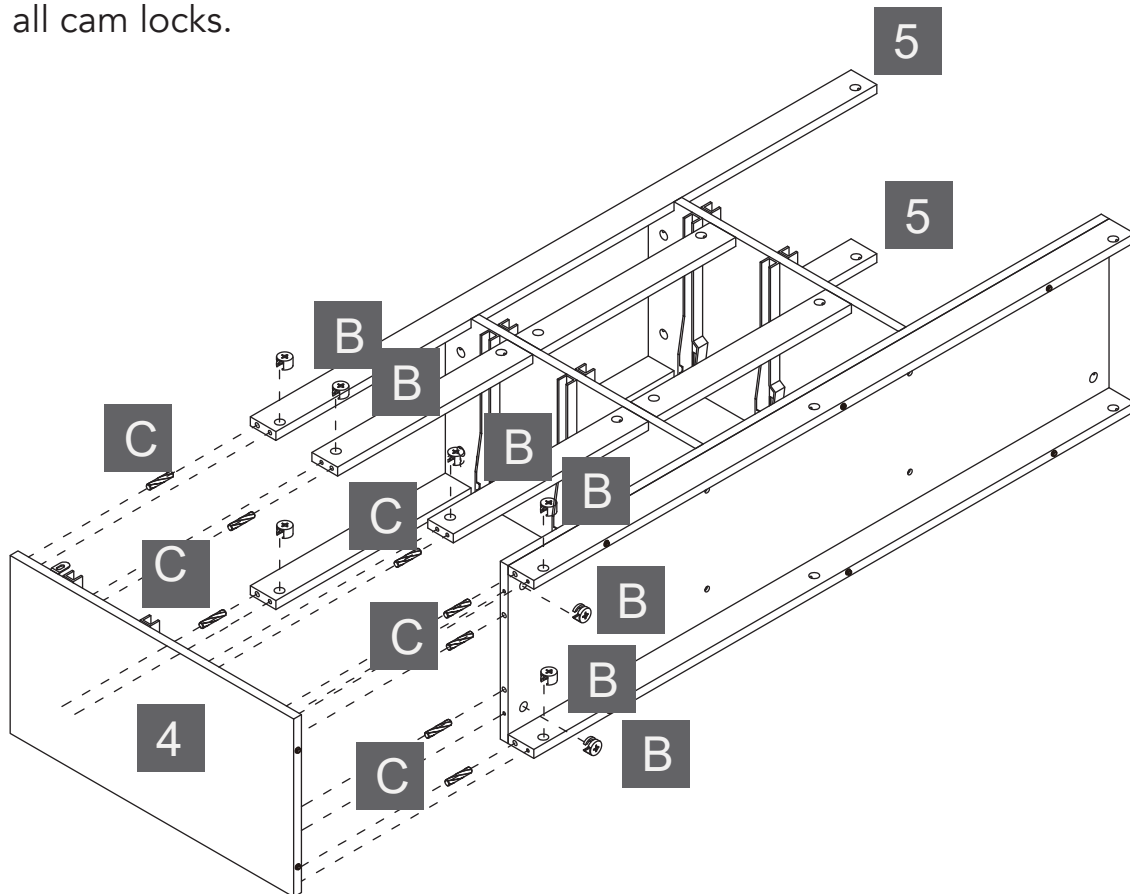

# Step-by-step Guide

## Step 9

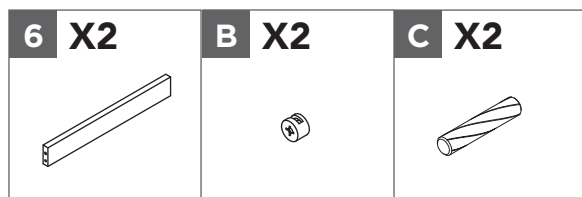


Insert two wood dowels **(C)** into the left panel **(2)**.

Attach two back slats **(6)** to left panel **(2)**.

Insert two cam locks **(B)** into the back slats **(6)**.


Tighten all cam locks.

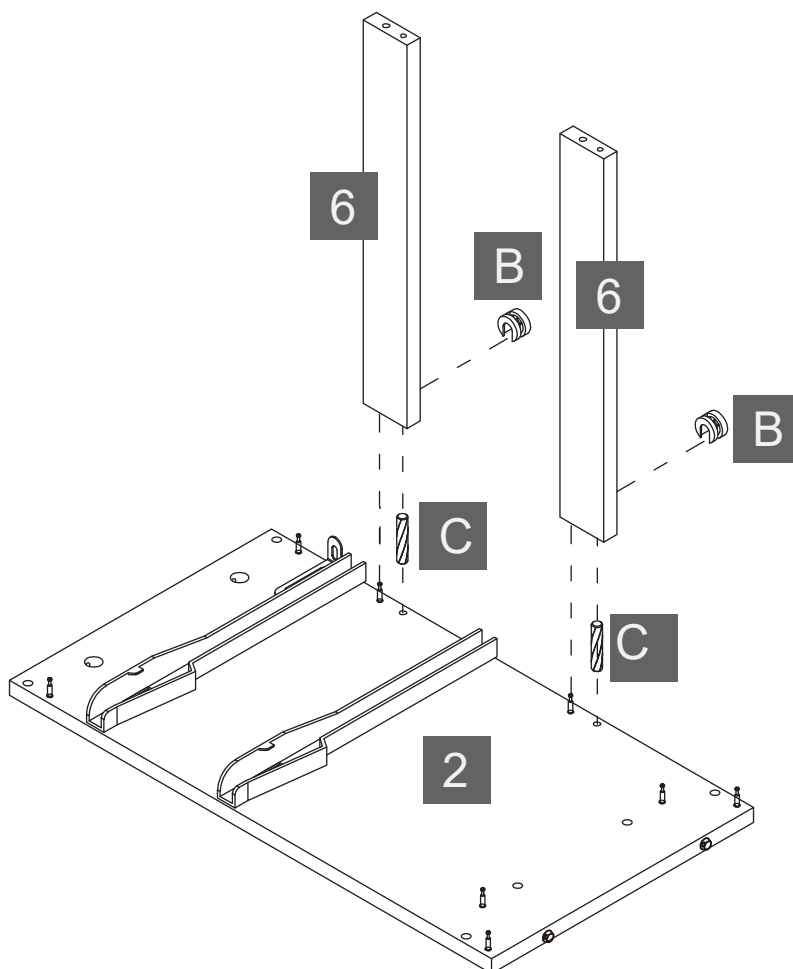



# Step-by-step Guide

## Step 10

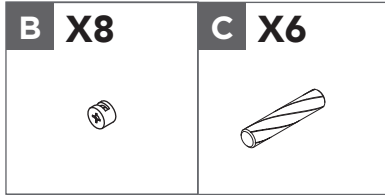


Insert six wood dowels **(C)** into the upper aprons **(5)**, back slats **(6)**, bottom panel **(7)** and bottom aprons **(10)**.

Attach left panel **(2)** to the upper aprons **(5)**, back slats **(6)**, bottom panel **(7)** and bottom aprons **(10)**.


Insert eight cam locks **(B)** into the upper aprons **(5)**, back slats **(6)**, bottom panel **(7)** and bottom aprons **(10)**.

Tighten all cam locks.

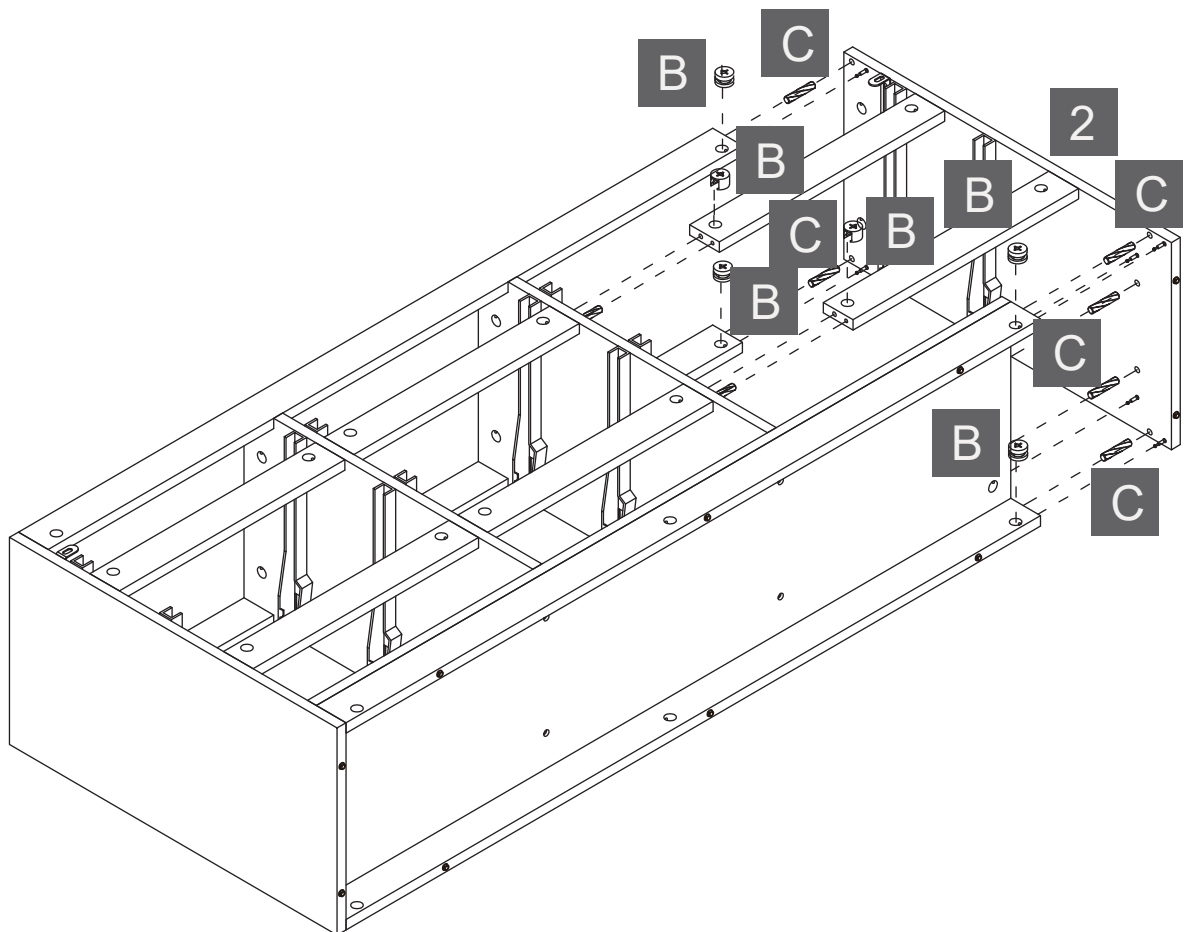


# Step-by-step Guide

## Step 11

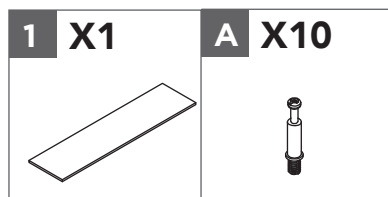


Insert ten cam bolts **(A)** into the top panel **(1)**.  
Tighten all cam bolts.

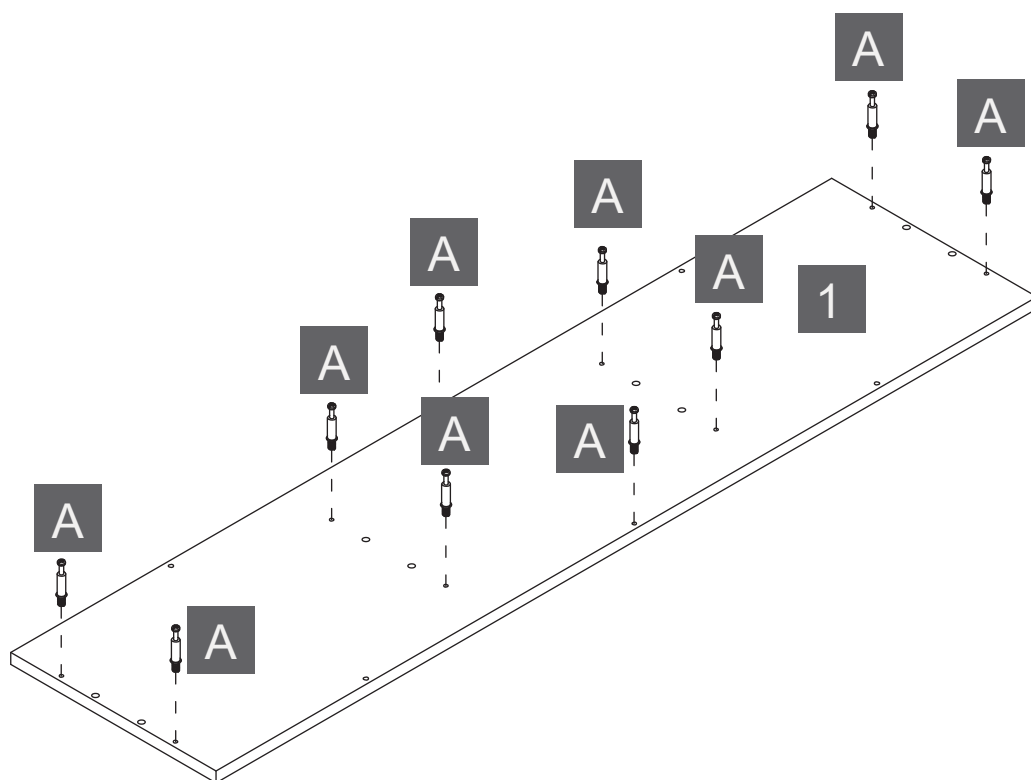


# Step-by-step Guide

## Step 12

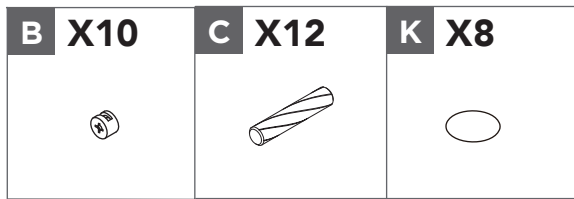


Insert twelve wood dowels (**C**) into the left panel (**2**), right panel (**4**) and upper aprons (**5**). Attach top panel (**1**) to the left panel (**2**), right panel (**4**) and upper aprons (**5**). Insert ten cam locks (**B**) to the left panel (**2**), right panel (**4**) and upper aprons (**5**). Tighten all cam locks. Add eight coated paper stickers (**K**) to the screw holes on the the left panel (**2**), right panel (**4**) and upper aprons (**5**).

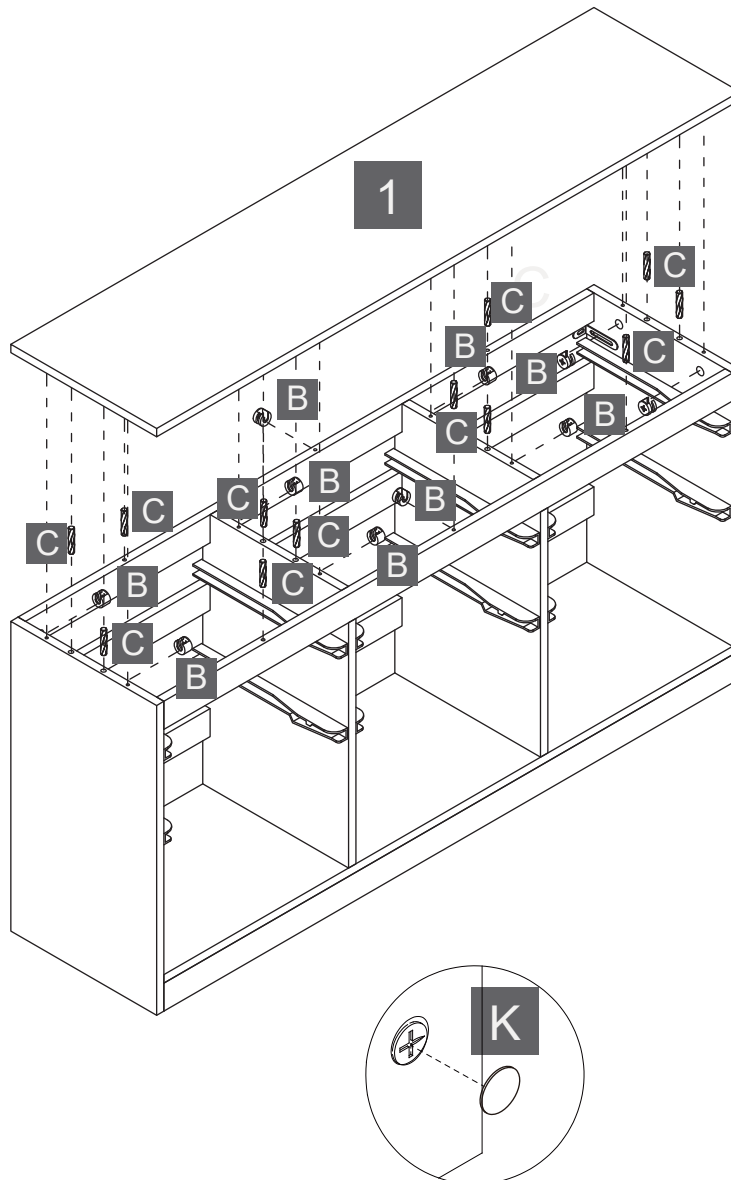

# Step-by-step Guide


## Step 13

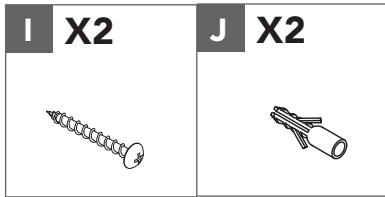

Using the anti-tip brackets as a guide, mark two spots on the wall. Drill a hole at each mark on the wall, hammer two wall anchors (**J**) into the wall, and fasten the anti-tip brackets using two screws M4x35 (**I**) screwed into the wall anchors (**J**).


### WARNING:

This is a critical step for the safe use of this product. DO NOT SKIP.

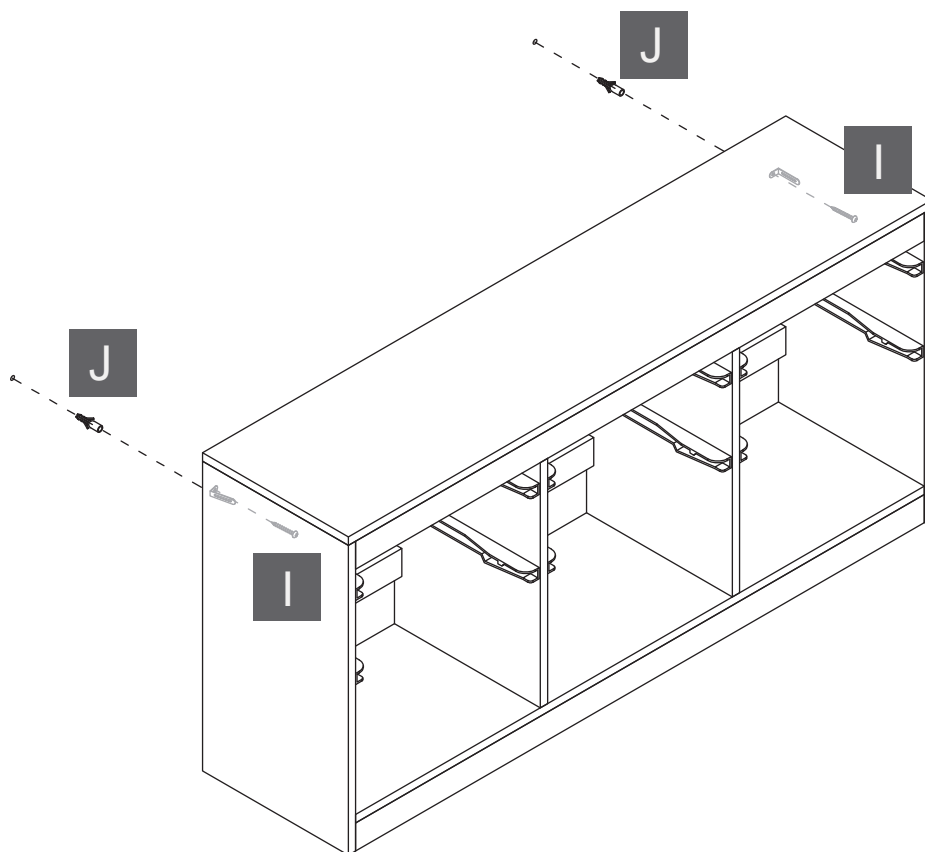


# Step-by-step Guide


## Step 14

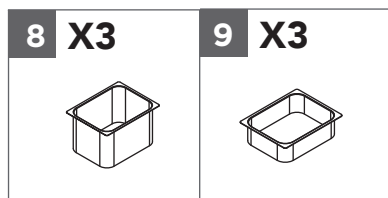

Insert three small bins **(9)** and three large bins **(8)** to the groove of the slide rails, which are on the left panel, partitions and right panel.

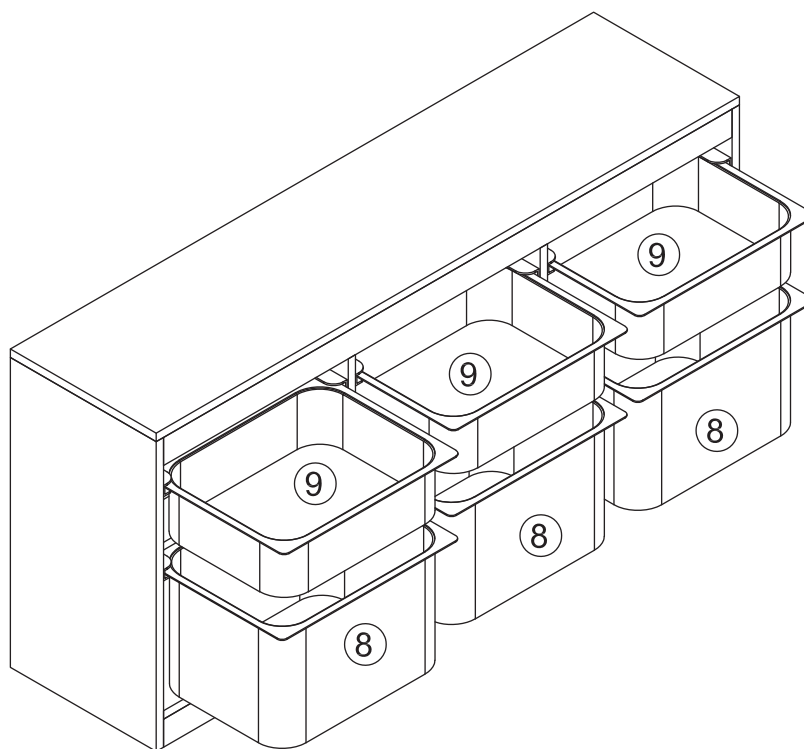

# Technical Data

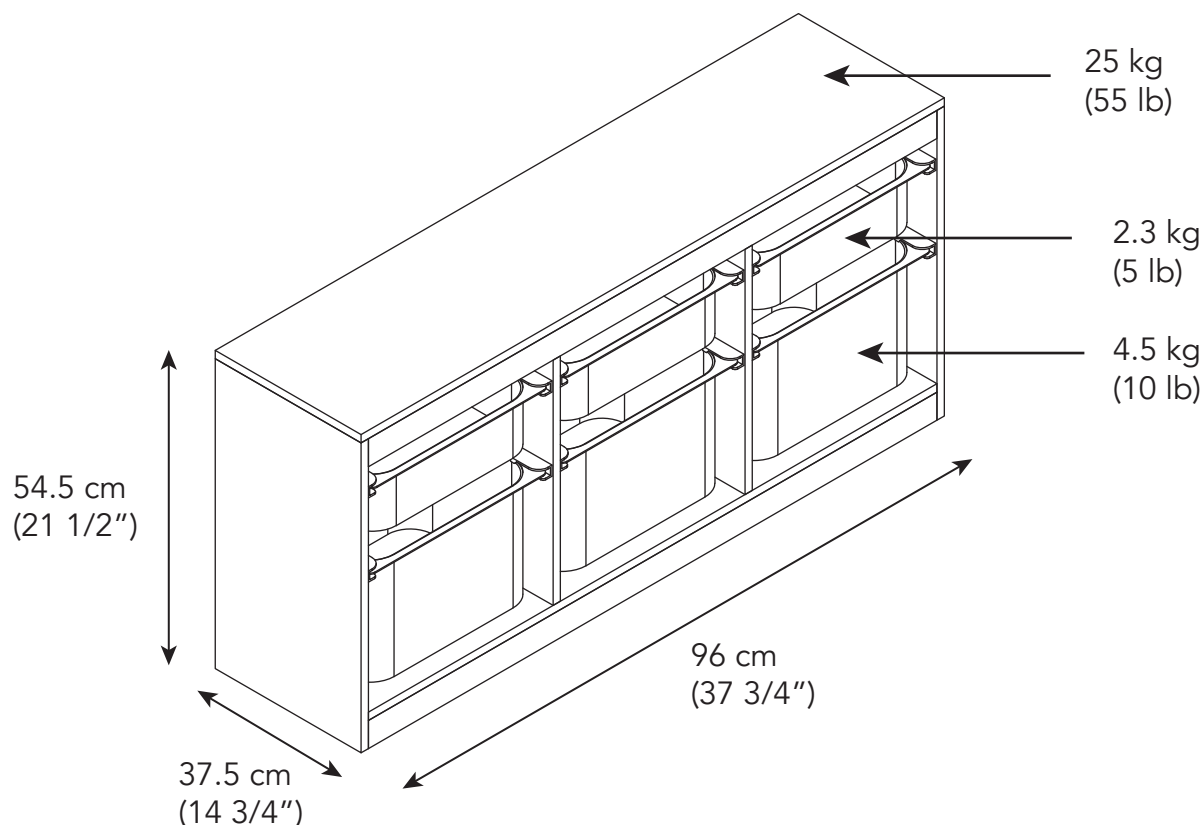

## Specifications

<b>Assembled Dimensions (W x D x H)</b>	96 x 37.5 x 54.5 cm
	37 3/4 x 14 3/4 x 21 1/2"
<b>Assembled Weight</b>	23.5 kg
	51 lb 13 oz
<b>Maximum Weight Capacity (Each small bin)</b>	2.3 kg
	5 lb
<b>Maximum Weight Capacity (Each large bin)</b>	4.5 kg
	10 lb
<b>Maximum Weight Capacity (Top shelf)</b>	25 kg
	55 lb

# Assembly Troubleshooting

Need help?

Give us a call! We're here for you.



Before returning your product to store



Call us first!

Toll-free: 1-877-483-6759

If you have questions regarding your product or require warranty assistance, please call our customer service helpline.

## Caring for Your Item

- 1 Always keep children under close supervision while they are using or around this product. Never leave children unattended.
- 2 This product is intended for domestic, indoor use only.
- 3 Do not light any fires below or near the product.
- 4 Check all screws and bolts periodically for tightness. When required, tighten them again.
- 5 Do not sit, shake, lean or climb on the unit.

**Cleaning:** Wipe down with clean, damp cloth.

# Warranty



## **1-Year Limited Warranty\***

This For LIVING® product carries a one (1) year warranty against defects in workmanship and materials. Trileaf Distribution agrees to replace the defective product free of charge within the stated warranty period, when returned by the original purchaser with proof of purchase. This product is not guaranteed against wear or breakage due to misuse and/or abuse.

**Model No. 168-0223-2**

Made in China

Imported by Trileaf Distribution Trifeuil Toronto, Canada M4S 2B8