

8-Gun Ready-to-assemble Cabinet

Assembly Instructions Product No. 175-9872-4



Tipping Hazard

A child or adult can tip the cabinet and be killed or seriously injured.









Failure to secure the cabinet as shown in these instructions can result in death or serious injury to children and adults.

Children should not play with or around the cabinet at any time.

Product No. 175-9872-4




HARDWARE LIST


- | | | |
|---|--|---|
| ①  DOOR KEYS
QTY: 2 PCS | ②  M5X10 BOLTS
QTY: 10 PCS | ③  QUAKEPROOF PINS
QTY: 2 PCS |
| ④  M6X11 RND
QTY: 4 PCS | ⑤  M6X11 LCK
QTY: 8 PCS | ⑥  WRENCH
QTY: 1 PC |
| ⑦  WOOD SCREWS
QTY: 4 PCS | ⑧  WASHERS
QTY: 4 PCS | |

PARTS LIST


- Ⓐ TOP PANEL
QTY: 1 PC

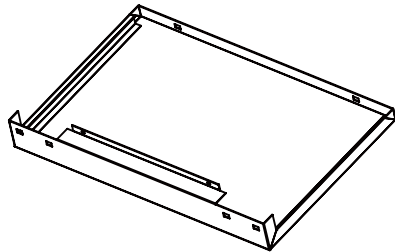


- Ⓑ BOTTOM PANEL
QTY: 1 PC

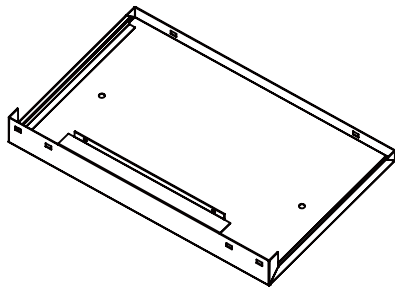

- Ⓒ SIDE PANEL - LEFT
QTY: 1 PC

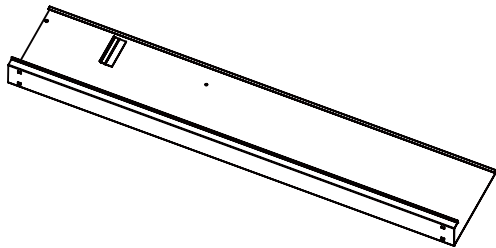


- Ⓓ SIDE PANEL - RIGHT
QTY: 1 PC

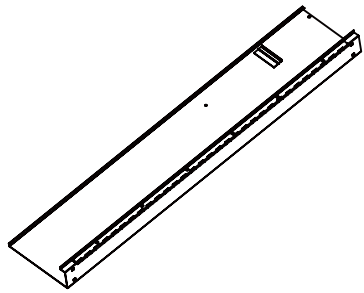




PARTS LIST


Ⓔ BACK PANEL
QTY: 1 PC

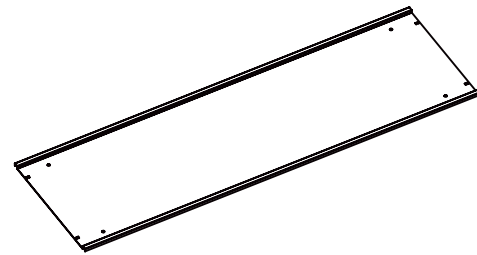

Ⓖ SHELF
QTY: 1 PC

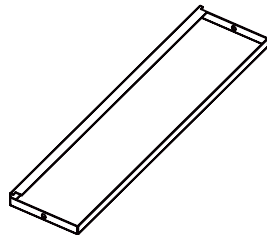


Ⓘ SHELF EVA
QTY: 1 PC

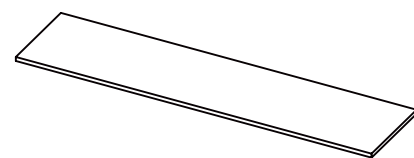


EVA:ethylene-vinyl acetate copolymer.


Ⓕ DOOR
QTY: 1 PC

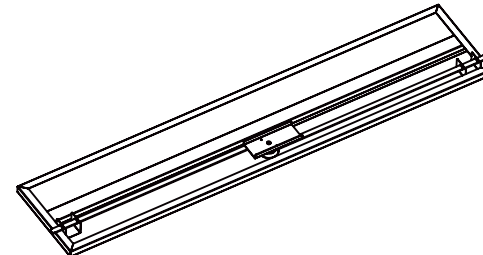

Ⓗ GUN REST
QTY: 2 PCS

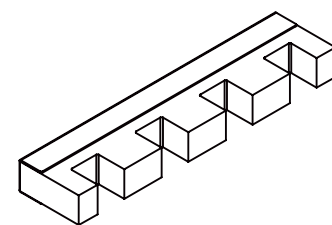


Ⓙ BOTTOM EVA
QTY: 1 PC

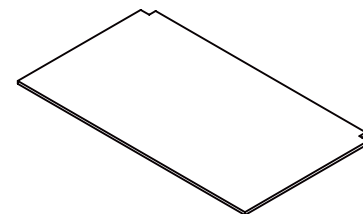

Product No. 175-9872-4




STEP 1

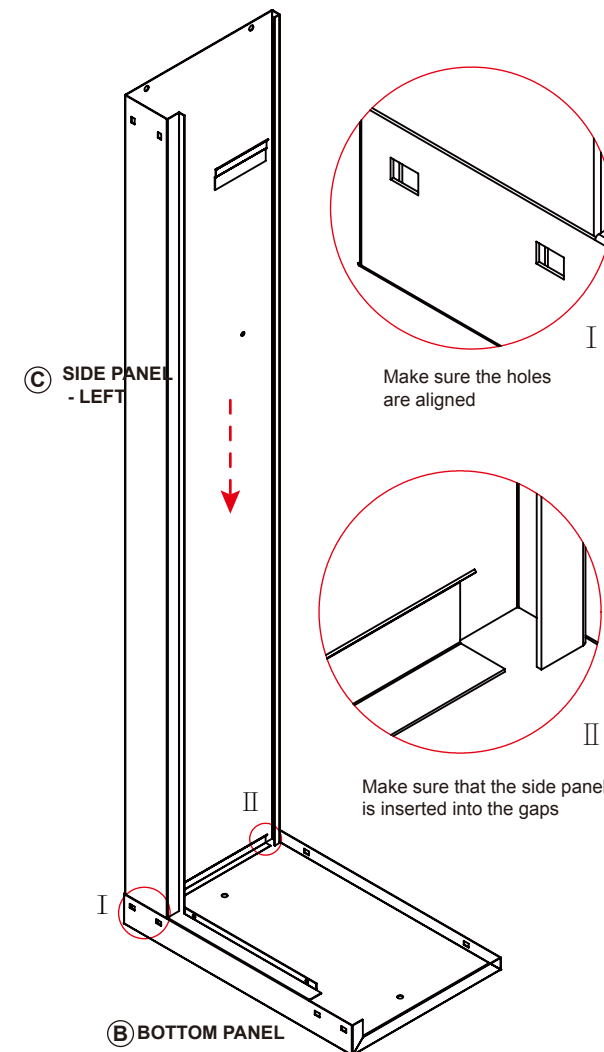

Assemble Side Panel-Left with Bottom Panel.


STEP 2

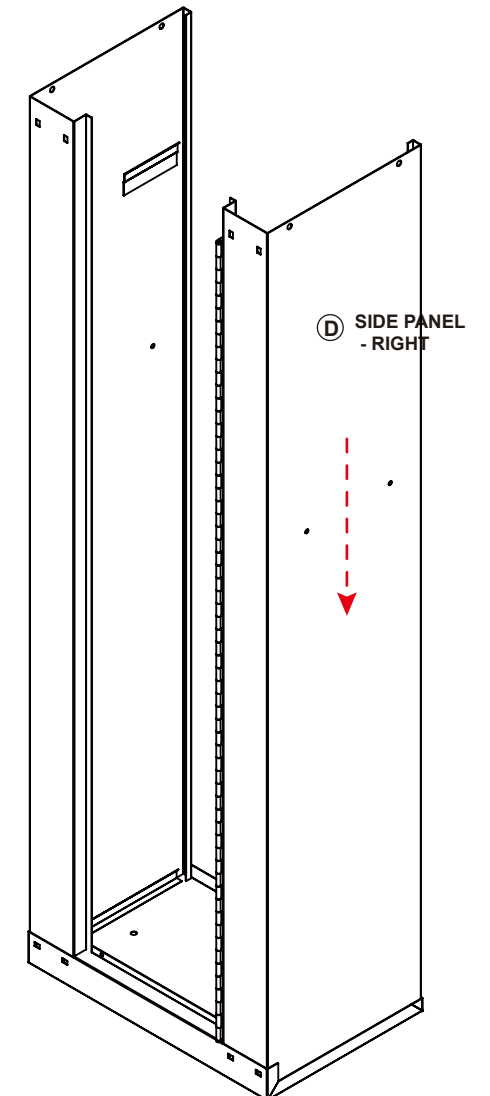

Assemble Side Panel-Right with Bottom Panel,
Same as STEP 1,
Set the Side Panel-Right down into the Bottom Panel.




STEP 3

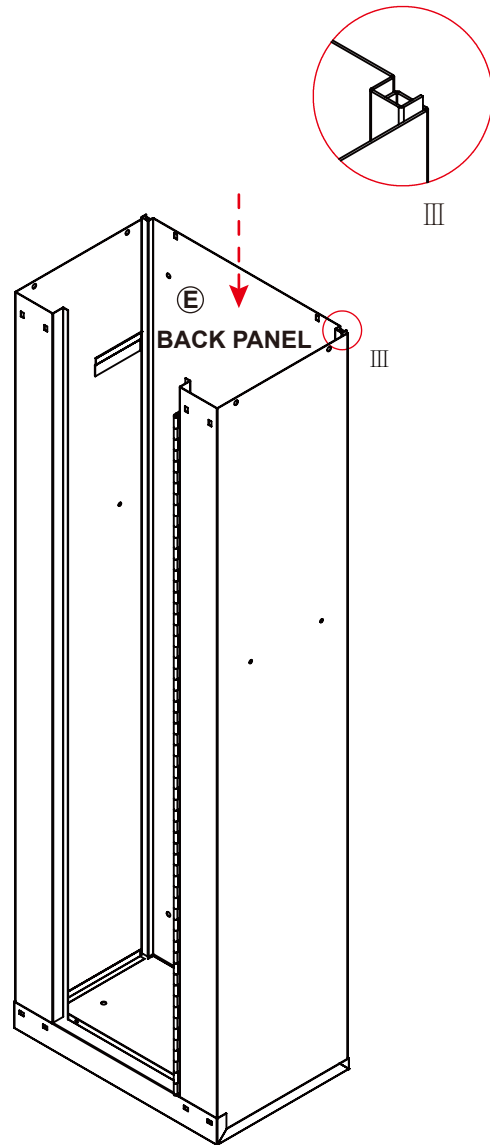

As shown, insert the Back Panel between the two sides until the top is aligned.

STEP 4

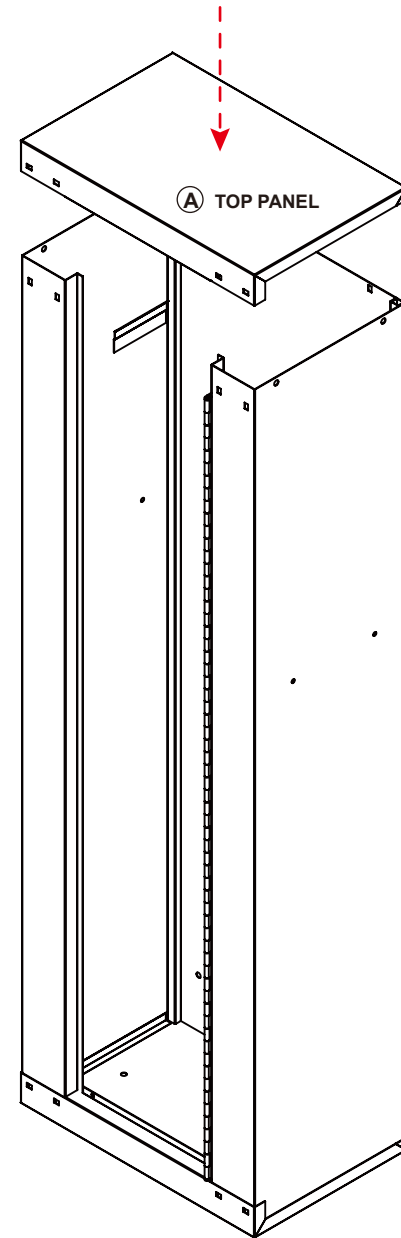

Install the Top Panel onto the Side Panels and Back Panel. Please refer to the Bottom Panel for the position. A rubber mallet can be used to align the top flush with the Side and Back Panels.


190125

05

Product No. 175-9872-4




STEP 5

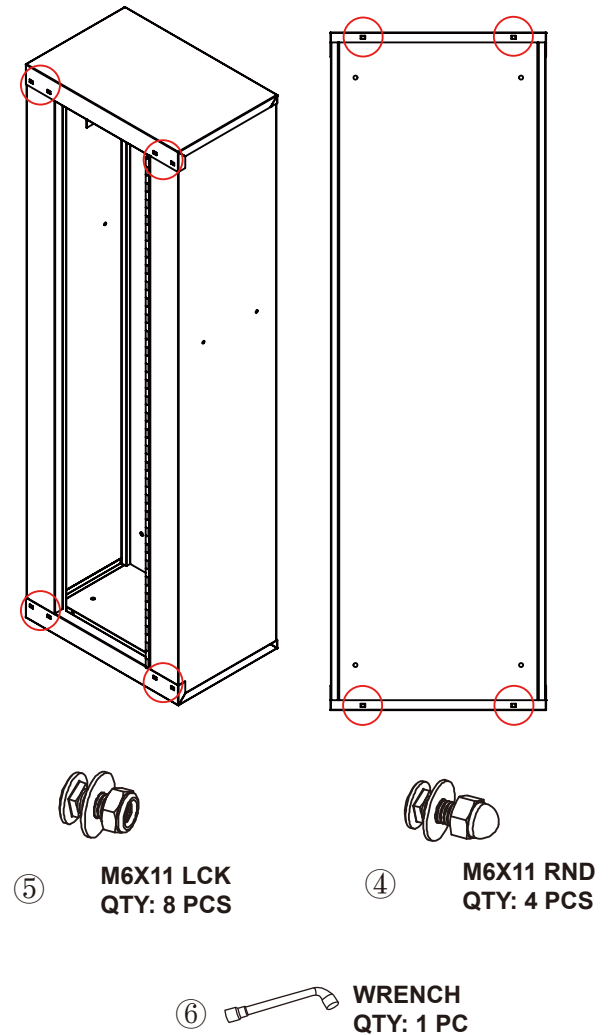

Insert 8 pcs M6X11 LCK through front and loosely tighten washer & locknuts from inside using the wrench.
Insert 4 pcs M6X11 RND through back and fully tighten washer & round headed lock nuts from inside using the wrench.

190125

STEP 6

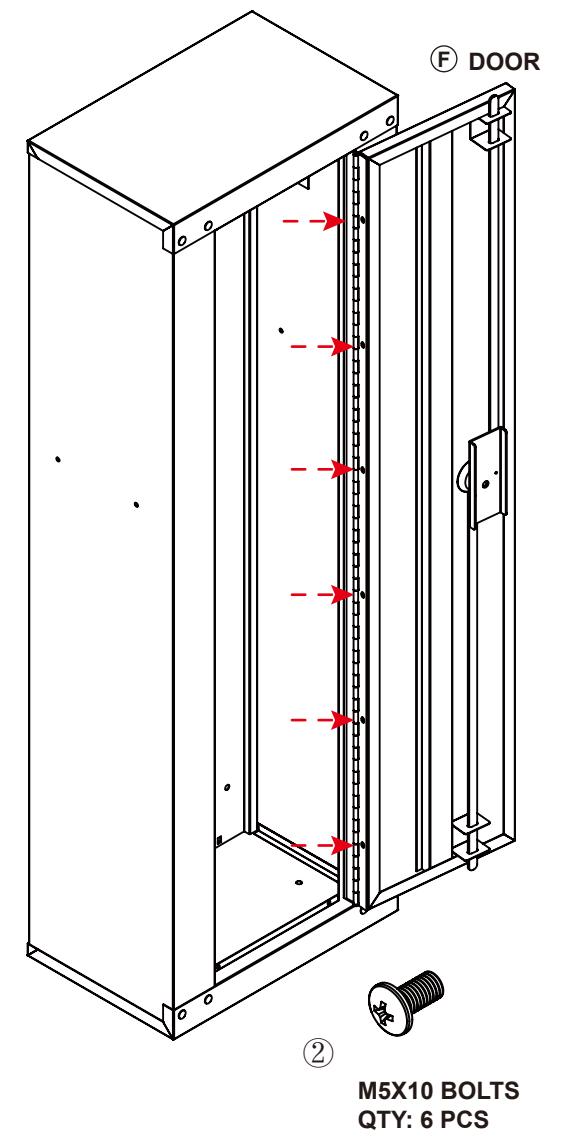


Install the Door onto the cabinet using M5X10 bolts. Make sure there is about 2 mm (1/16") space between the Door and the cabinet.

06




STEP 7

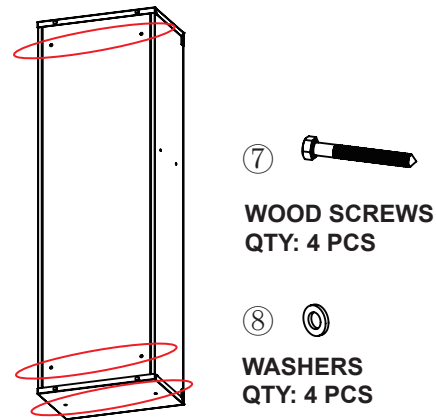


Use the wood screws and washers to secure the cabinet to floor or wall.

STEP 8

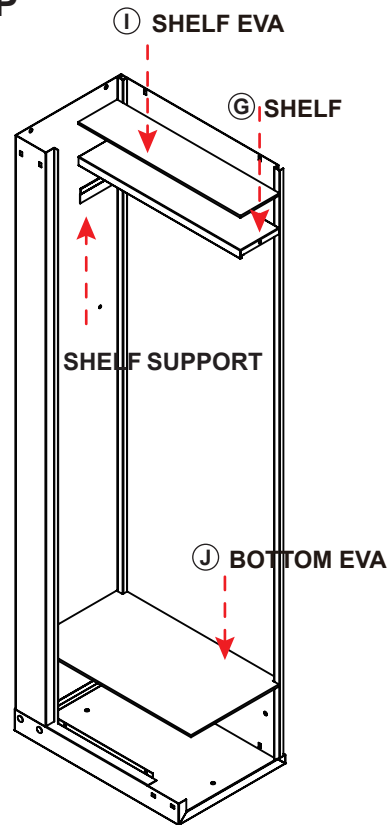


Place the shelf and the Shelf Eva and Bottom Eva as shown.

STEP 9

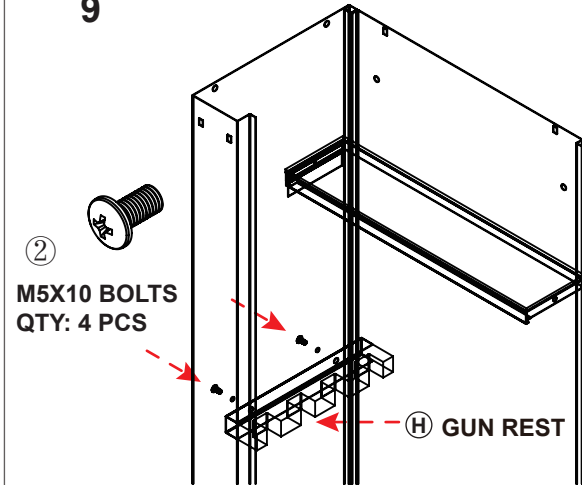

Install the gun rests with M5X10 bolts on both Side Panels.

STEP 10

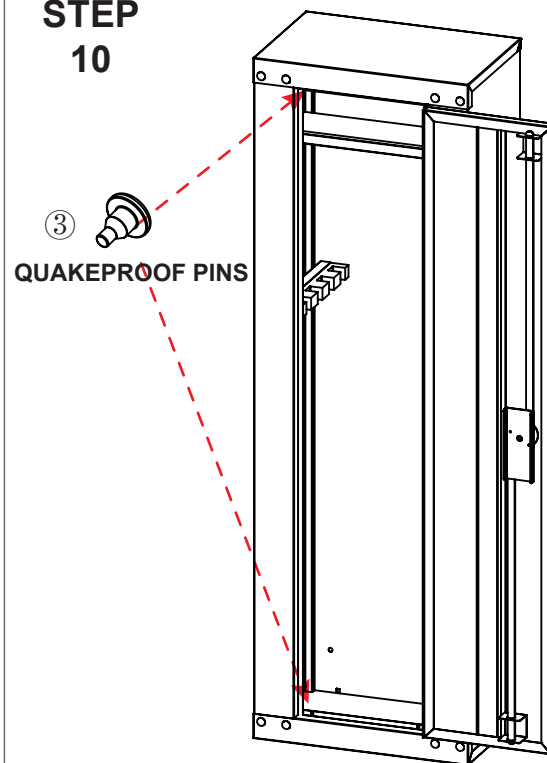

Install the Quakeproof Pins through the pre-drilled holes, and check that all the nuts have been tightened.

Thank you for purchasing this quality product. A list of Parts and Instructions is included to assist you. Unpack and identify all parts included in the Parts List and Hardware List. If parts are missing, please call our Customer Service Department at **1-844-651-2304**. For efficient and speedy service, please indicate the model number and code letter of part(s) needed.

Disclaimer or Implied Warranties; Limitation of Liability.

Implied warranties, including to the extent applicable warranties of merchantability or fitness for a particular purpose, are excluded to the extent legally permissible. Any implied warranties that may be imposed by law are limited to one year, or the shortest period allowed by law. Some provinces do not allow limitations or exclusions on how long an implied warranty of merchantability or fitness for purpose lasts, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from province to province.

Made in China
Imported by Trileaf Distribution Toronto, Canada M4S 2B8