



Wireless Charging Disk with Apple Watch Holder

User manual

Model No. 035-7139-8

This is a wireless charging disk with Apple Watch holder that allows you enjoy fast wireless charging easily. Please kindly read the user manual before using and keep it for future reference.

Specifications:

Input: DC 5 V 2 A, DC 9 V 1.67 A

Frequency: 105-205 KHZ

Charge efficiency: 70%


Charging Distance: ≤ 8 mm

Connect to power supply:

1. Connect USB 2.0 port to the power adaptor (or connect to laptop), and micro USB port to the wireless charging disk.
2. The LED indicator will turn to blue, entering into standby mode.

Note: To activate fast wireless charging mode, please use QC 2.0/QC 3.0 power adaptor or Samsung original adaptor. It is recommended that you use the USB cable include in this package or an original Samsung cable.

Power Adaptor



USB 2.0 Port

USB Cable

Micro USB Port



Apple watch holder



LED indicator


Wireless Charging function:

1. Make sure the wireless charging disk is connected to power supply, and in standby status.
2. Put the Qi® enabled smartphone on the disk, LED indicator turns to red when charging. When the phone is fully charged, the LED indicator will turn to blue.

Note: if the phone case is metal, please take off the phone case before charging. Do not use phone cases thicker than 5mm for wireless charging. The 'Qi®' symbol is a trademark of the Wireless Power Consortium.

Apple Watch holder function:

1. Attach the Apple Watch charger into the Apple Watch holder.
2. Place the Apple Watch on the watch charger.

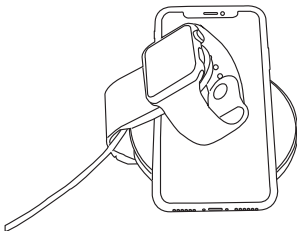

Warning:

1. Do not squeeze or drop.
2. Do not disassemble or throw into fire or water to avoid causing short circuit leakage.
3. Do not use wireless charger in extremely hot, humid or corrosive environments to avoid damage.
4. Do not place wireless charger close to magnetic stripe or chip card (ID card, bank card, etc) to avoid magnetic failure.
5. Please keep the wireless charger at least 20 cm (8") from medical devices (heart pacemakers, implantable cochlea, etc) to avoid potential interference of the medical devices.
6. Please keep children away from the wireless charger to avoid unnecessary accidents.



Product must be recycled or disposed of properly. Dispose of as per the requirements of your local municipality

Made in China

Imported by Trileaf Distribution Toronto, Canada M4S 2B8