




Qi® Fast Dual Wireless Charging Fabric Pad

User manual

Model No. 035-7281-6

This charging pad that allows you enjoy fast wireless charging easily.
Please read the user manual before using and keep it for future reference.

Product review:

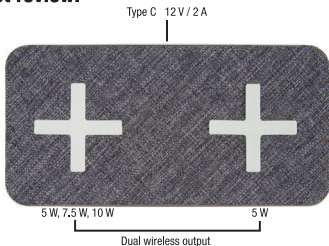

Specifications:

Output: 1×Qi® wireless 5 W, 7.5 W, 10 W

1×Qi® wireless 5 W

Total output: 15 W

Recommend adaptor (not included): QC 2.0, QC 3.0 or 12 V/2 A adaptor

Input: DC 12 V/2 A

Frequency: 105-200 KHz


Charge efficiency $\geq 70\%$

Charging distance ≤ 8 mm

Connect to power supply:

1. Connect USB 2.0 port to the power adaptor (QC2.0/3.0), and connect Type-C port to the wireless charging pad.
2. The indicator light will blink once, and blink red twice, then indicator light will turn off. The wireless charging pad now enters into standby mode.

Note: To activate fast wireless charging mode, please use QC 2.0/QC 3.0 power adaptor or 12 V/2 A adaptor. It is recommended to use the USB cable included.

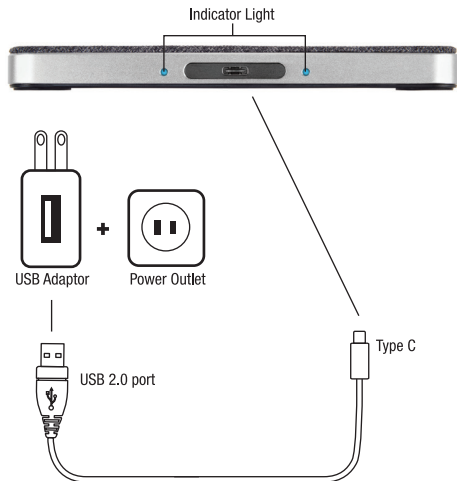

Wireless Charging function:

1. Make sure the dual wireless charger is connected to a power supply, and is in standby status.
2. Put the Qi® enabled smartphone on the pad, indicator light will turn red for charging. To use fast wireless charging output (7.5 W/10 W), place your device on the side of the charging pad marked icon“⚡”.
3. When the phones are fully charged, indicator light will turn blue.

Note: if the phone case is metal, please remove the phone case before charging. Do not use phone cases thicker than 8mm for wireless charging.



The 'Qi®' symbol is a trademark of the Wireless Power Consortium.

Warning:

1. Do not squeeze or drop.
2. Do not disassemble or throw into fire or water to avoid causing short circuit leakage.
3. Do not use wireless charger in extremely hot, humid or corrosive environments to avoid damage.
4. Do not place wireless charger close to magnetic stripe or chip card (ID card, bank card, etc) to avoid magnetic failure.
5. Please keep the wireless charger at least 20 cm (8") from implantable medical devices (heart pacemakers, implantable cochlea, etc) to avoid potential interference of the medical devices.
6. Please keep children away from the wireless charger to avoid unnecessary accidents.



Charger must be recycled or disposed of properly. Dispose of as per the requirements of your local municipality.

Made in China

Imported by Trileaf Distribution Toronto, Canada M4S 2B8