




# Qi® Fast Wireless Charging Stand

## User manual

Model No. 035-7282-4

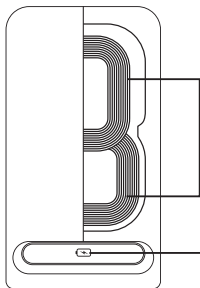

Two built-in coils to ensure high-efficiency charging position.

LED light clearly shows the standby and charging status.

This is a 2-coil fast Wireless Charging Stand that allows you enjoy fast wireless charging easily. Please read the user manual before using and keep it for future reference.

### Specifications:

Input: DC 5 V 2 A, DC 9 V 1.8 A

Frequency: 110-205 KHZ

Charge efficiency: 70%


Charging Distance  $\leq$  10 mm

## Connect to power supply:

1. Connect USB 2.0 port to the power adaptor (or connect to laptop), and micro USB port to the wireless charging stand.
2. The LED indicator will blink and turn to green, entering standby mode.

**Note:** To activate fast wireless charging mode, please use QC 2.0/QC 3.0 power adaptor or Samsung original adaptor. You are recommended to use the USB cable featured in product package or an original Samsung cable.


Power Adapter

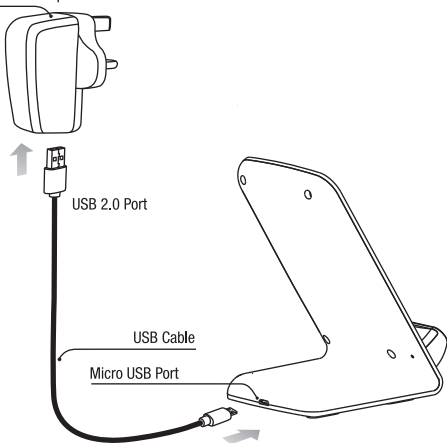

## Wireless Charging function:

1. Make sure the wireless charger is connected to a power supply, and is in standby status.
2. Put the Qi® enabled smartphone vertically or horizontally on the stand, the LED indicator turns to blue for charging. If LED indicator flashes blue and green alternately, your device is not in the proper position for charging. Remove device and place properly in position. LED indicator should turn to blue.
3. When the Samsung phones are fully charged, the LED indicator will turn to green. The LED indicator will remain blue for other devices when fully charged. If you do not remove the phone, the battery power will remain in fully charged status (supplementary charge).

**Note:** if the phone case is metal, remove the phone case before charging. Do not use phone cases thicker than 5 mm (5/16") for wireless charging.

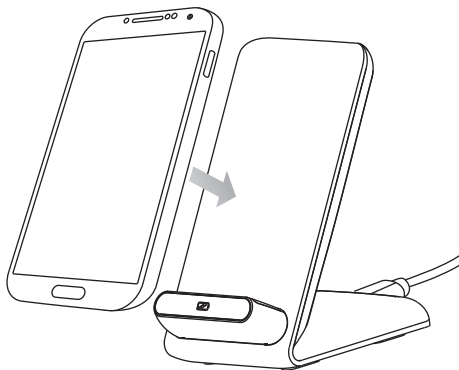

## Warning:

1. Do not squeeze or drop.
2. Do not disassemble or throw into fire or water to avoid causing short circuit leakage.
3. Do not use wireless charger in extremely hot, humid or corrosive environments to avoid damage.
4. Do not place wireless charger close to magnetic stripe or chip card (ID card, bank card, etc) to avoid magnetic failure.
5. Please keep the wireless charger at least 20 cm (8") from the implantable medical devices (heart pacemakers, implantable cochlea, etc) to avoid potential interference of the medical devices.
6. Please keep children away from the wireless charger to avoid unnecessary accidents.

The 'Qi®' symbol is a trademark of the Wireless Power Consortium.



Product must be recycled or disposed of properly. Dispose of as per the requirements of your local municipality

**Made in China**

**Imported by Trileaf Distribution Toronto, Canada M4S 2B8**