


NOMA®


ION EXCHANGE
REPLACEMENT FILTER

PRODUCT NO. 043-7361-6

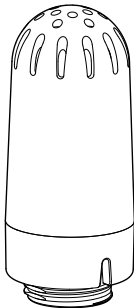

USER MANUAL


— READ AND SAVE THESE INSTRUCTIONS —

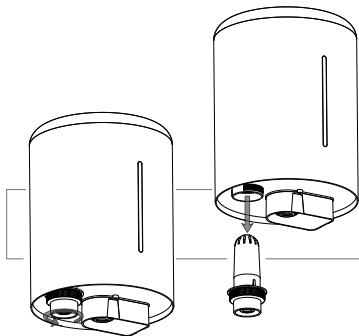

01

Remove the water tank from the base and empty any residual water.

Unscrew the filter valve from the bottom of the water tank base.

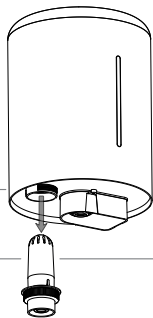


02

Remove the filter valve and the connected ion exchange filter from the water tank base.

FILTER REPLACEMENT


Ion exchange filter should be replaced every 3-6 months. The life of the ion exchange filter will vary depending on water quality and usage.

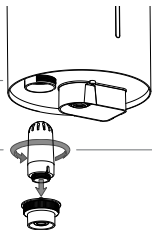

03



Unscrew the ion exchange filter from the filter valve.

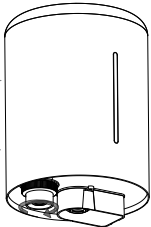Dispose of the used filter and replace with the new filter.



04


Screw the connected filter and filter valve back onto the bottom of the water tank.

Product Name	NOMA® Ion Exchange Replacement Filter
Product No.	043-7361-6
To be Used For	<p>NOMA® 4 L Warm/ Cool Ultrasonic Humidifier</p>  <p>NOMA® 3.5 L Cool Ultrasonic Humidifier</p> 
Features	<ul style="list-style-type: none"> • Prevents white dust and calcification • Replace every 3-6 months

NOMA^{MD}


FILTRE DE RECHARGE
D'ÉCHANGE IONIQUE

N° DE MODÈLE : 043-7361-6

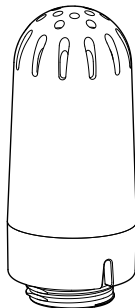

GUIDE D'UTILISATION

— LISEZ ET CONSERVEZ CES INSTRUCTIONS —

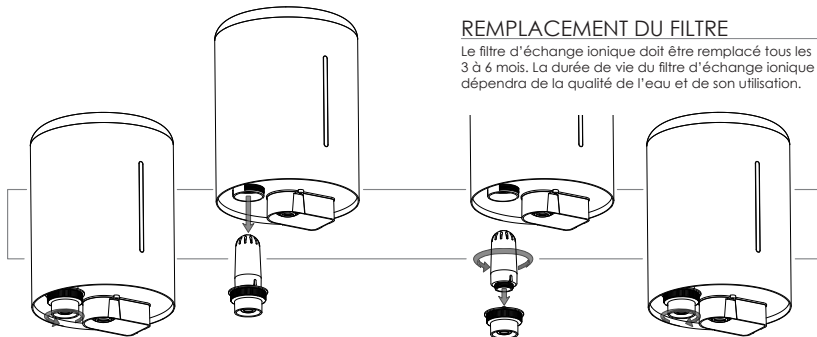

REEMPLACEMENT DU FILTRE

Le filtre d'échange ionique doit être remplacé tous les 3 à 6 mois. La durée de vie du filtre d'échange ionique dépendra de la qualité de l'eau et de son utilisation.

01

Retirez le réservoir d'eau de la base et videz toute eau résiduelle.

Dévissez la vanne de filtre au bas de la base du réservoir d'eau.

02

Retirez la vanne de filtre et le filtre d'échange ionique connecté de la base du réservoir d'eau.



03

Dévissez le filtre d'échange ionique de la vanne de filtre.

Jetez le filtre usagé et installez un nouveau filtre.

04

Vissez le filtre et la vanne de filtre connectés au bas du réservoir d'eau.

Nom de l'article	Filtre de recharge d'échange ionique NOMA ^{MD}
N° de modèle	043-7361-6
S'utilise avec	<p>Humidificateur à ultrasons de 4 L à vapeur chaude/ froide NOMA^{MD}</p>  <p>Humidificateur à ultrasons de 3,5 L à vapeur froide NOMA^{MD}</p> 
Caractéristiques	<ul style="list-style-type: none"> • Empêche la poussière blanche et la calcification • À remplacer tous les 3 à 6 mois

Importé par Noma Canada, Toronto, Canada M4S 2B8
 NUMÉRO SANS FRAIS : 1 866 827-4985 | Fabriqué en Chine