


CANVAS^{TM/MC}

NAME HERE LED FLUSH MOUNT

PRODUCT NO. 000-0000-0

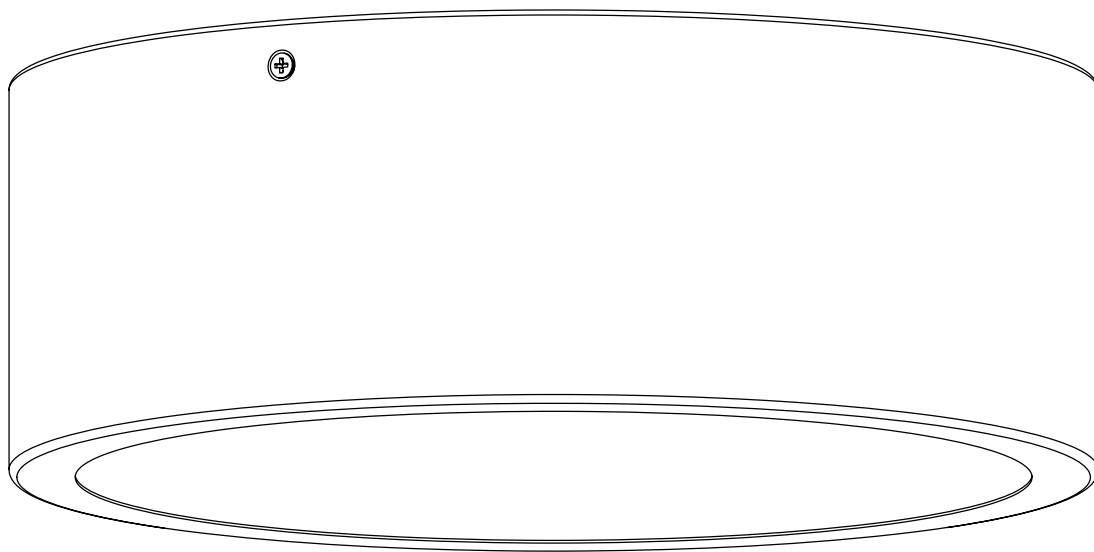

ASSEMBLY INSTRUCTIONS



HAVING TROUBLE?

TOLL-FREE:

1-888-670-6684

IMPORTANT: Please read this manual carefully before beginning assembly of this product. Keep this manual for future reference.

CANVAS™

REDISCOVER YOUR SPACE



We believe in the power of décor and its ability to make up the fabric of your home.

That's why **CANVAS™** collections draw **inspiration from Canadians and the way they live.**

From on-trend furniture pieces to holiday décor and all your outdoor living essentials, **CANVAS™** makes it easy to refresh your space to reflect **your unique style and the way you live every day.**

We would love to hear from you and welcome your thoughtful feedback. Visit our website at **canadiantire.ca** to tell us about your experience, and share your photos with us using **#myCANVASstyle.**

Show us how you bring **CANVAS™** products to life. We can't wait to see!

TABLE OF CONTENTS

Important Safety Instructions	3	Step-by-step Guide	8
Parts List	4	Technical Data	13
Exploded Parts	5	Assembly Troubleshooting	14
Before You Begin Assembly	6	Caring for Your Item	14
Electrical Installation	7	Warranty	15



WARNING! CONSULT A QUALIFIED ELECTRICIAN TO ENSURE CORRECT BRANCH CIRCUIT CONDUCTOR.

CLEANING: Before cleaning your fixture, turn off the switch or power source. Wipe the fixture with a soft, damp cloth.

IMPORTANT: RETAIN FOR FUTURE REFERENCE, AND READ CAREFULLY.




IMPORTANT SAFETY INSTRUCTIONS READ INSTRUCTIONS AND REVIEW ALL DIAGRAMS BEFORE INSTALLING FIXTURE. GENERAL INSTRUCTIONS:


1. All electrical connections must be in accordance with local codes, ordinances and the Canadian Electrical Code.
2. These fixtures should be mounted on an electrical outlet box. The box must be directly supported by the building structure.
3. Turn off the circuit breaker or remove the appropriate fuse to disconnect power source before installing fixture.
4. Turning the light switch off to cut the power is not sufficient to prevent electric shock. When in doubt about the safety of any electrical installation or repair, consult a qualified electrician.

CAN ICES (B)/NMB (B)

TOOLS REQUIRED

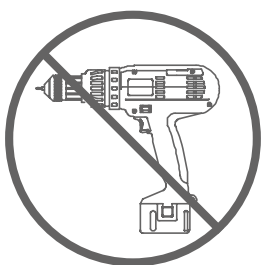

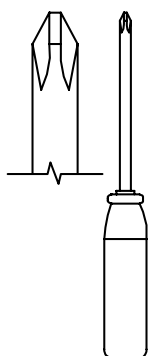

NOTE: Do not over drill/
Be aware of over-drilling








No. 2 Phillips Screwdriver
Tip Shown Actual Size

PARTS LIST


ITEM	DESCRIPTION	THUMBNAIL	QUANTITY
1	Fixture		1
2	Shade		1

HARDWARE LIST

ITEM	DESCRIPTION	THUMBNAIL	QUANTITY
A	Shade screw		2
B	Wire connector		3
C	Outlet box screw		2
D	Mounting bracket		1
E	Mounting screw (pre-installed)		2


EXPLODED PARTS

1

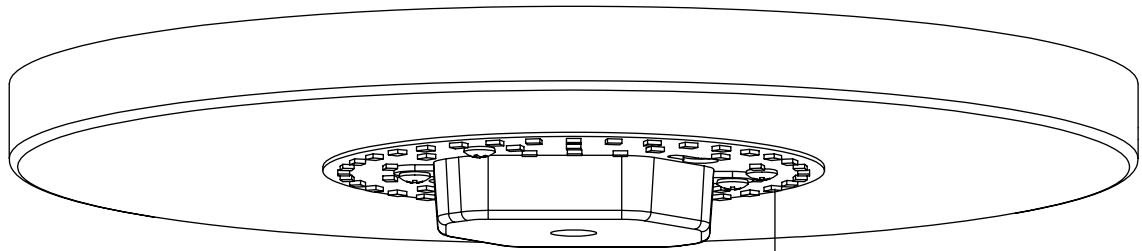

Integrated LED


2

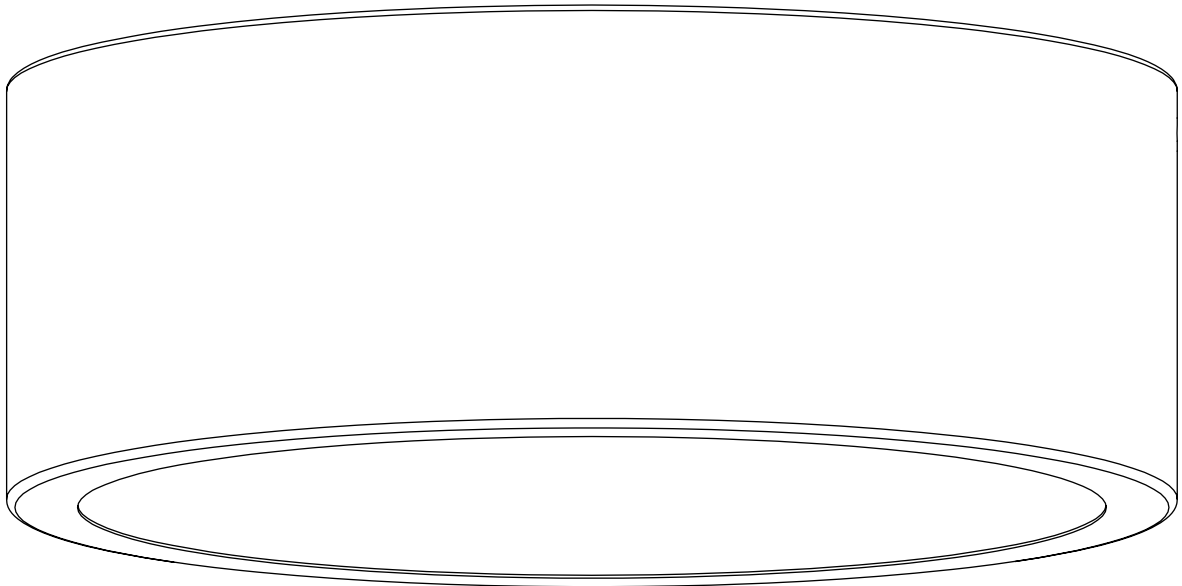

BEFORE YOU BEGIN ASSEMBLY


MAKE SURE ALL PARTS ARE PRESENT

Compare all pieces to the parts and hardware lists, and make sure you have all tools required for assembly.

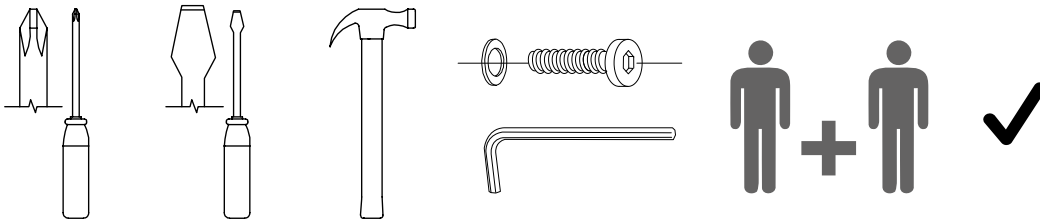


ASSEMBLE IN A CLEARED AREA

Place all parts from the box on the floor in front of you in a clean, dry, level surface to protect the product as it is being built.

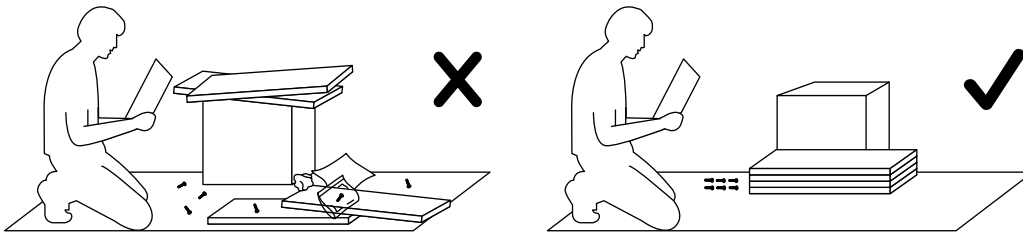


REMOVE PACKAGING MATERIALS

Place packing materials back in the box. Do not dispose of packaging materials until assembly is complete.

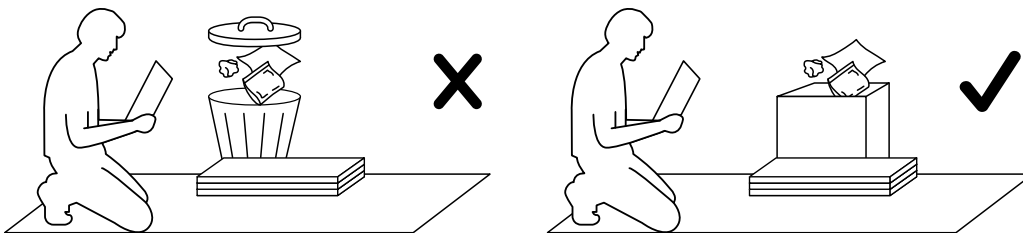

READ EACH STEP CAREFULLY


Make sure you understand each step. Or if you have any questions, contact CANVAS™ customer service at 1-888-660-6684 (toll-free)

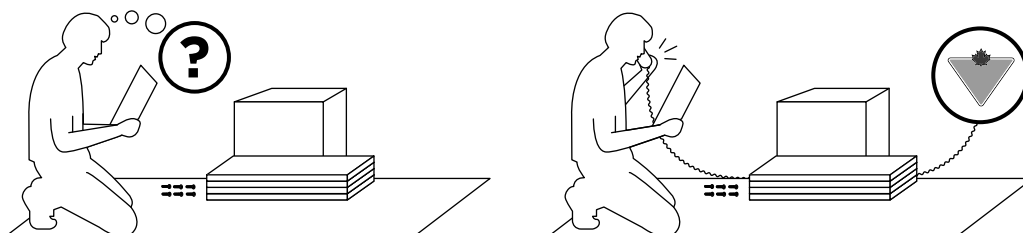

ELECTRICAL INSTALLATION


STEP 1

Place the wall switch to the “OFF” position.

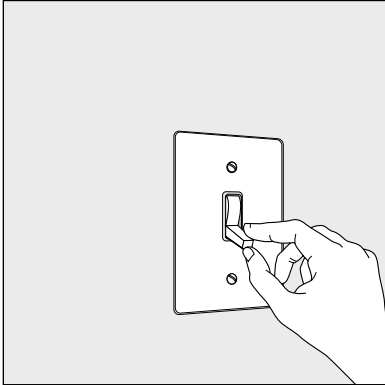


STEP 2

Depending on which type of fuse box you have in your home:

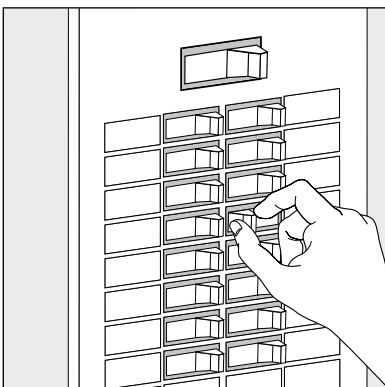

- Place either the main (Master) switch to the “OFF” position, cutting off power to your entire home, OR turn off the individual switch that provides power to where the fixture will be installed.

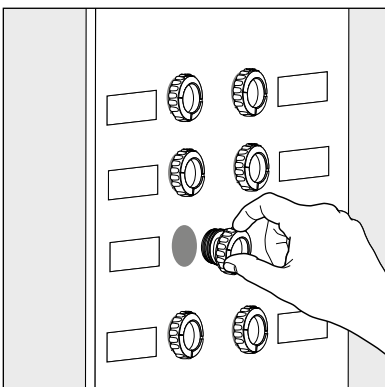

- Place either the main (Master) switch to the “OFF” position, cutting off power to the entire home, OR unscrew the fuse that provides power to where the fixture will be installed.


NOTE: Shutting off a wall switch that controls the light is not sufficient to prevent electric shock.




WARNING! CONSULT A QUALIFIED ELECTRICIAN TO ENSURE CORRECT BRANCH CIRCUIT CONDUCTOR.

STEP-BY-STEP GUIDE

STEP 1

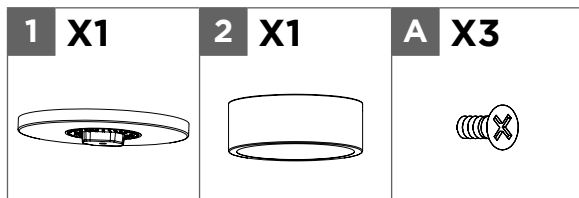


Remove the shade **2** from the fixture **1** by unscrewing the shade's screws **A**.

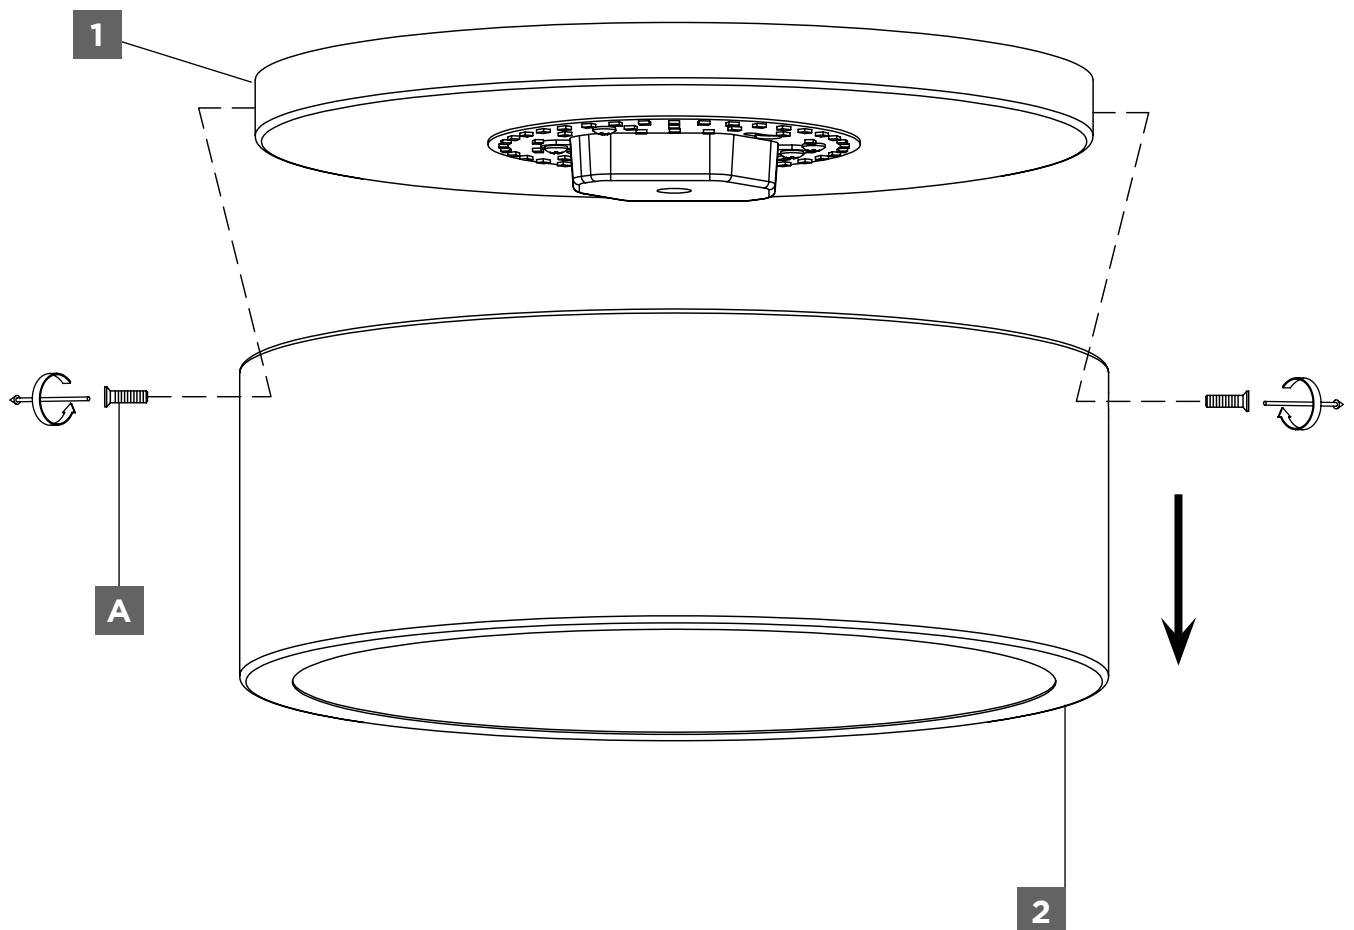


STEP-BY-STEP GUIDE

STEP 2

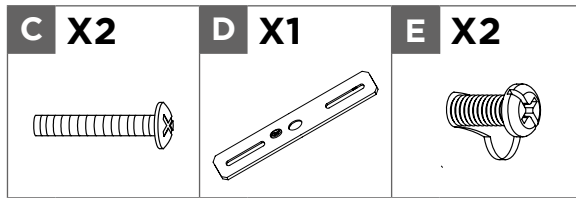


Attach the mounting bracket **D** with the two outlet box screws **C** to the outlet box (not included).

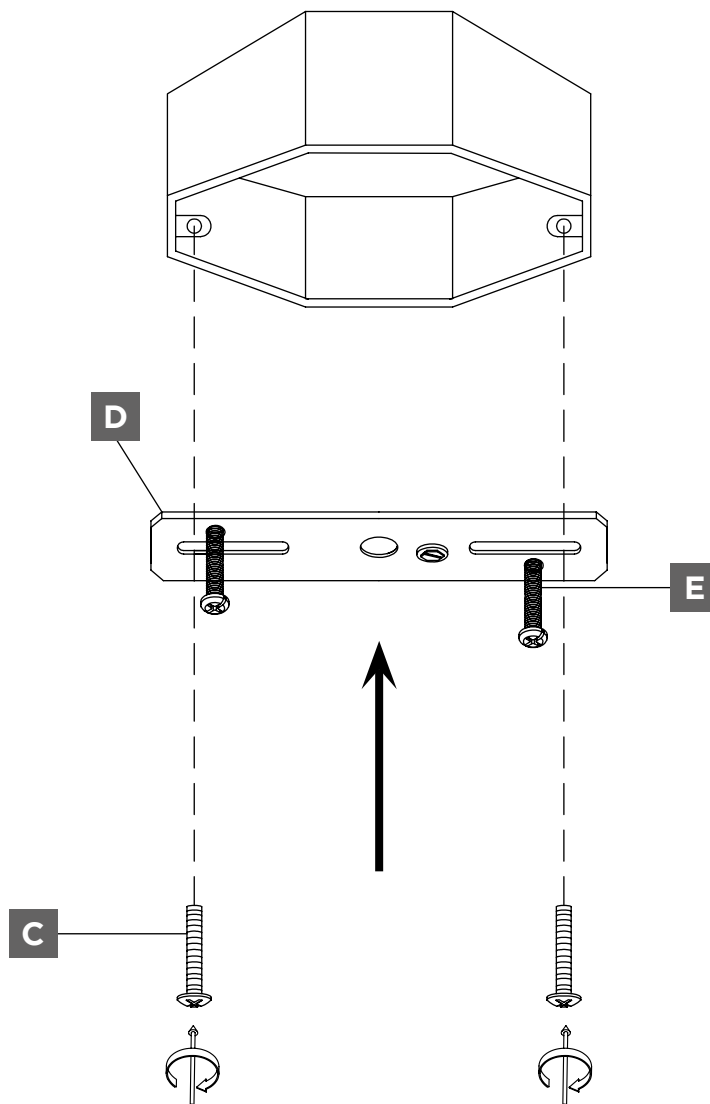

STEP-BY-STEP GUIDE

STEP 3


B X3

Connect the ground wire (bare) from the fixture **1** around the green screw on the mounting bracket **D**.

Connect the ground wire (bare) from the fixture **1** to the ground wire from the outlet box, the negative wire (white) from the fixture **1** to the negative wire (white) from the outlet box, and the positive wire (black) from the fixture **1** to the positive wire (black) from the outlet box.

Secure all connections with the wire connectors **B** and wrap electrical tape (not included) around the wire connectors **B**.

Push all excess wire and wire connections **B** back into the outlet box.

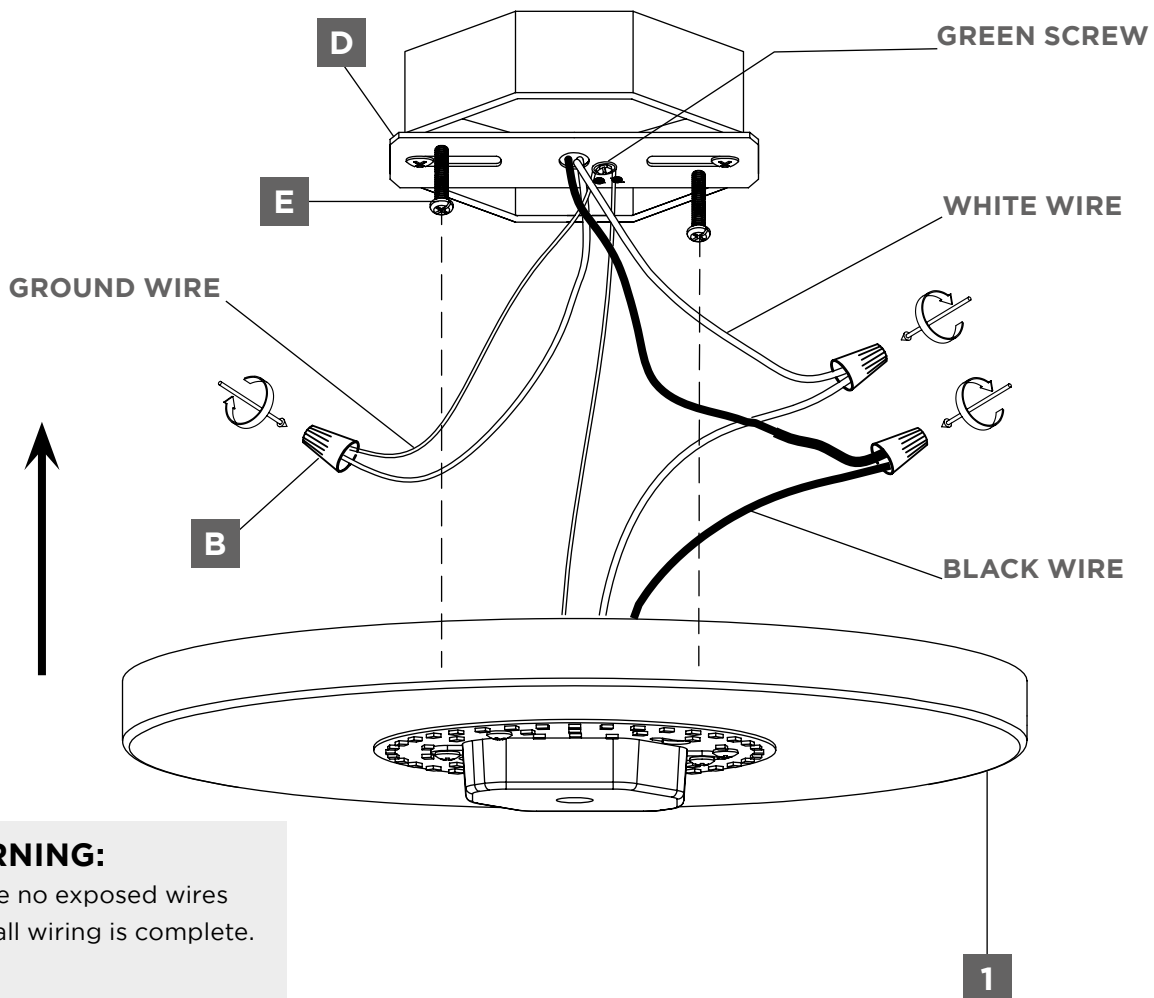

WARNING:

Ensure no exposed wires
once all wiring is complete.


STEP-BY-STEP GUIDE

STEP 4

Align the keyhole slots on the fixture **1** with the mounting screws **E** on mounting bracket **D**, and then gently push the fixture **1** toward outlet box.

Turning the fixture **1** clockwise toward the narrow end of the keyhole slots.


Use a screwdriver (not provided) to tighten the mounting screws **E** to secure the fixture **1**.

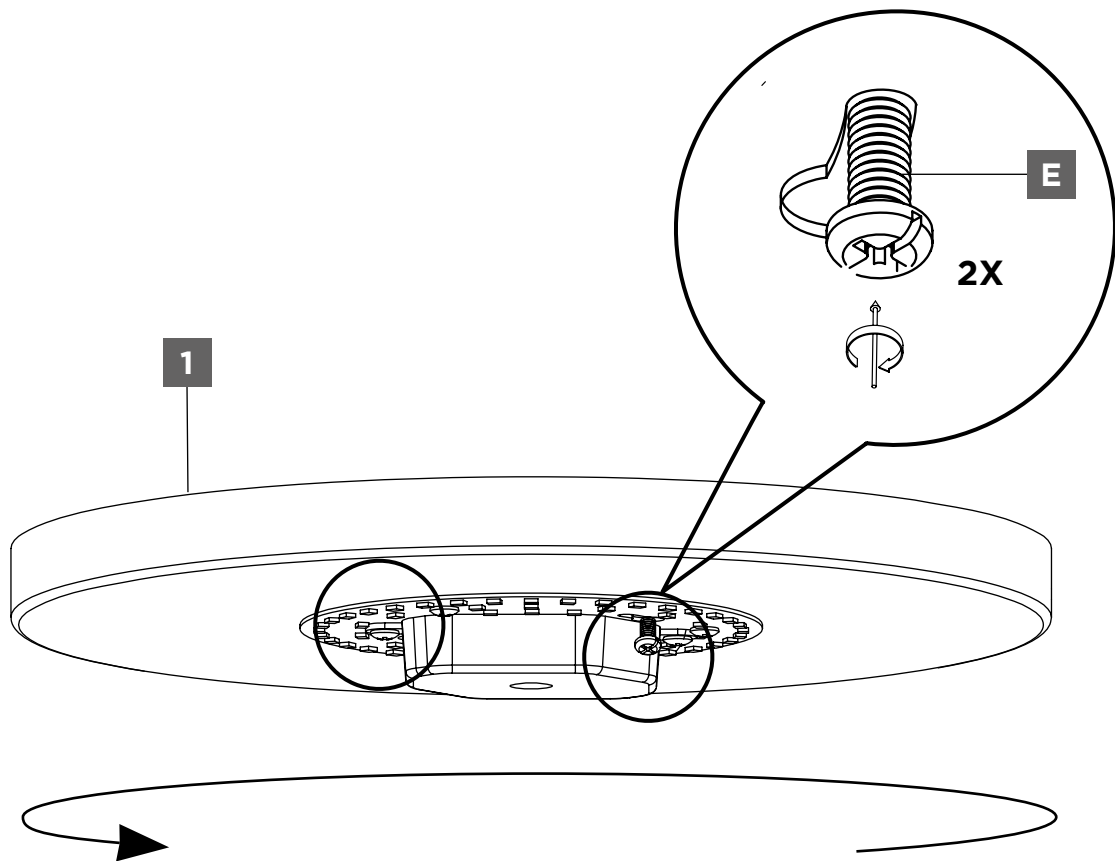


STEP-BY-STEP GUIDE

STEP 5

Align mounting holes on the shade **2** to the mounting holes on the fixture **1**, and then secure them with shade's screws **A**.

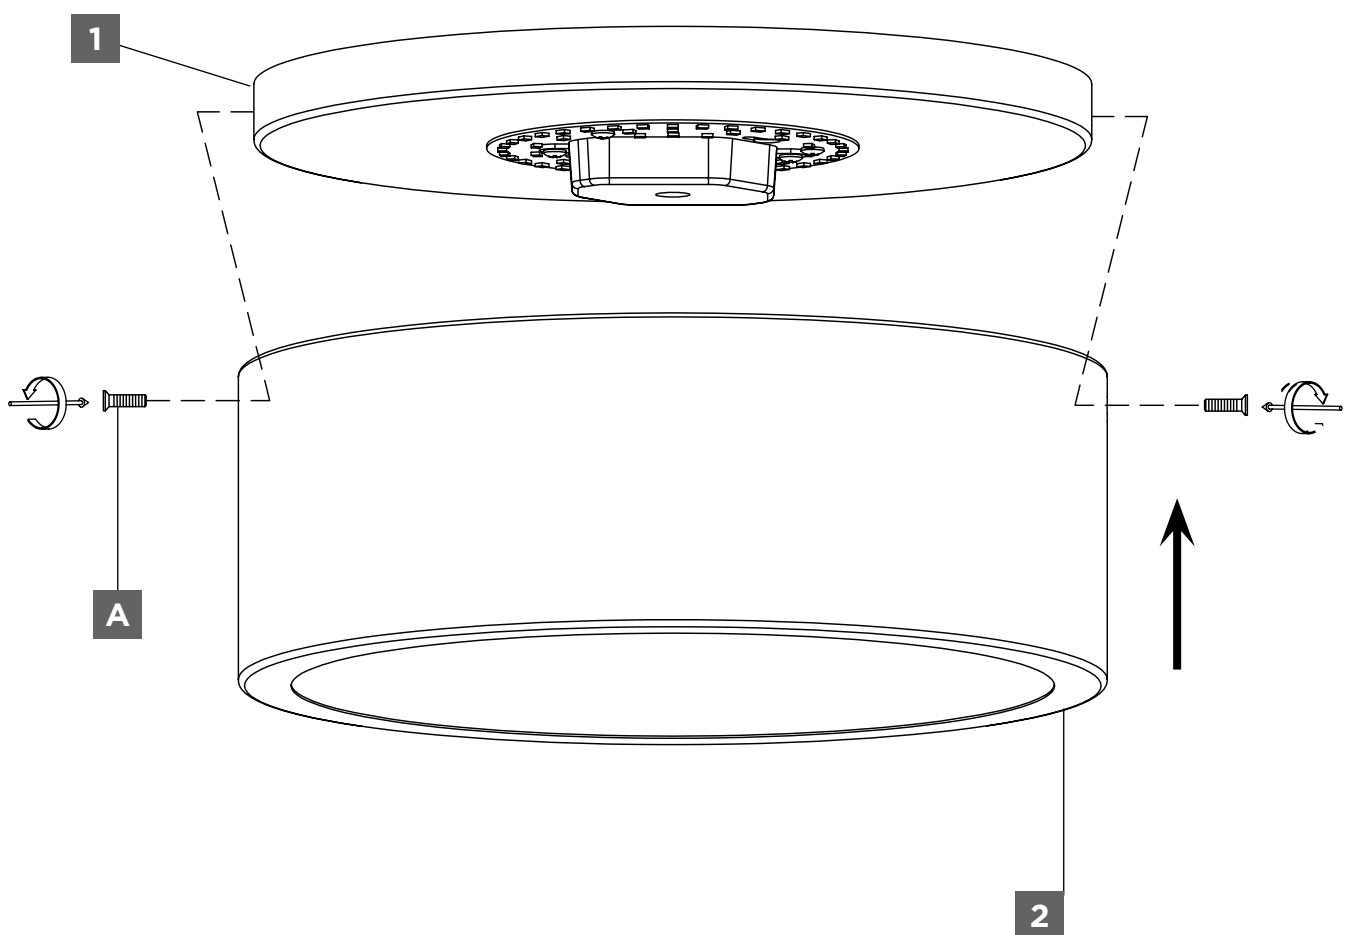


TECHNICAL DATA

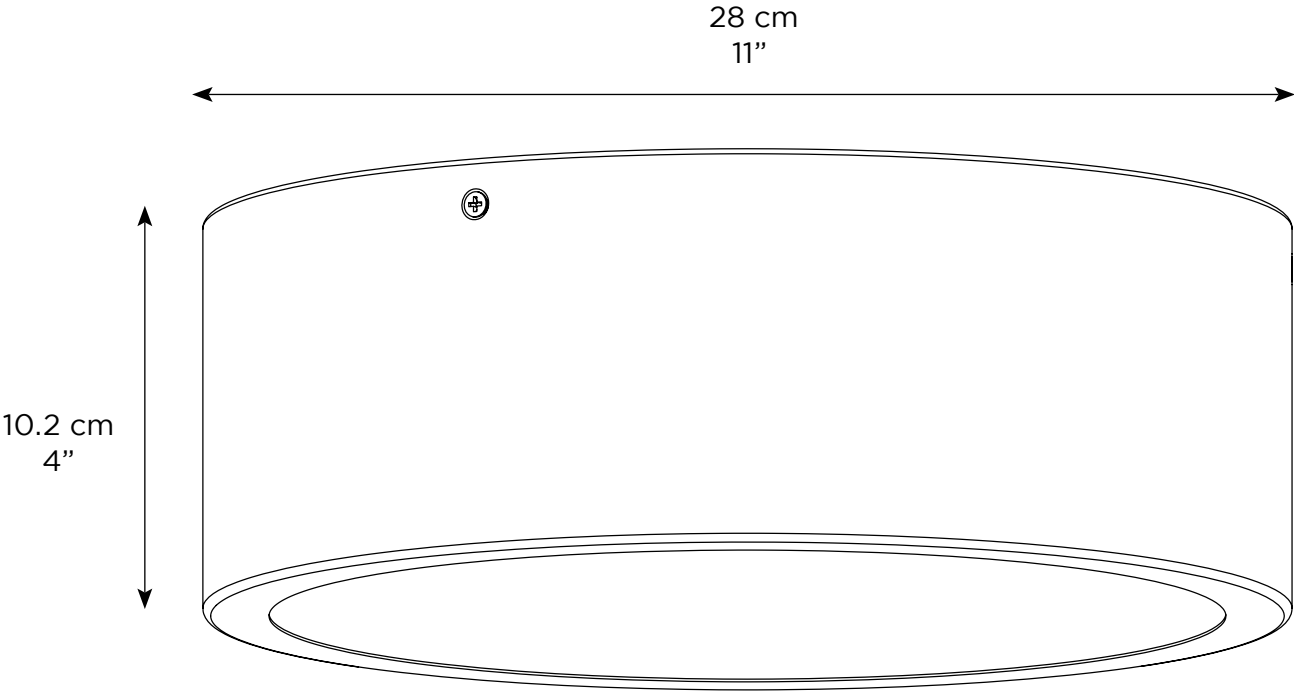

SPECIFICATIONS

ASSEMBLED DIMENSIONS (WxDxH)	28 x 28 x 10.2 cm
	11 x 11 x 4"
ASSEMBLED WEIGHT	3.18 lb
	1.25 kg

ASSEMBLY TROUBLESHOOTING

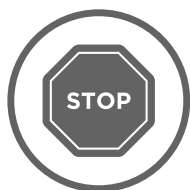

**BEFORE RETURNING
YOUR PRODUCT**

**HAVING TROUBLE?
LET US HELP YOU!**

**TOLL-FREE:
1-888-670-6684**

If you have questions regarding your product or require warranty assistance, please call our customer service helpline.



**CALL US,
WE CAN HELP**

PRODUCT TROUBLESHOOTING

PROBLEM	POSSIBLE CAUSES	SOLUTION
The light does not turn on.	Wall switch or circuit breaker is off.	Turn on the switch or circuit breaker.
The light does not turn on.	Bad main supply wiring.	Consult a certified professional electrician.
The light does not turn on.	Defective switch.	Consult a certified professional electrician.

CARING FOR YOUR ITEM

- 1 Clean this unit periodically. Clean the surface finish only using a soft, dry cloth.
- 2 Never use a rough cloth, abrasives or chemical cleaners containing acids or harsh solvents.

WARRANTY INFORMATION



1-YEAR LIMITED WARRANTY*

This CANVAS™ product carries a one (1) year warranty against defects in workmanship and materials. Trileaf Distribution agrees to replace the defective product free of charge within the stated warranty period, when returned by the original purchaser with proof of purchase. This product is not guaranteed against wear or breakage due to misuse and/or abuse.

PRODUCT NO. 000-000-0

Made in China

Imported by Trileaf Distribution Trifeuil Toronto, Canada M4S 2B8

CANVAS™

REDISCOVER YOUR SPACE

