




CORDLESS SLIDING COMPOUND MITRE SAW

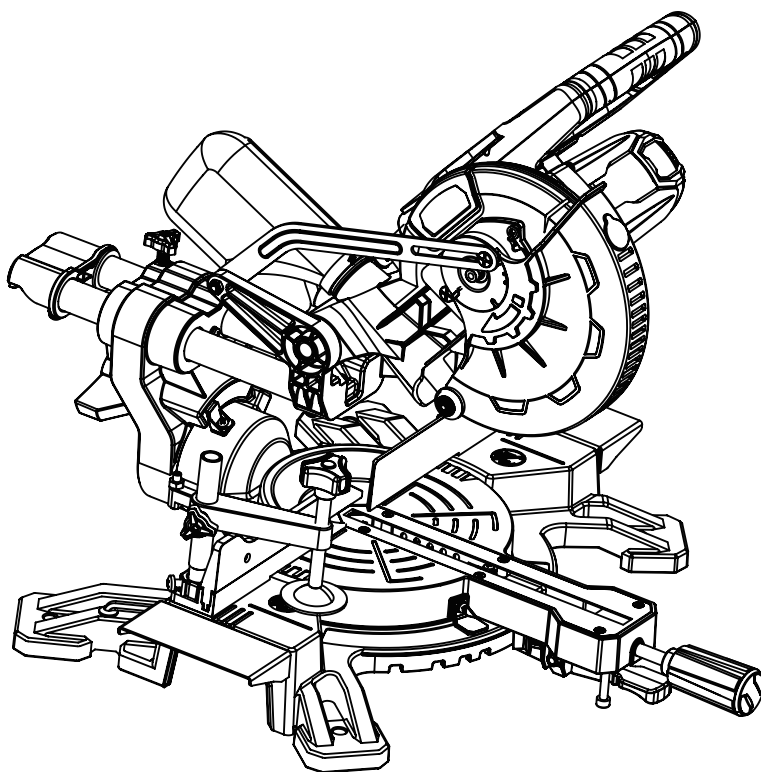

IMPORTANT:

Please read this manual carefully before using this mitre saw and save it for reference.

INSTRUCTION MANUAL

TABLE OF CONTENTS

Specifications	4
Safety Guidelines	5-15
Key Parts Diagram	16-17
Assembly And Adjustments	18-24
Operating Instructions	25-34
Maintenance	35-36
Troubleshooting	37
Exploded View	38
Parts List	39-41
Warranty	42-43

NOTE:

If any parts are missing or damaged, or if you have any questions, please call our toll-free helpline at 1-800-689-9928



SAVE THESE INSTRUCTIONS

This manual contains important safety and operating instructions.
Read all instructions and follow them with use of this products

model no. 055-9035-4 | contact us 1-800-689-9928



SPECIFICATIONS

Motor	20V  MAX*
Speed	3600 RPM (no load)
Blade	7 1/4" (18.4 cm) 40-tooth carbide-tipped
Arbour Size	5/8" (15.9 mm)
Compatible Mastercraft® Batteries	054-3124-0 (SOLD SEPARATELY); 054-7553-4 (SOLD SEPARATELY); 054-7557-6 (SOLD SEPARATELY); 054-2434-8 (SOLD SEPARATELY)
Compatible Mastercraft® charger	054-7559-2 (SOLD SEPARATELY)
Optimum Operating Temperature	40 to 104°F (4–40°C)
Cutting Capacity	2 x 8" (5.1 x 20.3 cm) crosscut at 0° mitre, 0° bevel 2 x 6" (5.1 x 15.2 cm) mitre cut at 45° mitre, 0° bevel 1 1/2 x 6" (3.8 x 15.2 cm) compound cut at 45° mitre, 45° bevel 1 1/2 x 8" (3.8 x 20.3 cm) cross cut at 45° bevel, left
Weight	20 lb 5 oz (9.2 kg)

* Maximum battery voltage without workload; with workload nominal voltage is 18V.

* For optimal performance, we recommend that you use the Mastercraft® 4.0 Ah battery (054-7557-6); 5.0 Ah (054-2434-8).

GENERAL POWER TOOL SAFETY WARNINGS

Save all warnings and instructions for future reference.

The term "power tool" in the warnings refers to your mains-operated (corded) power tool or battery-operated (cordless) power tool.

WORK AREA SAFETY

- **Keep work area clean and well lit.** Cluttered or dark areas invite accidents.
- **Do not operate power tools in explosive atmosphere, such as in the presence of flammable liquids, gases or dust.** Power tools create sparks which may ignite the dust or fumes.
- **Keep children and bystanders away while operating a power tool.** Distractions can cause you to lose control.

ELECTRICAL SAFETY

- **Power tool plugs must match the outlet. Never modify the plug in any way. Do not use any adaptor plugs with earthed (grounded) power tools.** Unmodified plugs and matching outlets will reduce risk of electric shock.
- **Avoid body contact with earthed or grounded surfaces, such as pipes, radiators, ranges and refrigerators.** There is an increased risk of electric shock if your body is earthed or grounded.
- **Do not expose power tools to rain or wet conditions.** Water entering a power tool will increase the risk of electric shock.
- **Do not abuse the cord. Never use the cord for carrying, pulling or unplugging the power tool. Keep cord away from heat, oil, sharp edges or moving parts.** Damaged or entangled cords increase the risk of electric shock.
- **When operating a power tool outdoors, use an extension cord suitable for outdoor use.** Use of a cord suitable for outdoor use reduces the risk of electric shock.
- **If operating a power tool in a damp location is unavoidable, use a RESIDUAL CURRENT DEVICE (RCD) protected supply.** Use of an RCD reduces the risk of electric shock.

PERSONAL SAFETY

- **Stay alert, watch what you are doing and use common sense when operating a power tool. Do not use a power tool while you are tired or under the influence of drugs, alcohol**



WARNING!

Read all safety warnings, instructions, illustrations and specifications provided with this power tool. Failure to follow all instructions listed below may result in electric shock, fire and/or serious injury.

model no. 055-9035-4 | contact us 1-800-689-9928

MASTERCRAFT^{INC.}

or medication. A moment of inattention while operating power tools may result in serious personal injury.

- **Use personal protective equipment. Always wear eye protection.** Protective equipment such as dust mask, non-skid safety shoes, hard hat, or hearing protection used for appropriate conditions will reduce personal injuries.
- **Prevent unintentional starting. Ensure the switch is in the off-position before connecting to power source and/or BATTERY pack, picking up or carrying the tool.** Carrying power tools with your finger on the switch or energising power tools that have the switch on invites accidents.
- **Remove any adjusting key or wrench before turning the power tool on.** A wrench or a key left attached to a rotating part of the power tool may result in personal injury.
- **Do not overreach. Keep proper footing and balance at all times.** This enables better control of the power tool in unexpected situations.
- **Dress properly. Do not wear loose clothing or jewellery. Keep your hair, clothing and gloves away from moving parts.** Loose clothes, jewellery or long hair can be caught in moving parts.
- **If devices are provided for the connection of dust extraction and collection facilities, ensure these are connected and properly used.** Use of dust collection can reduce dust-related hazards.
- **Do not let familiarity gained from frequent use of tools allow you to become complacent and ignore tool safety principles.** A careless action can cause severe injury within a fraction of a second.

POWER TOOL USE AND CARE

- **Do not force the power tool. Use the correct power tool for your application.** The correct power tool will do the job better and safer at the rate for which it was designed.
- **Do not use power tool if the switch does not turn it on and off.** Any power tool that cannot be controlled with the switch is dangerous and must be repaired.
- **Disconnect the plug from the power source and/or remove the battery pack, if detachable, from the power tool before making any adjustments, changing accessories, or storing power tools.** Such preventive safety measures reduce the risk of starting the power tool accidentally.
- **Store idle power tools out of the reach of children and do not allow persons unfamiliar with the power tool or these instructions to operate the power tool.** Power tools are dangerous in the hands of untrained users.
- **Maintain power tools and accessories. Check for misalignment or binding of moving parts, breakage of parts and any other condition that may affect the power tool's operation. If damaged, have the power tool repaired before use.** Many accidents are caused by poorly maintained power tools.
- **Keep cutting tools sharp and clean.** Properly maintained cutting tools with sharp cutting edges

are less likely to bind and are easier to control.

- **Use the power tool, accessories, tool bits, etc., in accordance with these instructions, taking into account the working conditions and the work to be performed.** Use of the power tool for operations different from those intended could result in a hazardous situation.
- **Keep handles and grasping surfaces dry, clean and free from oil and grease.** Slippery handles and grasping surfaces do not allow for safe handling and control of the tool in unexpected situations.

BATTERY TOOL USE AND CARE

- **Recharge only with the charger specified by the manufacturer.** A charger that is suitable for one type of battery pack may create a risk of fire when used with another battery pack.
- **Use power tools only with specifically designated battery packs.** Use of any other battery packs may create a risk of injury and fire.
- **When battery pack is not in use, keep it away from other metal objects, like paper clips, coins, keys, nails, screws or other small metal objects, that can make a connection from one terminal to another.** Shorting the battery terminals together may cause burns or a fire.
- **Under abusive conditions, liquid may be ejected from the battery; avoid contact. If contact accidentally occurs, flush with water. If liquid contacts eyes, additionally seek medical help.** Liquid ejected from the battery may cause irritation or burns.
- **Do not use a battery pack or tool that is damaged or modified.** Damaged or modified batteries may exhibit unpredictable behaviour resulting in fire, explosion or risk of injury.
- **Do not expose a battery pack or tool to fire or excessive temperature.** Exposure to fire or temperature above 130°C (266°F) may cause an explosion.
- **Follow all charging instructions and do not charge the battery pack or tool outside the temperature range specified in the instructions.** Charging improperly or at temperatures outside the specified range may damage the battery and increase the risk of fire.

SERVICE

- **Have your power tool serviced by a qualified repair person using only identical replacement parts.** This will ensure that the safety of the power tool is maintained.
- **Never service damaged battery packs.** Service of battery packs should only be performed by the manufacturer or authorized service providers.

SAFETY INSTRUCTIONS FOR MITRE SAWS

- **Mitre saws are intended to cut wood or wood-like products, they cannot be used with abrasive cut-off wheels for cutting ferrous material such as bars, rods, studs, etc.**

model no. 055-9035-4 | contact us 1-800-689-9928

MASTERCRAFT^{INC.}

Abrasive dust causes moving parts such as the lower guard to jam. Sparks from abrasive cutting will burn the lower guard, the kerf insert and other plastic parts.

- **Use clamps to support the workpiece whenever possible. If supporting the workpiece by hand, you must always keep your hand at least 4" (10 cm) from either side of the saw blade. Do not use this saw to cut pieces that are too small to be securely clamped or held by hand.** If your hand is placed too close to the saw blade, there is an increased risk of injury from blade contact.
- **The workpiece must be stationary and clamped or held against both the fence and the table. Do not feed the workpiece into the blade or cut "freehand" in any way.** Unrestrained or moving workpieces could be thrown at high speeds, causing injury.
- **Push the saw through the workpiece. Do not pull the saw through the workpiece. To make a cut, raise the saw head and pull it out over the workpiece without cutting, start the motor, press the saw head down and push the saw through the workpiece.** Cutting on the pull stroke is likely to cause the saw blade to climb on top of the workpiece and violently throw the blade assembly towards the operator.
- **Never cross your hand over the intended line of cutting either in front or behind the saw blade.** Supporting the workpiece cross handed, i.e., holding the workpiece to the right of the saw blade with your left hand or vice versa, is very dangerous.
- **Do not reach behind the fence with either hand closer than 4" (10 cm) from either side of the saw blade to remove wood scraps, or for any other reason, while the blade is spinning.** The proximity of the spinning saw blade to your hand may not be obvious and you may be seriously injured.
- **Inspect your workpiece before cutting. If the workpiece is bowed or warped, clamp it with the outside bowed face toward the fence. Always make certain that there is no gap between the workpiece, fence and table along the line of the cut.** Bent or warped workpieces can twist or shift and may cause binding on the spinning saw blade while cutting. There should be no nails or foreign objects in the workpiece.
- **Do not use the saw until the table is clear of all tools, wood scraps, etc., except for the workpiece.** Small debris or loose pieces of wood or other objects that contact the revolving blade can be thrown with high speed.
- **Cut only one workpiece at a time.** Stacked multiple workpieces cannot be adequately clamped or braced and may bind on the blade or shift during cutting.
- **Ensure the mitre saw is mounted or placed on a level, firm work surface before use.** A level and firm work surface reduces the risk of the mitre saw becoming unstable.
- **Plan your work. Every time you change the bevel or mitre angle setting, make sure the adjustable fence is set correctly to support the workpiece and will not interfere with the blade or the guarding system.** Without turning the tool on, and with no workpiece on the table, move the saw blade through a complete simulated cut to assure there will be no interference or danger of cutting the fence.
- **Provide adequate support such as table extensions, saw horses, etc., for a workpiece that is wider or longer than the table top.** Workpieces longer or wider than the mitre saw table

can tip if not securely supported. If the cut-off piece or workpiece tips, it can lift the lower guard or be thrown by the spinning blade.

- **Do not use another person as a substitute for a table extension or as additional support.** Unstable support for the workpiece can cause the blade to bind or the workpiece to shift during the cutting operation pulling you and the helper into the spinning blade.
- **The cut-off piece must not be jammed or pressed by any means against the spinning saw blade.** If confined, i.e., using length stops, the cut-off piece could get wedged against the blade and thrown violently.
- **Always use a clamp or a fixture designed to properly support round material such as rods or tubing.** Rods have a tendency to roll while being cut, causing the blade to "bite" and pull the work with your hand into the blade.
- **Let the blade reach full speed before contacting the workpiece.** This will reduce the risk of the workpiece being thrown.
- **If the workpiece or blade becomes jammed, turn the mitre saw off. Wait for all moving parts to stop and disconnect the plug from the power source and/or remove the battery pack. Then work to free the jammed material.** Continued sawing with a jammed workpiece could cause loss of control or damage to the mitre saw.
- **After finishing the cut, release the switch, hold the saw head down and wait for the blade to stop before removing the cut-off piece.** Reaching with your hand near the coasting blade is dangerous.

ADDITIONAL SAFETY RULES FOR MITRE SAWS

- **DO NOT OPERATE THIS MACHINE** until it is completely assembled and installed according to the instructions. A machine incorrectly assembled can cause serious injury.
- **OBTAIN ADVICE** from your supervisor, instructor, or another qualified person if you are not thoroughly familiar with the operation of this machine. Knowledge is safety.
- **MAKE CERTAIN** the blade rotates in the correct direction. The teeth on the blade should point in the direction of rotation as marked on the saw.
- **TIGHTEN ALL CLAMP HANDLES,** knobs and levers prior to operation. Loose clamps can cause parts or the workpiece to be thrown at high speeds.
- **BE SURE** all blade and blade clamps are clean, recessed sides of blade clamps are against blade and arbour screw is tightened securely. Loose or improper blade clamping may result in damage to the saw and possible personal injury.
- **DO NOT WEDGE ANYTHING AGAINST THE FAN** to hold the motor shaft. Damage to tool and possible personal injury may occur.
- **NEVER CUT FERROUS METALS** (those with any iron or steel content) or masonry. Either of these can cause the carbide tips to fly off the blade at high speeds causing serious injury.
- **DO NOT USE ABRASIVE WHEELS OR BLADES.** The excessive heat and abrasive particles

model no. 055-9035-4 | contact us 1-800-689-9928



generated by them may damage the saw and cause personal injury.

- **NEVER HAVE ANY PART OF YOUR BODY IN LINE WITH THE PATH OF THE SAW BLADE.** Personal injury will occur.
- **NEVER APPLY BLADE LUBRICANT TO A RUNNING BLADE.** Applying lubricant could cause your hand to move into the blade resulting in serious injury.
- **DO NOT** place either hand in the blade area when the saw is connected to the power source. Inadvertent blade activation may result in serious injury.
- **NEVER REACH AROUND OR BEHIND THE SAW BLADE.** A blade can cause serious injury.
- **DO NOT REACH UNDERNEATH THE SAW** unless it is unplugged and turned off. Contact with saw blade may cause personal injury.
- **SECURE THE MACHINE TO A STABLE SUPPORTING SURFACE.** Vibration can possibly cause the machine to slide, walk, or tip over, causing serious injury.
- **USE ONLY BLADES OF THE CORRECT SIZE AND TYPE** specified for this tool to prevent damage to the machine and/or serious injury.
- **INSPECT BLADE FOR CRACKS** or other damage prior to operation. A cracked or damaged blade can come apart and pieces can be thrown at high speeds, causing serious injury. Replace cracked or damaged blades immediately.
- **CLEAN THE BLADE AND BLADE CLAMPS** prior to operation. Cleaning the blade and blade clamps allows you to check for any damage to the blade or blade clamps. A cracked or damaged blade or blade clamp can come apart and pieces can be thrown at high speeds, causing serious injury.
- **DO NOT USE WARPED BLADES.** Check to see if the blade runs true and is free from vibration. A



WARNING!

Cutting plastics, sap coated wood, and other materials may cause melted material to accumulate on the blade tips and the body of the saw blade, increasing the risk of blade overheating and binding while cutting.



WARNING!

Always wear proper personal hearing protection that conforms to ANSI S12.6 (S3.19) during use. Under some conditions and duration of use, noise from this product may contribute to hearing loss.



WARNING!

ALWAYS use safety glasses. Everyday eyeglasses are NOT safety glasses. Also use face or dust mask if cutting operation is dusty. ALWAYS WEAR CERTIFIED SAFETY EQUIPMENT:
ANSI Z87.1 eye protection (CAN/CSA Z94.3)
ANSI S12.6 (S3.19) hearing protection
NIOSH/OSHA/MSHA respiratory protection.

vibrating blade can cause damage to the machine and/or serious injury.

- **KEEP GUARD IN PLACE** and in working order.
- **ALWAYS USE THE KERF PLATE AND REPLACE THIS PLATE WHEN DAMAGED.** Small chip accumulation under the saw may interfere with the saw blade or may cause instability of workpiece when cutting.
- **USE ONLY BLADE CLAMPS SPECIFIED FOR THIS TOOL** to prevent damage to the machine and/or serious injury.
- **CLEAN THE MOTOR AIR SLOTS** of chips and sawdust. Clogged motor air slots can cause the machine to overheat, damaging the machine and possibly causing a short which could cause serious injury.
- **NEVER LOCK THE SWITCH IN THE "ON" POSITION.** Severe personal injury may result.
- **NEVER STAND ON TOOL.** Serious injury could occur if the tool is tipped or if the cutting tool is unintentionally contacted.
- **NEVER LEAVE TOOL RUNNING UNATTENDED. TURN POWER OFF.** Don't leave tool until it comes to a complete stop.
- **TO REDUCE THE RISK OF INJURY,** return the saw head to the full rear position after each crosscut operation.
- **ALWAYS** make sure that the mitre table and head assembly (bevel function) are locked in position BEFORE operating your saw. Lock the mitre table by securely tightening the mitre locking handle. Lock the head assembly (bevel function) by securely tightening the bevel locking knob.
- **SUPPORT** long workpieces when cutting to minimize the risk of blade pinching or kickback. The saw may slip, walk or slide while cutting long or heavy boards.
- **AVOID** awkward operations and hand positions where a sudden slip could cause your hand to hit the blade. ALWAYS make sure you have good balance. NEVER operate your saw on the floor or in a crouched position.
- **NEVER** use solvents to clean plastic parts. Solvents could dissolve or otherwise damage the material.
- **DO NOT** turn the motor switch on and off rapidly. This could cause the blade to loosen, which could create a hazard. Should this ever occur, stand clear and allow the saw blade to come to a



WARNING!

Use of this tool can generate and/or disperse dust, which may cause serious and permanent respiratory or other injury. Always use NIOSH/OSHA approved respiratory protection appropriate for the dust exposure. Direct particles away from face and body.



WARNING!

For your own safety, read the Instruction Manual before operating the mitre saw.

complete stop. Disconnect the saw from the power source and tighten the blade bolt securely.

- **NEVER** lift this tool by gripping the switch handle or by the mitre fence. This may cause misalignment. ALWAYS lock the head assembly in the “DOWN” position and carry the saw by holding the base or lift it using the carrying handle/support bracket.
- **ALWAYS** check the tool for damaged parts. Before further use of the tool, a guard or other part that is damaged should be carefully checked to determine whether it will operate properly and perform its intended function. Check for misalignment or binding of moving parts, broken parts and any other condition that may affect the tool's operation. A guard or other part that is damaged should be properly repaired or replaced by a qualified person.
- **SAVE THESE INSTRUCTIONS.** Refer to them frequently and use them to instruct others who may use this tool. If someone borrows this tool, make sure he or she has these instructions also.

SAFETY RULES FOR BATTERY PACK AND CHARGER

- If the battery pack casing is cracked or damaged, do not insert into charger. There is a danger of electric shock or electrocution.
- Don't allow any liquid to get inside charger. Electric shock may result. To facilitate cooling of the battery pack after use, avoid placing the charger or battery pack in a warm environment such as in a metal shed, or a trailer that is not insulated.
- This charger is not intended for any uses other than charging rechargeable batteries. Any other use may result in risk of fire, electric shock or electrocution.
- Do not place any object on top of the charger or place the charger on a soft surface that may result in excessive internal heat. Do not place the charger near any heat source.
- To reduce the potential risk of damage to the electric plug and cord, pull by the plug rather than the cord when disconnecting the charger from the power supply.
- Make sure the cord is located so it will not be stepped on, tripped over, or otherwise subjected to damage or stress.
- An extension cord should not be used unless absolutely necessary. Use of an improper extension cord could result in a risk of fire, electric shock or electrocution.
- Do not operate the charger if it has received a sharp blow, been dropped or otherwise damaged in any way.
- Do not disassemble charger. Take it to a Service Agent when service or repair is required. Incorrect reassembly may result in a risk of electric shock, electrocution or fire.
- To prevent the risk of electric shock, unplug the charger from the outlet before attempting to clean it. Only removing the battery pack from the charger will not reduce this risk.
- DO NOT store or use the tool and battery pack in locations where the temperature may reach or exceed 50°C (122°F), which can lead to deterioration of the storage battery.
- The charger is designed to operate on standard household electrical power (120 V~). Do not attempt to use it on any other voltage.

ADDITIONAL INFORMATION ON BATTERY AND CHARGER

- First read the safety instructions and then follow the charging notes and procedures.
- The longest life and best performance can be obtained if the battery pack is charged when the air temperature is 15–25°C (59–77°F). Do not charge the battery pack where the air temperature is below 0°C (32°F) or above 45°C (113°F). This is important and will prevent damage to the battery pack.
- Do not incinerate the battery pack even if it is seriously damaged or is completely worn out. The battery can explode in a fire.
- Never attempt to open the battery pack for any reason. If the plastic housing of the battery pack breaks or cracks, immediately discontinue use and do not recharge.
- The length of service from your battery will depend on the type of work you are doing. The battery has been designed to provide maximum trouble-free life. However, like all batteries, it will eventually wear out.
- To obtain the longest possible battery life, we suggest the following:
 - Store and charge your battery in a cool area. Temperatures above or below normal room temperature will shorten battery life.
 - Never store the battery in a discharged condition. Recharge it immediately after it has been discharged.
- All batteries gradually lose their charge. The higher the temperature, the quicker they lose their charge. If you store your tool for long periods of time without use, recharge the battery every month or two. This practice will prolong battery life.

GLOSSARY OF WOODWORKING TERMS


- **Spindle:** The revolving shaft on which a blade or cutting tool is mounted.
- **Spindle Lock:** Allows the user to stop the blade from rotating while tightening or loosening the blade screw during blade replacement or removal.
- **Bevel Cut:** A cutting operation made with the blade at any angle other than 90° to the mitre table.
- **Chamfer Cut:** A cut removing a wedge from a block of wood so the end (or part of the end) is angled other than at 90°.
- **Compound Mitre Cut:** A cut made using both a mitre angle and a bevel angle at the same time.
- **Crosscut:** A cutting operation made across the grain of the workpiece.
- **Freehand Cut:** Performing a cut without using a fence, mitre gauge, fixture, work clamp, or other proper device to keep the workpiece from twisting or moving during the cut. Do not perform any operation freehand. Use a clamp or vice wherever possible.
- **Kerf:** The material removed by the blade in a through cut or the slot produced by the blade in a non-through or partial cut.
- **Kickback:** A hazard that can occur when the blade binds or stalls, throwing the workpiece back toward the operator.
- **Mitre Cut:** A cutting operation made with the blade at any angle other than 90° to the fence.
- **No-Hands Zone:** The area between the marked lines on the left and right side of the mitre-table base. This zone is identified by No-Hands Zone symbols inside the lines marked on the mitre table base.
- **Non-through Cut:** Any cutting operation where the blade does not extend completely through the thickness of the workpiece.
- **Revolutions Per Minute (RPM):** The number of turns completed by a spinning object in one minute.
- **Saw Blade Path:** The area over, under, behind or in front of the blade, as it applies to the workpiece; the area that will be or has been cut by the blade.
- **Set:** The distance that the saw blade tooth is bent (or set) outward from the face of the blade.
- **Throat Plate:** A plate inserted in the mitre saw's table that allows for blade clearance.
- **Through Sawing:** Any cutting operation where the blade extends completely through the thickness of the workpiece.
- **Workpiece or Material:** The item on which the cutting operation is being done. The surfaces of a workpiece are commonly referred to as faces, ends, and edges.

SYMBOL

Some of the following symbols may be used on this tool. Please study them and learn their meaning. Proper interpretation of these symbols will allow you to operate the tool better and more safely.

No.	Description
V	Volts
A	Amperes
Hz	Hertz
W	Watts
n ₀	No-load speed
RPM	Revolutions per minute
~	Alternating current
	Direct current
Ah	Ampere-hours
Li-ion	Lithium-ion battery
Ø	Diameter
BFP	Backfeed protection
	Safety alert symbol
	To reduce the risk of injury, user must read operator's manual.
	Always wear hearing/eye/breathing protection when operating this product
	
	
	Contains lithium-ion battery. Battery must be recycled or disposed of properly.
	This symbol designates that this tool is listed by UL, to Canadian Standards
	Never place hands near the cutting area

No.	Description	No.	Description
1	Switch handle	8	Mitre stop locking lever
2	Trigger switch with lock-off lever	9	Positive mitre stop
3	Upper blade guard	10	Mounting hole
4	Lower blade guard	11	Hex key for blade
5	Base	12	Fence
6	Table insert	13	Work clamp
7	Mitre handle	14	Handhold for transportation

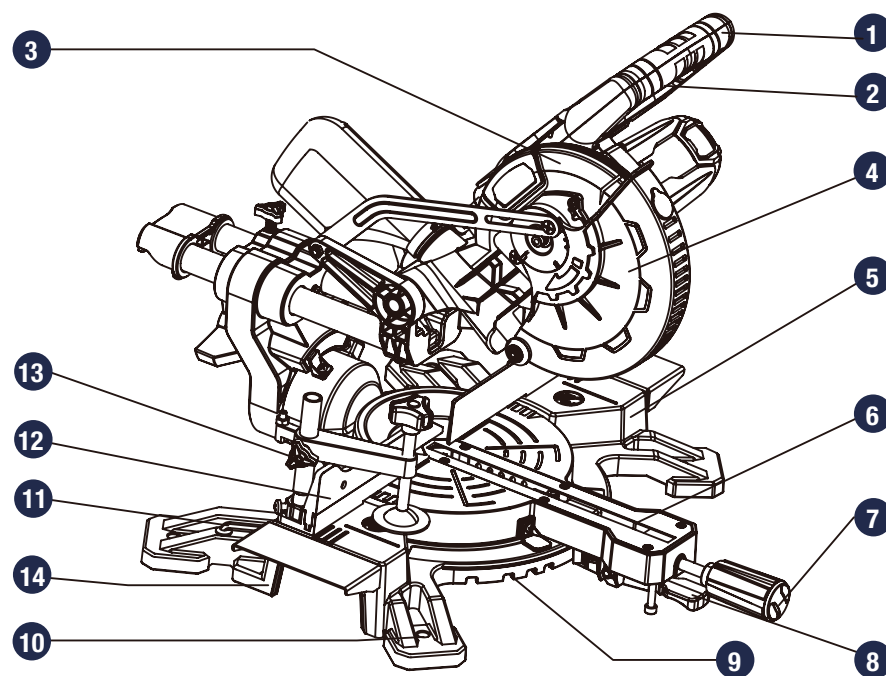

NOTE: Before attempting to use your saw, familiarize yourself with all of the operating features and safety requirements.



WARNING!


Carefully remove the tool and any accessories from the box. Make sure that all items listed in the packing list are included. Inspect the tool carefully to make sure that no breakage or damage occurred during shipping.



WARNING!

Do not discard the packing material until you have carefully inspected and satisfactorily operated the tool.

No.	Description	No.	Description
15	Spindle lock	21	Bevel lock knob
16	Blade	22	Bevel scale
17	Motor	23	Table
18	Dust bag	24	Mitre scale
19	Lock-down pin	25	Extension table
20	Sliding carriage lock knob		

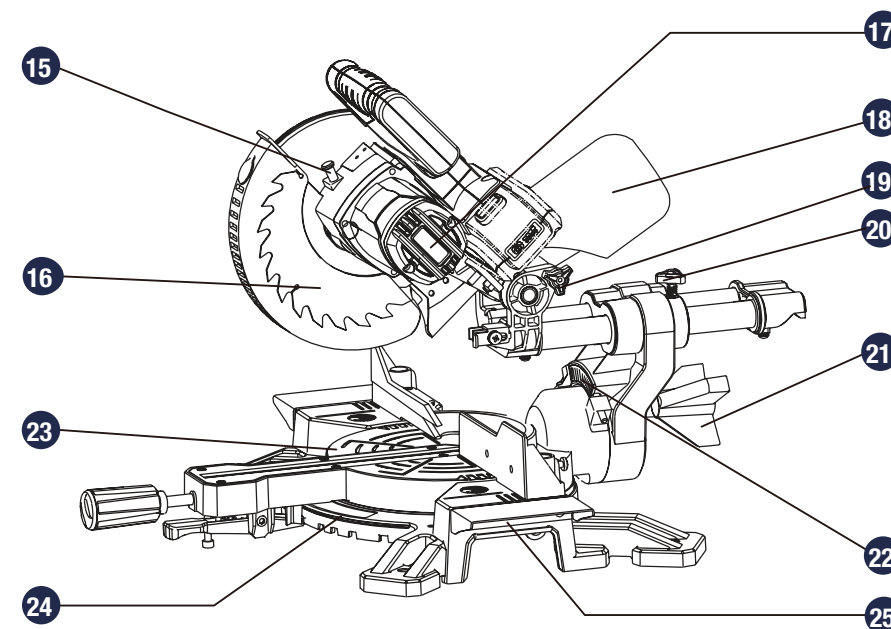

WARNING!

To reduce the risk of serious personal injury, turn tool off and disconnect battery pack before making any adjustments or removing/installing attachments or accessories.



WARNING!

Do not allow familiarity with the mitre saw to cause a lack of alertness. A fraction of a second of carelessness is enough to cause severe injury.

model no. 055-9035-4 | contact us 1-800-689-9928

INTENDED USE

This mitre saw is designed for wood cutting applications. **DO NOT** use under wet conditions or in presence of flammable liquids or gases.

DO NOT let children come into contact with the tool. Supervision is required when inexperienced operators use this tool.

BENCH MOUNTING (Fig. 1)

This tool should be bolted with four bolts to a level and stable surface using the bolt holes (1) provided in the tool's base. This will help prevent tipping and possible injury.




INSTALLING THE WORK CLAMP (Fig. 2)

There are two mounting holes for the work clamp. These are located just behind the fence on the left and right side of the base.

- Loosen the locking screw with a cross-head screwdriver.
- Place the work clamp in the desired mounting hole.
- Tighten the screw to hold the work clamp.

INSTALLING SLIDING FENCE (Fig. 3)

- Loosen the fence lock knob (1), to clear fence slots.
- Install the sliding fence. Lower fence into fence slot and slide it from the side of fixed fence to inside.

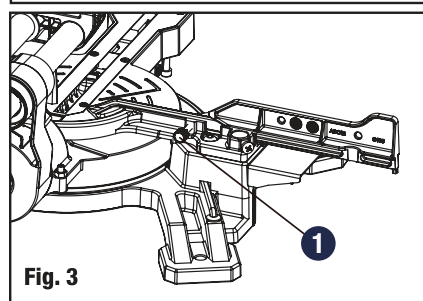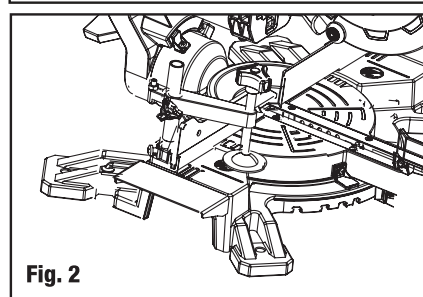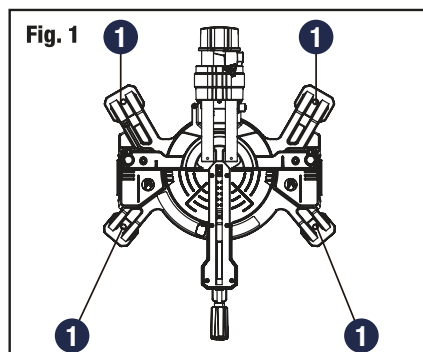


- Tighten fence lock knob securely.

INSTALLING EXTENSION TABLES (Fig. 4)

Extension tables have been provided for both the left and the right side of the saw.

To install extension tables:


- Remove the screws (1) from the base.
- Place the extension table on the side of the base.
- Place a straight edge (such as metal ruler) across the main table top and extension table top – the surfaces should be at the same level.
- Tighten screws to secure the extension table.

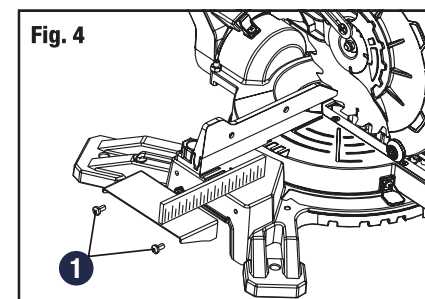

REMOVING AND INSTALLING THE BLADE

Removing blade (Fig. 5 to 8)

- Disconnect battery pack before changing/installing the blade.
- Adjust the lock-down pin to raise the cutting head.
- Loosen the cover plate screw (1) about 4 turns with a cross-head screwdriver. Do not remove this screw from the tool.
- Lift and hold up the lower blade guard (2) to expose the threaded blade bolt (3).
- Press and hold the spindle-lock button (4) and rotate the blade at the same time until it is locked in position.
- Continue to hold the spindle lock button to keep it engaged while using the hex key to turn the threaded blade bolt clockwise and remove the threaded blade bolt.

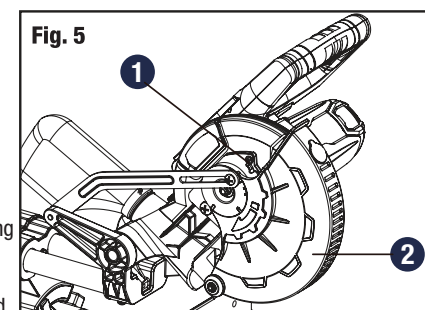

NOTE: Pay attention to the pieces being removed, noting their position and the direction they face. Wipe the blade collar clean of any sawdust before installing a new blade.



WARNING!

Always be sure that the tool is switched off and disconnect battery pack before adjusting or checking function on the tool. Failure to switch off and disconnect battery pack may result in serious personal injury from accidental start-up.



WARNING!

Ensure that the tool will not move on the supporting surface. Movement of the mitre saw on the supporting surface while cutting may result in loss of control and serious personal injury.



WARNING!

- To avoid injury, never use the saw without the cover plate securely in place. It keeps the blade bolt from falling out if it accidentally loosens and helps prevent the spinning blade from coming off the saw.
- Make sure the flanges are clean and properly arranged. Lower the blade into the lower table and check for any contact with the metal base or the mitre table.
- To avoid injury from an accidental start, make sure the switch is in the OFF position and the battery pack is removed.
- Never cut metals or masonry products with this tool. This mitre saw is designed for use on wood and wood-like products only.

model no. 055-9035-4 | contact us 1-800-689-9928



MASTERCRAFT^{INC.}

- Remove the outer flange (5) and the blade (6). Wipe the flanges and spindle to remove any dust and debris.

Installing blade (Fig. 5 to 8)

SAW BLADES: ONLY USE 7 1/4" (184 mm) SAW BLADES WITH 5/8" (15.9 mm) ARBOUR HOLES AND A MAXIMUM KERF OF 3.0 mm. SPEED RATING MUST BE AT LEAST 4000 RPM. Never use a different diameter blade. It will not be guarded properly. Use crosscut blades only!

- Disconnect battery pack before changing/installing the blade.
- With the arm raised, and the lower guard raised, place the blade onto the arbour shaft (7). Match the arrow on the blade with the arrow on the upper blade guard. Make sure that the blade teeth are pointing downward.
- Place the out flange against the blade and on the arbour. Thread the blade bolt onto the arbour in a counter-clockwise direction.
- Place the blade hex key into the blade bolt.
- Press the spindle lock button, holding it in firmly

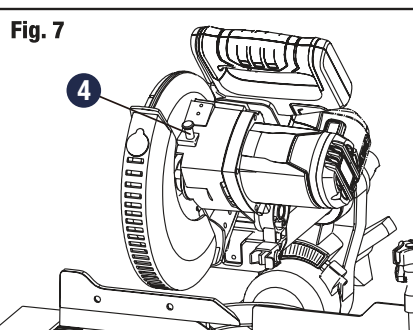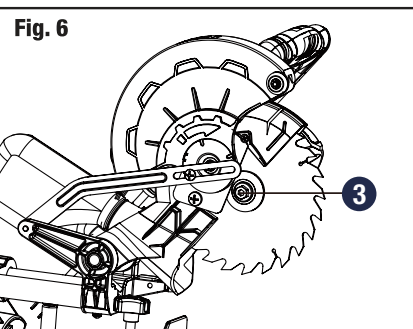

while turning the blade counter-clockwise. When spindle lock engages, continue to press it in while tightening the blade bolt securely.



- Rotate the lower blade guard back to its original position until the slot in the cover plate engages with the cover plate screw. While holding the lower blade guard, tighten the screw with a cross-head screwdriver.
- Verify that the operation of the guard does not bind or stick.
- Be sure the spindle lock is released so the blade turns freely before operating the saw.

INSTALLING THE DUST BAG (Fig. 9)

- Squeeze the metal collar wings on the dust bag.
- Place the dust bag neck opening around the exhaust port on the mitre saw and release the metal collar wings.

TRANSPORTING THE SAW

In order to conveniently carry the mitre saw

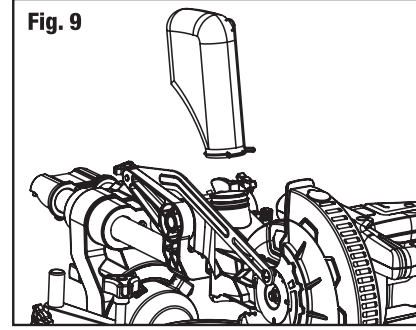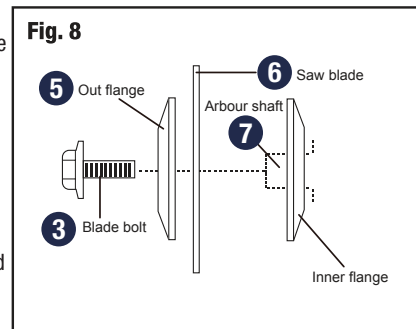

IMPORTANT: Make sure the flats of the out flange are engaged with the flats on the arbour shaft. Also, the flat side of the out flange collar must be placed against the blade.



CAUTION!

The lower guard must be returned to its original position and the cover plate screw tightened before activating the saw. Failure to do so may allow the guard to contact the spinning saw blade resulting in damage to the saw and severe personal injury.



WARNING!

To avoid injury, use only saw blades that are marked with a speed equal or higher than the speed marked on the tool.



WARNING!

Do not use this saw to cut and/or sand metals. The hot chips or sparks may ignite sawdust from the bag material.

IMPORTANT: Check bag frequently and empty it before it gets full.

IMPORTANT: To avoid damage, never carry the mitre saw by the switch handle, the cutting arm or the mitre table handle. ALWAYS use the handholds for transportation.

NOTE: To empty the dust bag, remove it from exhaust port. Open zipper on underside of bag and empty into waste container.



WARNING!

To reduce the risk of serious personal injury, ALWAYS lock the slide carriage lock knob, mitre handle, bevel lock knob, lock down pin and fence adjustment knobs before transporting saw.



WARNING!

To avoid injury from an accidental start, make sure the switch is in the OFF position and the battery pack is not connected.



WARNING!

To reduce the risk of injury, wear safety goggles or glasses with side shields.

from place to place, hand indentations have been provided in the two sides of base.

MITRE SCALE (Fig. 10)

The sliding compound mitre saw scale can be easily read, showing mitre angles from 0° to 45° to the left, and 0° to 45° to the right. The mitre saw table has nine of the most common angle settings with positive stops at 0°, 15°, 22.5°, 31.6° and 45°. These positive stops position the blade at the desired angle quickly and accurately. Follow the process below for quickest and most accurate adjustments.

This tool is carefully adjusted and aligned at the factory, but rough handling may have affected the alignment. If your tool is not aligned properly, perform the following as needed.

To Adjust Mitre Angles:

- Unlock the table by turning the mitre handle (1) counter-clockwise.
- Move the table while lifting up on the positive stop locking lever (2) to align the indicator (3) to the desired degree measurement.
- If the desired angle is one of the nine positive stops, release the positive stop locking lever, making sure the lever snaps into position, and then secure by tightening the mitre handle.
- If the mitre angle desired is not one of the nine positive stops, simply lock the table into desired angle position by turning the mitre handle in the clockwise direction.

Mitre Angle Pointer Adjustment (Fig. 10)

- Move the table to the 0° positive stop.
- Loosen the screw (4) that holds the indicator with a cross-head screwdriver.
- Adjust the indicator (3) to the 0° mark and retighten the screw.

ADJUSTING FENCE SQUARENESS (Fig. 11)

- Loosen the fence lock knob and then pull out the upper sliding fence.
- Lower the cutting head and lock in position.
- Using a square (1), lay the heel of the square against the blade and the ruler against the fence (2) as shown.

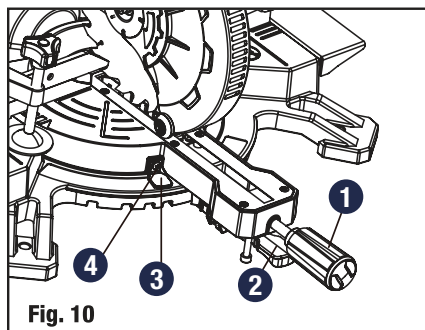


Fig. 10

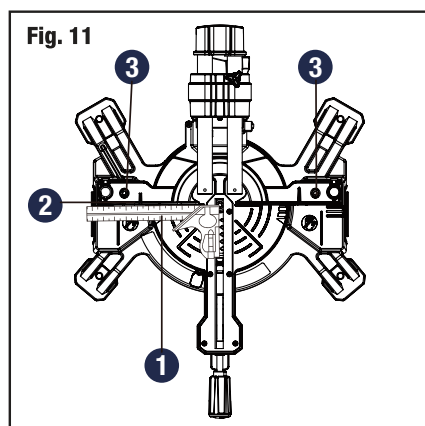


Fig. 11

- Loosen the two fence locking bolts (3) with a 6 mm hex wrench.
- Adjust the fence 90° to the blade and tighten the two fence locking bolts.
- After fence has been aligned, make a cut at 90° using a scrap piece of wood and check squareness on the piece. Readjust if necessary.

BEVEL STOP ADJUSTMENT

This tool is carefully adjusted and aligned at the factory, but rough handling may have affected the alignment. If your tool is not aligned properly, perform the following as needed.

90° (0°) Bevel Adjustment (Fig. 12)

- Loosen bevel lock knob (1) and tilt the pivot arm completely to the right. Tighten the bevel lock knob.
- Place a combination square (2) on the mitre table with the ruler against the table and the heel of the square against the saw blade.
- If the blade is not 90° square with the table, loosen the locknut (3) and turn the bevel angle adjustment bolt (4) in or out with a 3 mm hex wrench until the blade is square with the table.
- Tilt the pivot arm back to the right at 90° (0°) bevel and recheck for alignment.
- Repeat steps if further adjustment is needed.
- Tighten bevel lock knob and locknut (3) when alignment is achieved.

90° Bevel Pointer Adjustment (Fig. 13)

When the blade is exactly 90° to the table, loosen the bevel indicator screw (1) using a cross-head screwdriver.

- Adjust bevel indicator (2) to the "0" mark on the bevel scale and retighten the screw.

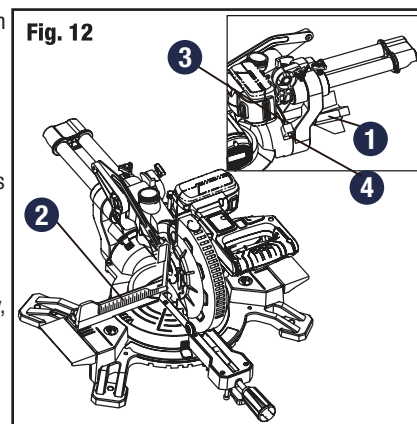


Fig. 12

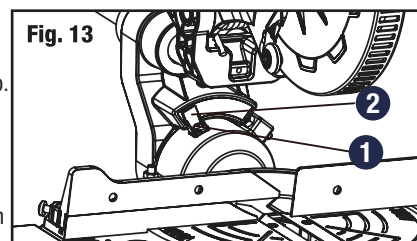
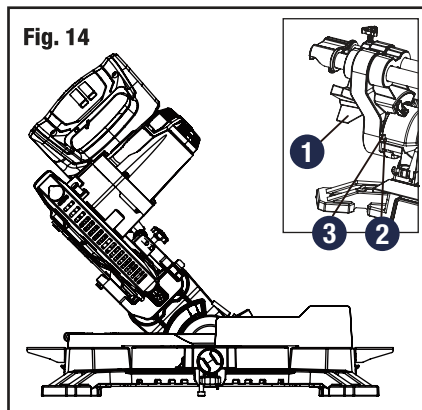


Fig. 13

45° Bevel Adjustment (Fig. 14)

- Loosen the bevel lock knob (1) and tilt the cutting head completely to the left.
- Using a combination square, check to see if the blade is at a 45° angle to the table.
- If the blade is not at 45° to the mitre table, tilt the pivot arm to the right, loosen the locknut (2) on the bevel angle adjustment bolt (3) and use a 3 mm hex wrench to the adjust bolt depth in or out to increase or decrease the bevel angle.
- Tilt the cutting arm to the left to 45° bevel and recheck for alignment.
- Repeat steps until the blade is at 45° to the mitre table.
- Tighten bevel lock knob and locknut when alignment is achieved.


**GUARD ACTUATION AND CHECKING**

The blade guard on your saw has been designed to automatically raise when the arm is brought down and to lower over the blade when the arm is raised.

The guard can be raised by hand when installing or removing saw blades or for inspection of the saw. NEVER RAISE THE BLADE GUARD MANUALLY UNLESS THE SAW IS TURNED OFF.

INSTALLING AND REMOVING THE BATTERY PACK (Fig. 15)

- To install the battery pack into the tool, align the battery pack with the rails inside the tool's handle and slide it into the handle until the battery pack is firmly seated in the tool. Ensure that it does not disengage.
- To remove the battery pack from the tool, press the battery pack release button and slide the battery pack completely out of the tool handle.

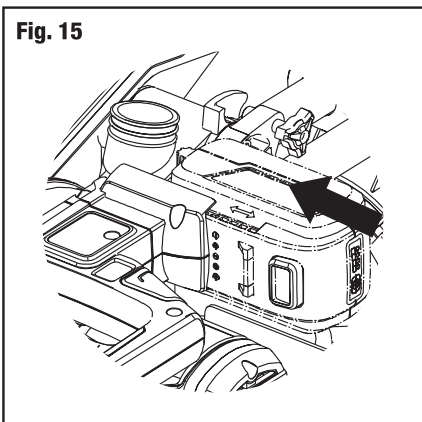


NOTE: For best results, make sure your battery pack is fully charged.


UNLOCKING AND LOCKING THE CUTTING HEAD (Fig. 16)

To unlock: Press and lightly hold down the cutting head. Pull out the lock-down pin (1) to release the cutting head. The cutting head should freely move up.

To lock: Place the cutting head at the lowest position. Secure the position and push the stop lock pin into the locking position. Please note, if there is any cutting depth setting, the lock in may not work. Release the cutting depth limitation, and then lock the cutting head in.

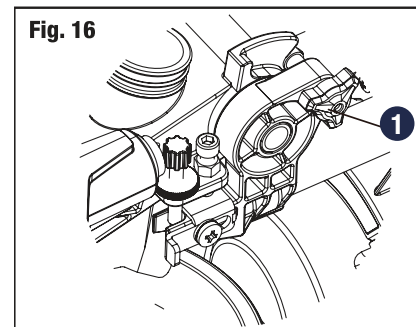**UNLOCKING THE SLIDE CARRIAGE (Fig. 17)**

After removing the saw from the carton, loosen the slide carriage lock knob (1). When transporting or storing the mitre saw, the slide carriage should always be locked in position. The slide carriage lock knob is located on the upper side of the slide carriage.

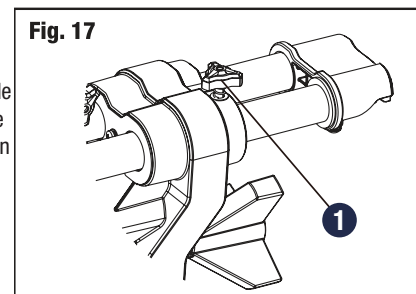**CAUTION!**

To avoid injury and damage to the saw, transport and store the mitre saw with the cutting head locked in the down position. Never use the stop pin to hold the cutting head in a down position for cutting operations.

**CAUTION!**

Always make sure that the spindle lock button is released so the blade can rotate freely. **MAKE SURE** that the locking pin is loose and the cutting head moves freely up and down. **ENSURE** that all clamps and locks are tightly in place, and that there is no excessive play in any parts.

**WARNING!**

Before each use, verify that the blade is free of cracks, loose teeth, missing teeth, or any other damage. Do not use if damage is observed or suspected. Always wait for the blade to stop completely, and disconnect battery pack before changing accessories or making adjustments.

model no. 055-9035-4 | contact us 1-800-689-9928

MASTERCRAFT^{INC.}

TRIGGER SWITCH (Fig. 18)

To turn the saw on, push the lock-off lever (1) to the left, then depress the trigger switch. To turn the tool off, release the switch. There is no provision for locking the switch on. To lock the saw off, place a padlock in the hole provided in the trigger switch.

When the trigger switch is released, the blade will be stopped within 10 seconds.

DRY RUN

For safe operation, it's necessary to know where the blade will contact the workpiece during the cutting process. Always perform the simulated cutting process with the switch off to check and understand the projected path of the saw blade. Adjust the work clamps and fences to avoid any contact with the lower guard and cutting action.

MITRE CUT (Fig. 19)

- When a mitre cut is required, unlock the table by turning the mitre handle (1) counter-clockwise.
- While holding the mitre handle, lift up on the positive stop locking lever (2).
- Rotate the table to the right or left with the mitre handle.
- When the table is in the desired position, as shown on the mitre scale (3), release the positive stop locking lever and tighten the mitre handle. The table is now locked at the desired angle. Positive stops are provided at 0°, 15°, 22.5°, 31.6° and 45°.

Fig. 18


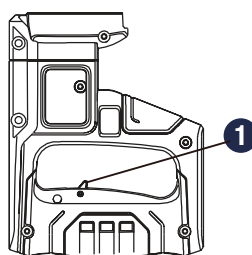


Fig. 19



NOTE: Always perform a dry run cut so you can determine if the operation being attempted is possible before power is applied to the saw.

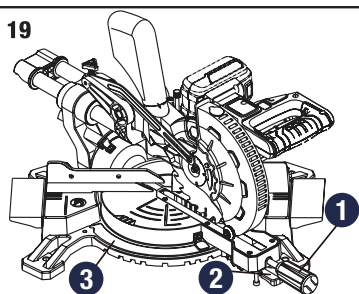

WARNING!

- To avoid injury, after completing a cut and releasing the trigger switch, wait and confirm that the blade has stopped before raising the cutting head.
- To avoid injury, check and tighten the blade bolt periodically.

BEVEL CUT (Fig. 20)

- When a bevel cut is required, loosen the bevel lock knob (1) by turning it clockwise.
- Tilt the cutting head to the desired angle, as shown on the bevel scale (2).
- The blade can be positioned at any angle, from a 90° straight cut (0° on the scale) to a 45° left bevel. Tighten the bevel lock knob to lock the cutting head in position. Positive stops are provided at 0° and 45°.

COMPOUND CUT (Fig. 21)

A compound cut is the combination of a mitre and a bevel cut simultaneously.

- Loosen the bevel lock knob (1) and position the cutting head at the desired bevel position. Lock the bevel lock knob.
- Loosen the mitre handle (2). Lift up the positive stop locking lever (3) and position the table at the desired angle. Release the positive stop locking lever and lock the mitre handle.

SLIDING CARRIAGE SYSTEM (Fig. 22)

- For chop cutting operations on small workpieces, slide the cutting head completely toward the rear of the unit and tighten the carriage lock knob (1).
- To cut wide boards up to 8" (20.3 cm), the carriage lock knob must be loosened to allow the cutting head to slide freely.

SLIDE CUTTING WIDE BOARDS UP TO 8" (20.3 cm) WIDE

To avoid injury:

Fig. 20

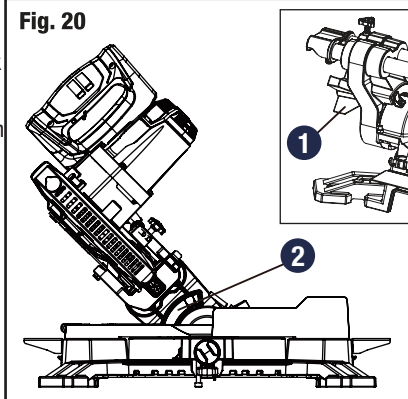


Fig. 21


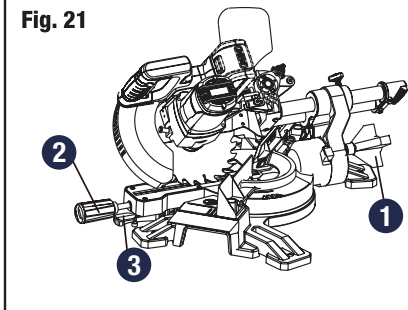


Fig. 22

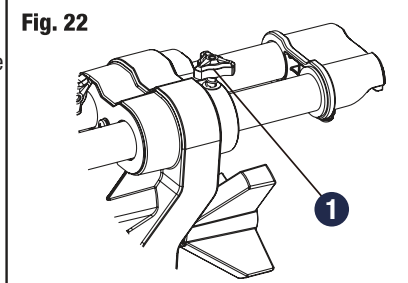



IMPORTANT: Always tighten the mitre table lock handle before performing every cutting operation.

model no. 055-9035-4 | contact us 1-800-689-9928

- Let the blade reach full speed before cutting. This will help reduce the risk of a thrown workpiece.
- Do not make crosscuts by lowering the blade and pulling the cutting head through the wood toward you.

To Slide Cut Wide Boards (Fig. 23)

- Unlock the carriage lock knob (1) and allow the cutting head assembly to move freely.
- Set both the desired bevel angle and/or the mitre angle and lock into position.
- Use a work clamp (2) to secure the workpiece (3).
- Grasp and pull the switch handle (4) forward until the centre of the saw blade is over the front of the workpiece.
- Engage the trigger to turn the saw on.
- When the saw reaches full speed, slowly push the switch handle down, cutting through the leading edge of the workpiece.
- Slowly move the switch handle toward the fence, completing the cut.
- Release the trigger and allow the blade to stop spinning before raising the cutting head and removing the workpiece.

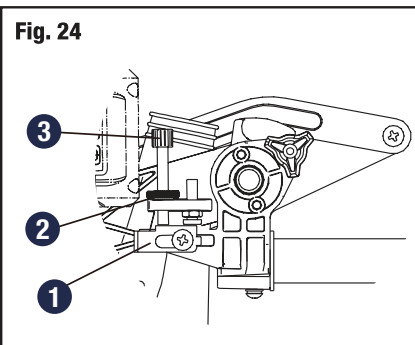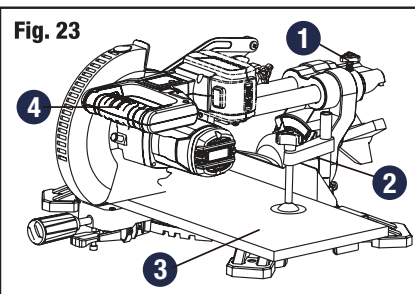

SETTING CUTTING DEPTH (Fig. 24)

The depth of cut can be preset for even and repetitive shallow cuts.

- Slide the stop plate (1) towards the front position.
- Loosen the lock nut (2) to free the lock knob (3), turn the stop knob until the cutting head down until the teeth of the blade are at the desired depth.



CAUTION!

To reduce the risk of injury, return carriage to the full rear position after each crosscut operation.





CAUTION!

Always use a work clamp to maintain control and reduce the risk of workpiece damage and personal injury.

- While holding the upper arm in that position, tighten the lock nut to secured the stop knob.
- Recheck the blade depth by moving the cutting head front to back through the full motion of typical cut along the control arm.


CUTTING GROOVES (Fig. 25)

- Mark lines to identify the width and depth of the desired cut on the workpiece and put the workpiece on the table and aim the inside tip of the blade at the line. Use a work clamp to secure the workpiece on the table.
- Lower the cutting head so the tip of the blade touches the top surface of the workpiece at the marked line.
- While holding the upper arm in position, loosen the lock nut and turn the stop knob until it touches the stop plate, then retighten the lock nut. (SEE "SETTING CUTTING DEPTH")
- Cut two parallel grooves as shown.
- Use a wood chisel or make multiple passes with a router to remove the material between the two outside grooves to create the groove.

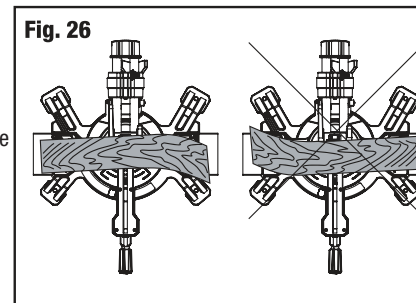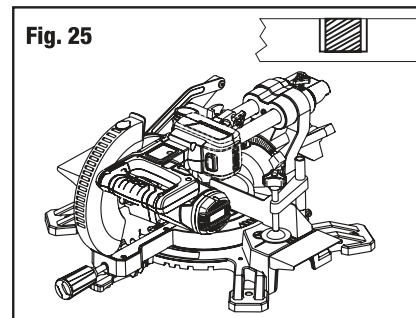

CUTTING WARPED MATERIAL (Fig. 26)

When cutting warped material, be sure that the convex side is against the fence. If the workpiece is placed with the concave side facing the fence, it will pinch the blade near the completion of the cutting.

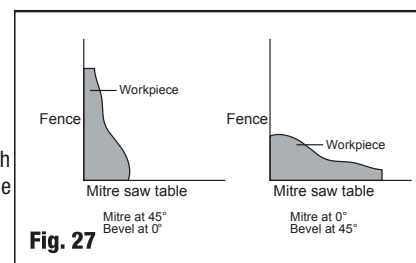

CUTTING BASE MOULDING (Fig. 27)

Base mouldings and many other mouldings can be cut on a compound mitre saw. The setup of the saw depends on moulding characteristics and applications, as shown. Perform practice cuts on scrap material to achieve best results.

- Always make sure mouldings rest firmly against the fence and table. Use hold-down or C-clamps whenever possible, and place tape on the area being clamped to avoid marks.



WARNING!

DO NOT USE A DADO BLADE; use only the standard saw blade for this operation.

- Reduce splintering by taping the cut area prior to making cut. Mark cut line directly on the tape.
- Splintering typically happens due to wrong blade application and thinness of the material.

CUTTING CROWN MOULDING (Fig.28, 29)

Your compound mitre saw is suited for the difficult task of cutting crown moulding. To fit properly, crown moulding must be compound-mitred with extreme accuracy. The two surfaces on a piece of crown moulding that fit flat against the ceiling and wall are at angles that, when added together, equal exactly 90°.

Most crown moulding has a top rear angle (the section that fits flat against the ceiling) of 52° and a bottom rear angle (the section that fits flat against the wall) of 38°.

In order to accurately cut crown moulding for a 90° inside or outside corner, lay the moulding with its broad back surface flat on the saw table. When setting the bevel and mitre angles for compound mitres, remember the settings are interdependent; changing one changes the other, as well.

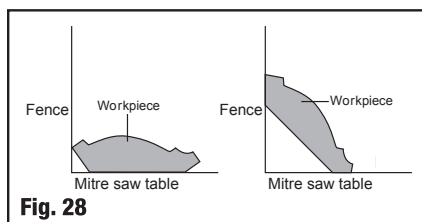


Fig. 28

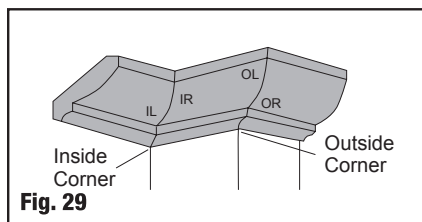


Fig. 29

Bevel/Mitre Settings (when the angle between the walls equals 90°)

KEY	BEVEL SETTING	MITRE SETTING	TYPE OF CUT
Inside corner - Left side			
IL	33.9°	31.6° Right	1. Position top of moulding against fence. 2. Mitre table set at RIGHT 31.6°. 3. LEFT side is finished piece.
Inside corner - Right side			
IR	33.9°	31.6° Left	1. Position bottom of moulding against fence. 2. Mitre table set at LEFT 31.6°. 3. LEFT side is finished piece.
Outside corner - Left side			
OL	33.9°	31.6° Left	1. Position bottom of moulding against fence. 2. Mitre table set at LEFT 31.6°. 3. RIGHT side is finished piece.
Outside corner - Right side			
OR	33.9°	31.6° Right	1. Position top of moulding against fence. 2. Mitre table set at RIGHT 31.6°. 3. RIGHT side is finished piece.

CROWN MOULDING CHART

To aid in the correct setting, the compound angle setting chart below has been provided.

Angle Between Walls	52/38° CROWN MOULDING		45/45° CROWN MOULDING	
	Mitre Setting	Bevel Setting	Mitre Setting	Bevel Setting
67	42.93	41.08	46.89	36.13
68	42.39	40.79	46.35	35.89
69	41.85	40.50	45.81	35.64
70	41.32	40.20	45.28	35.40
71	40.79	39.90	44.75	35.15
72	40.28	39.61	44.22	34.89
73	39.76	39.30	43.70	34.64
74	39.25	39.00	43.18	35.38
75	38.74	38.69	42.66	34.12
76	38.24	38.39	42.15	33.86
77	37.74	38.08	41.64	33.60
78	37.24	37.76	41.13	33.33
79	36.75	37.45	40.62	33.07
80	36.27	37.13	40.12	32.80
81	35.79	36.81	39.62	32.53
82	35.31	36.49	39.13	32.25
83	34.83	36.17	38.63	31.98
84	34.36	35.85	38.14	31.70
85	33.90	35.52	37.66	31.42
86	33.43	35.19	37.17	31.34
87	32.97	34.86	36.69	30.86
88	32.52	34.53	36.21	30.57
89	32.07	34.20	35.74	30.29
90	31.62	33.86	35.26	30.00
91	31.17	33.53	34.79	29.71
92	30.73	33.19	34.33	29.42
93	30.30	32.86	33.86	29.13
94	29.86	32.51	33.40	28.83
95	29.43	32.17	32.94	28.54
96	29.00	31.82	32.48	28.24
97	28.58	31.48	32.02	27.94
98	28.16	31.13	31.58	27.64
99	27.74	30.78	31.13	27.34
100	27.32	30.43	30.68	27.03
101	26.91	30.08	30.24	26.73
102	26.50	29.73	29.80	26.42
103	26.09	29.38	29.36	26.12

Angle Between Walls	52/38° CROWN MOULDING		45/45° CROWN MOULDING	
	Mitre Setting	Bevel Setting	Mitre Setting	Bevel Setting
104	25.69	29.02	28.92	25.81
105	25.29	28.67	28.48	25.50
106	24.89	28.31	28.05	25.19
107	24.49	27.96	27.62	24.87
108	24.10	27.59	27.19	24.56
109	23.71	27.23	26.77	24.24
110	23.32	26.87	26.34	23.93
111	22.93	26.51	25.92	23.61
112	22.55	26.15	25.50	23.29
113	22.17	25.78	25.08	22.97
114	21.79	25.42	24.66	22.66
115	21.42	25.05	24.25	22.33
116	21.04	24.68	23.84	22.01
117	20.67	24.31	23.43	21.68
118	20.30	23.94	23.02	21.36
119	19.93	23.57	22.61	21.03
120	19.57	23.20	22.21	20.70
121	19.20	22.83	21.80	20.38
122	18.84	22.46	21.40	20.05
123	18.48	22.09	21.00	19.72
124	18.13	21.71	20.61	19.39
125	17.77	21.34	20.21	19.06
126	17.42	20.96	19.81	18.72
127	17.06	20.59	19.42	18.39
128	16.71	20.21	19.03	18.06
129	16.37	19.83	18.64	17.72
130	16.02	19.45	18.25	17.39
131	15.67	19.07	17.86	17.05
132	15.33	18.69	17.48	16.71
133	14.99	18.31	17.09	16.38
134	14.66	17.93	16.71	16.04
135	14.30	17.55	16.32	15.70
136	13.97	17.17	15.94	15.36
137	13.63	16.79	15.56	15.02
138	13.30	16.40	15.19	14.62
139	12.96	16.02	14.81	14.34
140	12.63	15.64	14.43	14.00
141	12.30	15.25	14.06	13.65
142	11.97	14.87	13.68	13.31
143	11.64	14.48	13.31	12.97
144	11.31	14.09	12.94	12.62
145	10.99	13.71	12.57	12.29

Angle Between Walls	52/38° CROWN MOULDING		45/45° CROWN MOULDING	
	Mitre Setting	Bevel Setting	Mitre Setting	Bevel Setting
146	10.66	13.32	12.20	11.93
147	10.34	12.93	11.83	11.59
148	10.01	12.54	11.46	11.24
149	9.69	12.16	11.09	10.89
150	9.37	11.77	10.73	10.55
151	9.05	11.38	10.36	10.20
152	8.73	10.99	10.00	9.85
153	8.41	10.60	9.63	9.50
154	8.09	10.21	9.27	9.15
155	7.77	9.82	8.91	8.80
156	7.46	9.43	8.55	8.45
157	7.14	9.04	8.19	8.10
158	6.82	8.65	7.83	7.75
159	6.51	8.26	7.47	7.40
160	6.20	7.86	7.11	7.05
161	5.88	7.47	6.75	6.70
162	5.57	7.08	6.39	6.35
163	5.26	6.69	6.03	6.00
164	4.95	6.30	5.68	5.65
165	4.63	5.90	5.32	5.30
166	4.32	5.51	4.96	4.94
167	4.01	5.12	4.61	4.59
168	3.70	4.72	4.25	4.24
169	3.39	4.33	3.90	3.89
170	3.08	3.94	3.54	3.53
171	2.77	3.54	3.19	3.10
172	2.47	3.15	2.83	2.83
173	2.15	2.75	2.48	2.47
174	1.85	2.36	2.12	2.12
175	1.54	1.97	1.77	1.77
176	1.23	1.58	1.41	1.41
177	0.92	1.18	1.06	1.06
178	0.62	0.79	0.71	0.71
179	0.31	0.39	0.35	0.35

GENERAL MAINTENANCE

Avoid using solvents when cleaning plastic parts. Most plastics are susceptible to damage from various types of commercial solvents and may be damaged by their use. Use clean clothes to remove dirt, dust, oil, grease, etc.

SAWDUST

Periodically, sawdust will accumulate under the table and base. This could cause difficulty in the movement of the table when setting up a mitre cut. Frequently blow out or vacuum up the sawdust.

LOWER BLADE GUARD

Do not use the saw without the lower blade guard.

The lower blade guard is attached to the saw for your protection. Should the lower guard become damaged, do not use the saw until the damaged guard has been replaced. Check regularly to make sure the lower guard is working properly. Clean the lower guard of any dust or buildup with a damp cloth.

BATTERIES

The battery pack is equipped with lithium-ion rechargeable batteries. The duration of use from each charge will depend on the type of work performed.

Do not disassemble the battery pack or attempt to replace the batteries. Handling of the batteries, especially when wearing rings and jewellery, could result in a serious burn.

To obtain the longest possible battery life, read and understand the instruction manual.

- It is good practice to unplug the charger and remove the lithium-ion battery pack when not in use.



CAUTION!

If blowing sawdust, wear proper eye protection to keep debris from blowing into eyes.



CAUTION!

- Do not use solvents on the guard. They could make the plastic cloudy and brittle.
- When cleaning the lower guard, disconnect battery pack to avoid unexpected start-up.



WARNING!

- To avoid fire or toxic reaction, never use gasoline, naphtha acetone, lacquer thinner or similar highly volatile solvents to clean the mitre saw.

model no. 055-9035-4 | contact us 1-800-689-9928

FOR LITHIUM-ION BATTERY PACK STORAGE LONGER THAN 30 DAYS:

- Store the lithium-ion battery pack where the temperature is below 26°C (79°F) and free of moisture.
- Store lithium-ion battery packs in a 30–50% charged condition.
- Every six months of storage, fully charge the lithium-ion battery pack.
- Exterior may be cleaned with a cloth or soft non-metallic brush.

BATTERY PACK REMOVAL AND PREPARATION FOR RECYCLING

To preserve natural resources, please recycle or dispose of batteries properly. This product contains lithium-ion batteries. Local, provincial, or federal laws may prohibit disposal of lithium-ion batteries in ordinary trash. Consult your local waste authority for information regarding available recycling and/or disposal options.

To ensure safety and reliability, all repairs should be performed by a qualified service technician.

WASTE DISPOSAL

The product must not be discarded with normal household waste. It must be disposed of properly.



WARNING!


- To avoid serious personal injury, always remove the battery pack from the tool when cleaning or performing any maintenance.
- When servicing, use only identical replacement parts. Use of any other parts may create a hazard or cause product damage. To ensure safety and reliability, all repairs should be performed by a qualified service technician.
- It is not recommended to use compressed dry air to clean the tool. If cleaning with compressed air is the only method available, always wear safety goggles or safety glasses with side shields. If the operation is dusty, also wear a dust mask.
- Do not at any time allow brake fluids, gasoline, petroleum-based products, penetrating oils, etc., to come in contact with plastic parts. Chemicals can damage, weaken or destroy plastic which may result in serious personal injury.



WARNING!

- Upon removal of the battery pack for disposal or recycling, cover the battery pack's terminals with heavy-duty adhesive tape. Do not attempt to destroy or disassemble the battery pack or remove any of its components. Lithium-ion batteries must be recycled or disposed of properly. Also, never touch the terminals with metal objects and/or body parts as a short circuit may result. Keep away from children. Failure to comply with these warnings could result in fire and/or serious injury.

PROBLEM	PROBABLE CAUSE	SUGGESTED CORRECTIVE ACTION
Brake does not stop blade within 10 seconds	Motor brake overheated from use of defective or wrong size blade or rapid ON/OFF cycling.	Use a recommended blade.
	Arbour bolt is loose.	Retighten.
Motor does not start	Battery not installed.	Install the battery. Refer to INSTALLING AND REMOVING BATTERY PACK.
	Battery not charged.	Charge battery.
Angle of cut inaccurate	Mitre table unlocked.	Rotate the mitre locking handle all the way to the right.
	Too much sawdust under table.	Vacuum or blow out dust while wearing eye protection.
Head assembly cannot fully raise or blade guard cannot fully close	Parts failure.	Contact service centre.
	Pivot spring not replaced properly after service.	Contact service centre.
	Sawdust build-up.	Clean and lubricate moving parts.
	Lock-down pin not set properly.	Check, adjust and properly set saw-head locking pin.
Blade binds, jams or burns wood	Improper operation.	See OPERATING INSTRUCTIONS section.
	Dull blade.	Replace or sharpen blade.
	Improper blade.	Replace blade.
Blade hits table	Warped blade.	Replace blade.
	Misalignment.	See "Assembly and adjustments" section.
Saw vibrates or shakes	Saw blade damaged.	Replace blade.
	Saw blade loose.	Tighten black bolt.
	Saw not properly fastened down.	Fasten saw to stand, bench or table.
	Workpiece not properly supported.	Properly support or clamp workpiece.

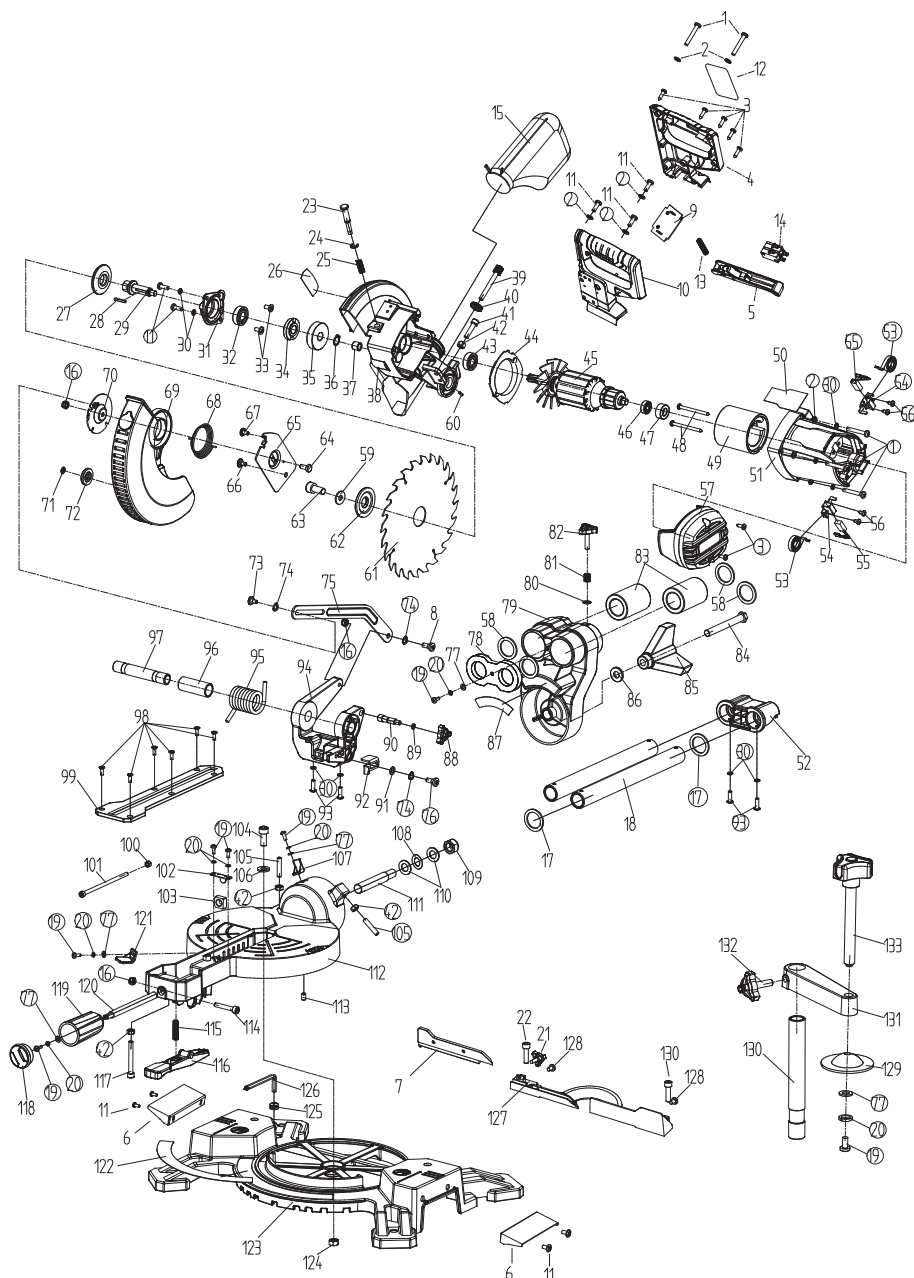

MASTERCRAFT® CORDLESS SINGLE-BEVEL SLIDING COMPOUND MITRE SAW

When servicing the Mastercraft® Cordless Single-bevel Sliding Compound Mitre Saw, use only Mastercraft® replacement parts. The use of any other parts may cause damage to the product. All servicing of the mitre saw should be performed by a qualified service technician. For more information, call the toll-free helpline at 1-800-689-9928.

NO.	Description	Qty.	No.	Description	Qty.
01	Screw	6	26	Brand label	1
02	Washer	10	27	Inner flange	1
03	Self-tapping screw	5	28	Flat key	1
04	Top handle	1	29	Arbour	1
05	Switch trigger	1	30	Spring washer	10
06	Extension table	2	31	Gear box cover	1
07	Sliding fence	1	32	Bearing	1
08	Screw	1	33	Screw	2
09	Electrode plate	1	34	Spindle lock stop plate	1
10	Lower handle	1	35	Gear	1
11	Screw	11	36	Circlip for shaft	1
12	Warning label	1	37	Copper sleeve	1
13	Trigger spring	1	38	Fixed guard	1
14	Micro-switch	1	39	Cuting depth adjustment screw	1
15	Dust bag	1	40	Knurled nut	1
16	Locknut	2	41	Screw	1
17	Buffer ring	2	42	Nut	4
18	Guide rod	2	43	Bearing	1
19	Screw	7	44	Fan guard	1
20	Spring washer	7	45	Rotor	1
21	Knob	1	46	Bearing	1
22	Socket head cap screw	2	47	Rubber sleeve	1
23	Spindle lock pin	1	48	Self-tapping screw	2
24	Circlip	1	49	Stator	1
25	Spindle lock pin spring	1	50	Rating label	1

model no. 055-9035-4 | contact us 1-800-689-9928

NO.	Description	Qty.	No.	Description	Qty.
51	Motor housing	1	76	Shoulder screw	2
52	Guide rod support	1	77	Washer	5
53	Coil spring	2	78	Bearing cover	1
54	Brush holder	2	79	Crank arm	1
55	Carbon brush	2	80	Washer	1
56	Self-tapping screw	4	81	Spring	1
57	Motor housing cover	1	82	Knob	1
58	Wool felt	4	83	Straight bearing	2
59	Washer	1	84	Hex bolt	1
60	Set screw	1	85	Bevel lock handle	1
61	Blade	1	86	Washer	1
62	Outer flange	1	87	Bevel scale	1
63	Socket head cap screw (Left)	1	88	Location pin knob	1
64	Hex bolt	1	89	O-ring	1
65	Guard support	1	90	Location pin	1
66	Tooth screw	1	91	Washer	1
67	Shoulder screw	1	92	Cuting depth stop plate	1
68	Torsional spring	1	93	Half-round head screw	4
69	Moving guard	1	94	Support	1
70	Moving guard cover plate	1	95	Big torsional spring	1
71	Inner tooth washer	1	96	Sleeve	1
72	Moving guard wheel	1	97	Rotary shaft	1
73	Shoulder screw	1	98	Sunk screw	6
74	Wave washer	3	99	Table insert	1
75	Link	1	100	Locknut	1

NO.	Description	Qty.	No.	Description	Qty.
101	Socket head screw	1	118	Mitre lock handle cover	1
102	Lock plate	1	119	Mitre lock handle	1
103	Square nut	1	120	Mitre angle lock rod	1
104	Socket head screw	1	121	Mitre indicator	1
105	Set screw	2	122	Mitre scale	1
106	Washer	3	123	Base	1
107	Bevel indicator	1	124	Locknut	1
108	Wave washer	1	125	Hex key store	1
109	Locknut	1	126	Hex key	1
110	Washer	2	127	Fence	1
111	Rotary shaft	1	128	Screw	2
112	Turntable	1	129	Press plate of clamp	1
113	Set screw	1	130	Clamp rod	1
114	Screw	1	131	Clamp arm	1
115	Location push button spring	1	132	Knob	1
116	Location push button	1	133	Clamp screw knob	1
117	Socket head cap screw	1			

3-YEAR LIMITED WARRANTY

This Mastercraft product is guaranteed for a period of 3 years from the date of original retail purchase against defects in workmanship and materials, except for the following component:

Component A: Accessories, which are guaranteed for a period of 1 year from the date of original retail purchase against defects in workmanship and materials.

Subject to the conditions and limitations described below, this product, if returned to us with proof of purchase within the stated warranty period and if covered under this warranty, will be repaired or replaced (with the same model, or one of equal value or specification), at our option. We will bear the cost of any repair or replacement and any costs of labour relating thereto.

These warranties are subject to the following conditions and limitations:

- a) a bill of sale verifying the purchase and purchase date must be provided;
- b) this warranty will not apply to any product or part thereof which is worn or broken or which has become inoperative due to abuse, misuse, accidental damage, neglect or lack of proper installation, operation or maintenance (as outlined in the applicable owner's manual or operating instructions) or which is being used for industrial, professional, commercial or rental purposes;
- c) this warranty will not apply to normal wear and tear or to expendable parts or accessories that may be supplied with the product that are expected to become inoperative or unusable after a reasonable period of use;
- d) this warranty will not apply to routine maintenance and consumable items such as, but not limited to, fuel, lubricants, vacuum bags, blades, belts, sandpaper, bits, fluids, tune-ups or adjustments;
- e) this warranty will not apply where damage is caused by repairs made or attempted by others (i.e., persons not authorized by the manufacturer);
- f) this warranty will not apply to any product that was sold to the original purchaser as a reconditioned or refurbished product (unless otherwise specified in writing);
- g) this warranty will not apply to any product or part thereof if any part from another manufacturer is installed therein or any repairs or alterations have been made or attempted by unauthorized persons;
- h) this warranty will not apply to normal deterioration of the exterior finish, such as, but not limited to, scratches, dents, paint chips, or to any corrosion or discolouring by heat, abrasive and chemical cleaners; and
- i) this warranty will not apply to component parts sold by and identified as the product of another company, which shall be covered under the product manufacturer's warranty, if any.

Additional limitations

This warranty applies only to the original purchaser and may not be transferred. Neither the retailer nor the manufacturer shall be liable for any other expense, loss or damage, including, without limitation, any indirect, incidental, consequential or exemplary damages arising in connection with the sale, use or inability to use this product.

Notice to consumer

This warranty gives you specific legal rights, and you may have other rights, which may vary from province to province. The provisions contained in this warranty are not intended to limit, modify, take away from, disclaim or exclude any statutory warranties set forth in any applicable provincial or federal legislation.

Made in China

Imported by Mastercraft Canada Toronto, Canada M4S 2B8